

RY Series Wire Rope Hoist (2.8 to 5t)

Owner's Manual

Low Headroom Type: RYL

To Customer

- Thank you for purchasing RY Series Wire Rope Hoist.
- This manual is applied to products of which the month and year of manufacture indicated on the nameplate (see P9) is July 2016 or later.
- Operators and maintenance engineers are requested to read this manual.
- After reading, please keep this manual at hand for future use.

Table of Contents

■ Introduction	2
■ Safety Precautions.....	4
Chapter 1 Handling the Product.....	7
Chapter 2 Inspection	59
Chapter 3 Troubleshooting.....	97
Chapter 4 Appendix.....	117
■ Warranty	136

Introduction

This product is designed and manufactured to lift and lower a load within a normal work environment and to move the lifted load laterally in combination with the traversing device. Movement of a load in a 3D direction such as up/down, forward/backward and right/left is also enabled by combining with a traveling device.

This Owner's Manual is intended for those operating the hoist and maintenance engineers (* personnel with expertise).

Other than this manual, Disassembly/Reassembly Manual is also available for the maintenance engineers who are responsible for the hoist management such as regular inspections and repairs. Please contact our customer center.

* A personnel who is proficient in the structure and working principle of the wire rope hoist and is certified as having adequate knowledge of the product.

■Disclaimer

- KITO shall not be liable for any damage incurred thereof due to natural disaster such as fire, earth quake and thunderbolt, conduct by third party accident, willful conduct or negligence by customer, erroneous use and other use exceeding the operational condition.
- KITO shall not be liable for any incidental damage due to the use or non-use of the product such as the loss of business profit, suspension of business and damage of the lifted load.
- KITO shall not be liable for any damage arising from negligence of the contents in the Owner's Manual and the use of the product exceeding the scope of its specification.
- KITO shall not be liable for any damage arising from the malfunction due to the combination of the product with other devices in which KITO is not concerned.
- KITO shall not be liable to supply the spare parts for the product for which it has passed for 15 years since the discontinue of the product.

■ Restriction on Use

- The product described herein is not designed or manufactured for transporting people. Do not use the product for that purpose.
- The product described herein is designed for the materials handling work such as lifting/lowering and traversing the load under ordinary operational condition. Do not use the product for the work other than materials handling work.
- Do not assemble the product into machinery not for materials handling, as a part of it.

■ Operators

- Read this Owner's Manual and the instruction manuals of related products carefully to fully understand their contents before using and operating the product.
- Be sure to wear the proper clothing and protective equipment when using and operating the product.
- Hoists and cranes must be operated by a person who is proficient in the use of them.

Safety Precautions

Improper use of the hoist may cause serious accidents resulting in death or severe injury such as drop of lifted load. Read this Owner's Manual carefully before installation, operation and maintenance. Use the product after understanding the product knowledge, safety information and precautions.

This Owner's Manual classifies the safety information and precautions into three categories of "DANGER", "WARNING", and "CAUTION".

Also read the instruction manual of the device associated with the hoist (option, crane, etc.), and follow the described contents.

Description of Signal Words



DANGER

Indicates an imminently hazardous situation which, if not avoided, will result in death or severe injury.



WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or severe injury.



CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

Further, the event described in CAUTION may result in serious accident depending on the situation. All of these items describe important matters. Please follow the instruction.

After reading, please keep this manual at hand for future use by the user.

Description of Safety Symbols



⊘ means "Prohibited" or "You must not do".

Prohibited action is shown in the circle or described near the circle with words and figures.

Prohibited This Owner's Manual uses ⊘ as the general prohibition.



ⓘ means "Mandatory Action" or "You must do".

Required action is shown in the circle or described near the circle with words and figures.

Mandatory This Owner's Manual uses ⓘ as the general instruction.

■ General Matters on Handling and Control

WARNING



Prohibited

- **This product shall not be disassembled and repaired by personnel other than maintenance engineers.**
Failure to comply with this instruction may limit the normal functions and performance of the hoist, as well as causing the hoist to malfunction or break down, triggering a serious accident.
Other than this manual, Disassembly/Assembly Manual and Parts List are provided for the maintenance engineers. Perform the disassembling and repair of the hoist by the maintenance engineer in accordance with the Disassembly/Assembly Manual and Parts List, or contact KITO.
- **Do not modify the product and its accessories.**
Failure to comply with this instruction may limit the normal functions and performance of the product due to alteration, as well as causing the product to malfunction or break down, triggering a serious accident. Altered products are not included in the warranty.



Mandatory

- **Understand the contents of the Owner's Manual sufficiently.**
- **Warning label is affixed to each part of the product. Follow the instruction described in the warning label.**
Failure to comply with this instruction may seriously affect physical health of the user, as well as causing an unexpected serious accident.
- **Operation, maintenance, repair, and inspection of the hoist must be done by a person who is 18 years old and above and is mentally and physically well.**
- **Any person under the influence of alcohol or prohibited drugs, or has taken medicine with sleep-inducing effects must not install, operate or inspect the hoist.**
Failure to comply with this instruction may cause a serious accident due to incorrect operation.
- **Use corrected/inspected inspection tools, measuring devices, and other tools.**
Failure to comply with this instruction will cause unreliable inspection, checkup, and disassembly/assembly of the hoist, and may limit the normal functions and performance of the hoist, as well as causing the hoist to malfunction or break down, triggering a serious accident.

CAUTION



Prohibited

- **Do not drag or drop the product when carrying.**
The hoist may be broken or damaged, and prevent normal operation.



Mandatory

- **When discarding the product, disassemble it so that it cannot to be used and discard in accordance with the ordinances of local government or the rules specified by the business entity.**
Ask the local government or the relevant section for the details. Refer to "Disassembly/Assembly Manual" for disassembling, or contact KITO. (This product uses oil. We prepare MSDS (Materials Safety Data Sheet) for the oil. Contact KITO for it.)
- **The user of the hoist must conduct a daily inspection before use. Regular inspections must be done (frequent and periodic) by maintenance engineers or else KITO must be contacted.**
Failure to conduct inspections may limit the normal functions and performance of the hoist and the safe use of the hoist, triggering a serious accident.
- **Keep the regular inspection records.**
With inspection records, you can easily grasp the condition of the hoist such as its functions and performance, as well as the replacement cycle of the parts to maintain the hoist, which can be used in the maintenance plan of the hoist.

Chapter 1


Handling the Product

1-1 Opening the Package	8	1-10-2 Operation	46
1-1-1 Checking the Product.....	8	1-10-3 How to Sling the Load Properly	51
1-2 Nameplates and Product Type	9	1-10-4 How to Suppress the Swinging of a Load	51
1-2-1 Nameplate Indication	9	1-10-5 Precautions After Work	52
1-2-2 Explanation on Product Type	9	1-11 Daily Inspection	53
1-3 Recording Initial Values	10	1-11-1 Appearance	53
1-3-1 Recording the Product No.	10	1-11-2 Wire Rope	54
1-3-2 Recording the Hook Dimensions	10	1-11-3 Hook Block.....	55
1-3-3 Checking and Recording Wire Rope Diameters ...	10	1-11-4 Push Button Switch	56
1-4 Names of Each Product Part	11	1-11-5 Function and Performance	57
1-4-1 Low Headroom Type	11		
1-5 Product Specification and Operational Environment	12		
1-5-1 Standard Specification	12		
1-5-2 Operational Environment	13		
1-6 Assembling Parts and Preparing for Installation	14		
1-6-1 Checking Power and Power Cable	14		
1-6-2 Assembling Parts	16		
1-6-3 Checking Quantity of Grease in Reduction Gear ...	20		
1-6-4 Oiling the Wire Rope	21		
1-6-5 Adjusting Distance Between Frames of Traversing Device	22		
1-6-6 Adjusting Traverse Brake	25		
1-7 Installation	26		
1-7-1 Checking Installation Place	27		
1-7-2 Installing Hoist on Rail	28		
1-8 Setting Upper/Lower Limit Stop Device	31		
1-9 Adjusting Overload Limiter (OLL)	34		
1-9-1 Explanation on Inverter	35		
1-9-2 Disabling/Adjusting the OLL Operation	36		
1-9-3 Check after Installation	40		
1-10 How to Use	41		
1-10-1 How to Operate the Push Button Switches	43		

1-1 Opening the Package

1-1-1 Checking the Product


- Make sure that the indication on the package and the product in the package coincide with your order.
- Make sure the Type marked on the package label or main unit nameplate coincides with your order.
- The following items are contained in the package:

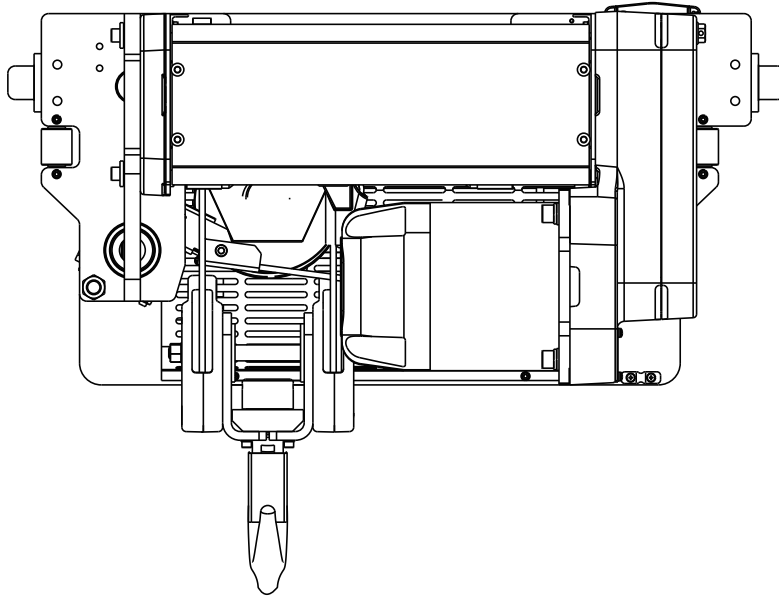


(1) Wire Rope Hoist main unit




(2) Push Button Switch Complete Set

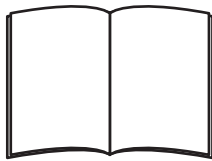

(3) Owner's Manual



(4) Parts List




(5) Test Report

* The Test Report (5) will be included in the package if you request it when placing an order.

- Make sure that the product is not deformed and damaged due to vibration or collapse of the package during transportation.

1-2 Nameplates and Product Type

1-2-1 Nameplate Indication

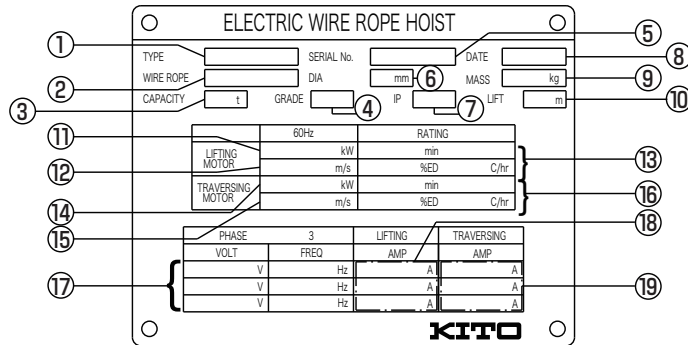


NOTE) Illustration is only a sample. Displayed contents (values) on the actual nameplate may differ.

①	TYPE	The type of the product. (Product code)	⑪	The output power of the lifting motor.
②	WIRE ROPE	The structure of the wire rope.	⑫	The lifting speed of the product.
③	CAPACITY	The rated load of the product. The capacity is the maximum mass that can be loaded on the product, indicating the mass of a load without the weight of the hook block.	⑬	The rating of the lifting motor.
④	GRADE	The grade (classification) of the wire rope hoist specified by ISO or JIS standard.	⑭	The output power of the traversing motor.
⑤	SERIAL No.	The serial number of the product.	⑮	The traversing speed of the product.
⑥	DIA	The diameter of the wire rope.	⑯	The rating of the traversing motor.
⑦	IP	The international protection code of the product.	⑰	The source voltage of the product.
⑧	DATE	The month and year of manufacture of the product.	⑱	The rated current of the lifting motor.
⑨	MASS	The weight of the product.	⑲	The rated current of the traversing motor.
⑩	LIFT	The lifting range by which the product can lift the load.		

1-2-2 Explanation on Product Type

RYLA028ISIS06

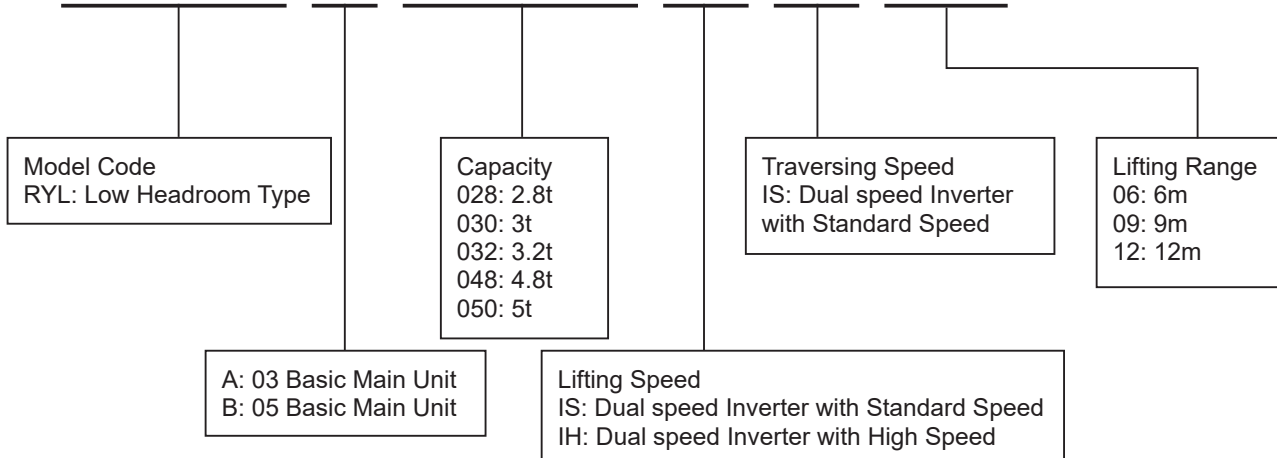

1-3 Recording Initial Values

1-3-1 Recording the Product No.

Fill in the table below with product's product type, serial no., date of purchase and the name of the sales shop where you purchased the product, described in the product nameplate.


* When requesting repair or ordering a consumable part, please inform us of the information above together.

Item	Product information
Product type	
Serial No.	
Date of purchase	
Name of the sales shop	

1-3-2 Recording the Hook Dimensions

When opening the package, fill in the table in the right with the dimension "a" between punch marks on the Hook, the width of the hook "b" and the thickness of the hook "c". (These values are used for checking.)


Dimensional position	Measured value
a	(mm)
b	(mm)
c	(mm)

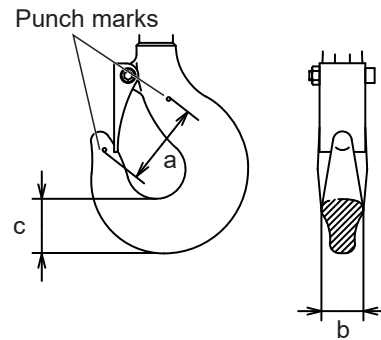

1-3-3 Checking and Recording Wire Rope Diameters



For maintenance and management, enter the wire rope diameters (average of measured values at three points) in the table below when opening the package. (These values are used for checking.)

Capacity	Wire rope		
	Configuration	d: Standard diameter	Measured value (Average of three points)
2.8t/3t/3.2t	6xFi (29) B type	8	
4.8t/5t	6 x P·WS (26)	8	

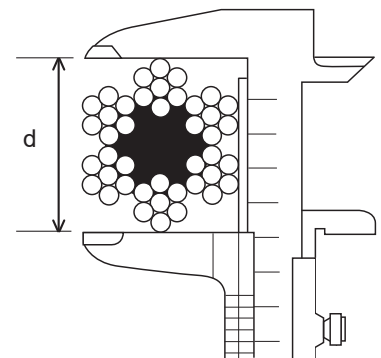

1-4 Names of Each Product Part

■1-4-1 Low Headroom Type

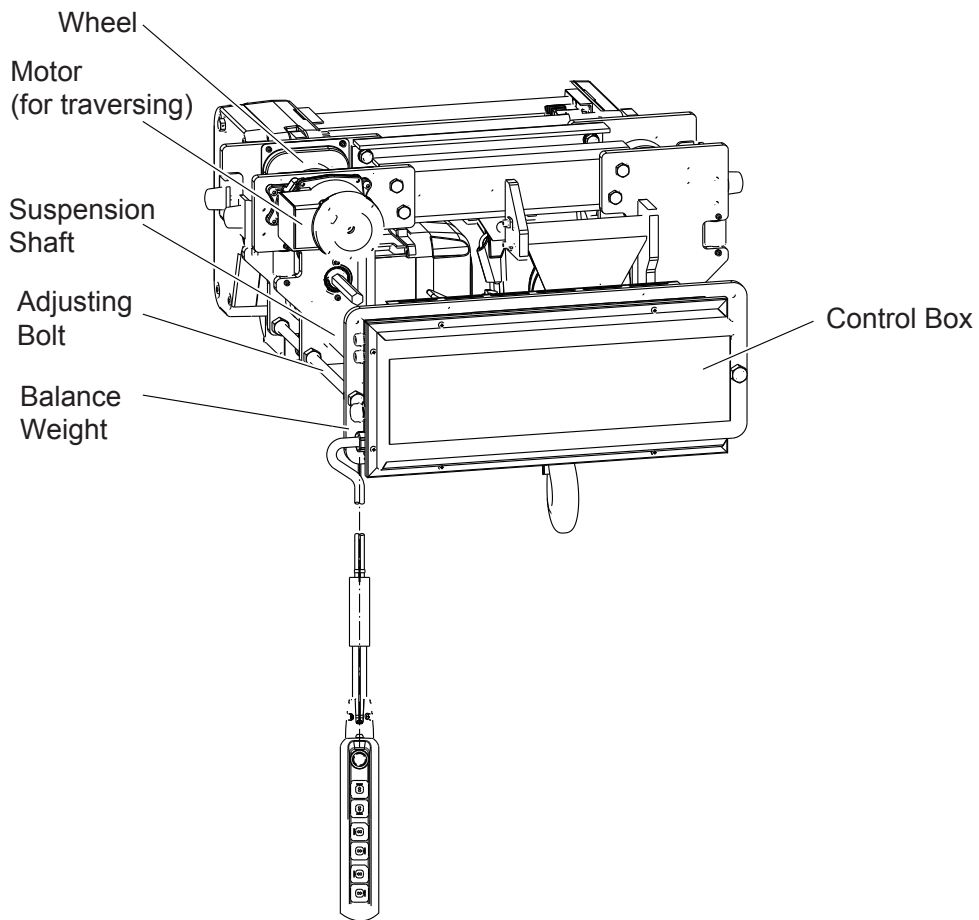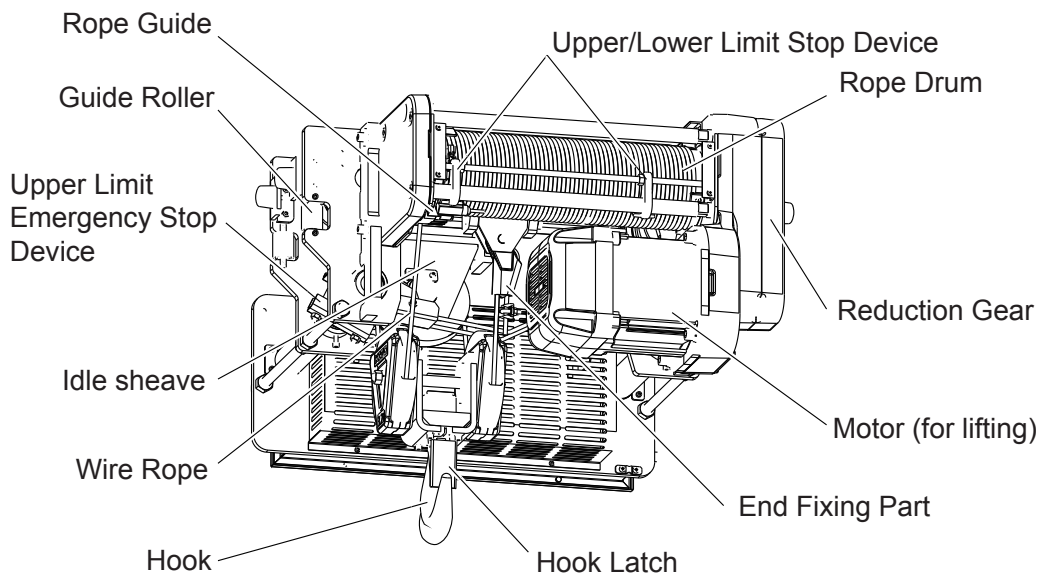

1-5 Product Specification and Operational Environment

The operational environment of the wire rope hoist is as follows.

■1-5-1 Standard Specification

Product Type		Low Headroom	
Capacity		2.8t/3t/3.2t	4.8t/5t
Wire Rope	Structure Code	6xFi(29) B type	6xP/WS(26)
	Size (mm)	φ8	
Speed	Lifting	Standard speed: 5-0.8m/min High speed: 8-1.3m/min * Provided with the light-load high-speed function *1	
	Traversing	20-3.3m/min	
Motor	Intermittent ratings (%ED)	Lifting: 60 (40/20), Traversing: 30 (20/10)	
	Insulation Class	Lifting: F type, Traversing: F type	
Protection	Main Unit	IP44	
	Push Button Switch	IP65	
Operation		7-Push Button Switch Operation (with an emergency stop function) 5-Push Button Switch Operation (with an emergency stop function)	
Power Supply Method		Power supply through cabtyre cable	
Color		Yellow: KITO Yellow	
		Gray: KITO metallic gray	
Noise Level		85dB (A) or less	
Lifting Braking Capacity		150% of the capacity or more	

*1 The light-load high-speed function is used to lift up and down a load which is less than 25% of the capacity at a speed that is 1.5 times faster than that in the table above. Please refer to the Inverter Manual when this function is required to be turned off.

■1-5-2 Operational Environment

Installation site: Indoors

Traverse rail: I-section, H-section, No gradient

Ambient temperature: -20°C to +40°C

Humidity: 90%RH or less (no condensation)

Operational atmosphere: Under standard environment

A place with no oil mist, corrosive gases, inflammable gases, explosive gases, volatile gases, and vapor

Do not use the product in a place exposed to organic solvent or direct sunlight, or a place with a plenty of powder and dust or considerable amount of acids and salts.

* If you need to use the product in a special environment, please consult with KITO.

NOTE

When installing the product in a place exposed to the weather, such as a place directly subject to wind, rain, or snow, or an outdoor area, prepare a shelter with roofs. When not use, store the product so that it prevails against wind, rain, and snow.

1-6 Assembling Parts and Preparing for Installation

⚠ WARNING



Prohibited

- **Only maintenance engineers or the personnel with expertise are allowed to assemble and disassemble the hoist.**

Failure to comply with this instruction may make it impossible to properly perform inspection/checking and disassembling/assembling of the hoist, and may not only result in failure to obtain normal function and performance of the hoist, but may also lead to serious accidents.

■ 1-6-1 Checking Power and Power Cable

■ Checking the Power

⚠ WARNING



Mandatory

- **Check that the rating of the breaker satisfies the specification required by the hoist.**
- **Check that the source voltage satisfies the rated voltage of the hoist.**

Failure to comply with this instruction may cause serious accidents resulting in death or severe injury.

Capacity	Product code	Breaker capacity (A)	
		200V class	400V class
2.8t	RYLA028ISIS06/09/12	30	15
	RYLA028IHIS06/09/12	40	20
3t	RYLA030ISIS06/09/12	30	15
	RYLA030IHIS06/09/12	40	20
3.2t	RYLA032ISIS06/09/12	30	15
	RYLA032IHIS06/09/12	40	20
4.8t	RyLB048ISIS06/09/12	40	20
	RyLB048IHIS06/09/12	60	30
5t	RyLB050ISIS06/09/12	40	20
	RyLB050IHIS06/09/12	60	30

■ Checking the Power Cable

⚠ WARNING



Prohibited

- **Do not use the cable other than the power cable attached to the main unit or than a cable of proper size.**

Failure to comply with this instruction may lead to serious accidents such as fire due to failure of the hoist.



Mandatory

- **Satisfy the maximum permissible length and core cross section of the Power Cable.**

Failure to comply with this instruction causes bodily injury or loss of property.

Refer to the following table for the permissible length and the size of the standard Power Cable.

When using the cable of the size other than those described in the table, decide the cable length using the following formula.

$$\text{Permissible length (m)} = \frac{1000}{30.8} \times \frac{\text{Cross section of one core (mm}^2\text{)} \times \text{Rated voltage (V)} \times 0.02}{\text{Total current (A)}}$$

Capacity	Product code	Permissible wire length (m)												
		200V class			400V class									
		Wire size (mm ²)	220V	230V	Wire size (mm ²)	380V	415V	380V	440V	460V				
			60Hz			50Hz		60Hz						
2.8t/3t/3.2t	RYLA028ISIS06/09/12	5.5 (8)	40 (58)	41 (60)	2 (3.5)	47 (83)	52 (91)	47 (83)	55 (97)	58 (101)				
	RYLA030ISIS06/09/12		8 (14)	36 (64)		38 (67)	3.5 (5.5)	54 (85)	59 (93)	54 (85)	63 (99)	66 (103)		
	RYLA032ISIS06/09/12			36 (63)		37 (66)		53 (84)	58 (92)	53 (84)	62 (98)	65 (102)		
	RYLA028IHIS06/09/12	14 (22)	41 (65)	43 (68)	5.5 (8)	54 (78)	59 (86)	54 (78)	62 (91)	65 (95)				
	RYLA030IHIS06/09/12		4.8t/5t	RYLB048ISIS06/09/12		14 (22)	41 (65)	43 (68)	5.5 (8)	54 (78)	59 (86)	54 (78)	62 (91)	65 (95)
	RYLB050ISIS06/09/12			RYLB048IHIS06/09/12			RYLB050IHIS06/09/12							

Assembling Parts and Preparing for Installation (Continued)


■ 1-6-2 Assembling Parts

After opening the package of the product, the Power Cable and the Push Button Switch Cord must be assembled to the hoist. Follow the procedure described below to assemble them properly.

■ Connecting Power Cable

- 1) Identify the Power Cable connecting position on the side face of the Control Box.


Power Cable Connecting Position

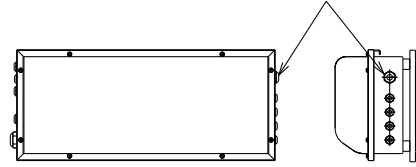


- 2) Process the lead wire of the power cable to be wired.
(When using your own power cable, process the end of the lead wire.)

• Processing the end of power line

- 1) Cut the tip of the lead wire (4 wires).

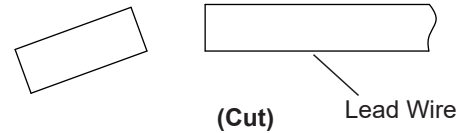


- 2) Using the special tool, strip the coat.

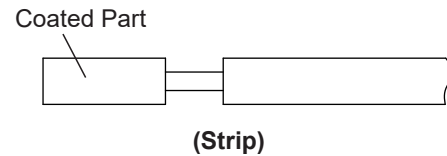

- 3) Cover the part that is stripped of the coat in 2) with a terminal for lead wire (round terminal) listed in the table on the next page.

- 4) Using the special tool, connect the round terminal to the cable by crimping.

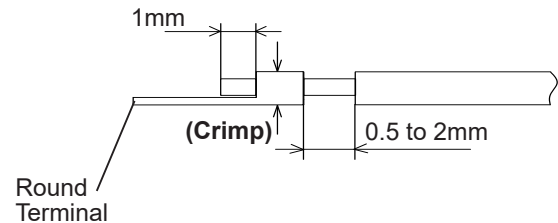


		2.8t/3t/3.2t				4.8t/5t			
		Standard speed		High speed		Standard speed		High speed	
Voltage Class		200V	400V	200V	400V	200V	400V	200V	400V
Cable size (mm ²)		VCT-C:5.5	VCT-C:2	VCT-C:8	VCT-C:3.5	VCT-C:3.5	VCT-C:22	VCT-C:14	VCT-C:5.5
Terminal manufacturer		Made in Japan: J.S.T. Mfg. Co., Ltd.							
Power line	Terminal type number	JST:5.5-4	JST:R2-4	JST:8-4	JST:3.5-R4	JST:8-4	JST:3.5-R4	JST:14-6	JST:R5.5-5
Earth wire	Terminal type number	JST:5.5-4	JST:R2-4	JST:8-5	JST:3.5-R5	JST:8-5	JST:3.5-R5	JST:14-6	JST:R5.5-6
Cable Strip length (mm)		330	330	720	720	720	720	780	780


• Wiring and fixing the cable using the cable gland

1) Open the cover of the Control Box.


2) Remove the Cable Gland attached to the Control Box or the Power Cable, and fix the nut and the Main Unit to the Control Box. If the Cable Gland is attached to the Control Box, remove the Cap.

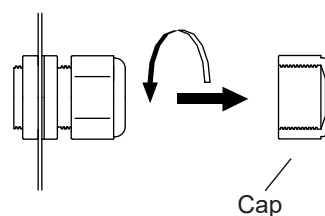

3) Insert the Power Cable into the Cap.

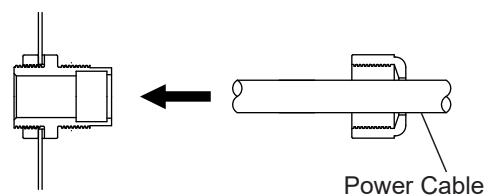

4) Wire the power line (3 wires) attached with the terminals and the earth wire by crimping at the ends of the lead wires, as shown in the drawing.

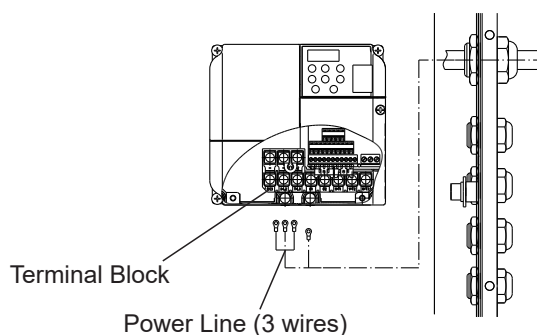

⚠ CAUTION




Mandatory

- **The connecting position of the lead wires differs depending on the model. Check the wiring diagram, and attach the terminal to an appropriate position by checking the connection diagram.**

Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause malfunction and failure of the hoist and may lead to serious accidents.

Assembling Parts and Preparing for Installation (Continued)

- 5) Tighten the Cap to fix the Power Cable.

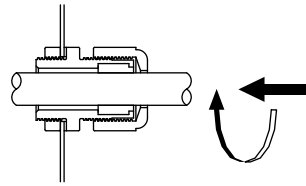

- 6) Pull the Power Cable to check that it does not come off.

- 7) Close the cover of the Control Box, and lock it with a pan head screw.

CAUTION



Mandatory


- The connecting position of the lead wires differs depending on the model. Check the wiring diagram, and attach the terminal to an appropriate position by checking the connection diagram.

Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause malfunction and failure of the hoist and may lead to serious accidents.

■ Connecting Push Button Switch Cord


Connect the Push Button Switch Cord to the side face of the Control Box. (It may be already connected at the time of shipping. If not connected, or when replacing parts, perform connection, referring to the following procedure.)

- 1) Identify the connecting position of the Push Button Switch Cord on the side face of the Control Box.

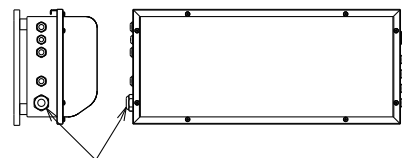


Connecting Position of Push Button Switch Cord

- 2) Remove the Cap of the Cable Gland attached to the Control Box.

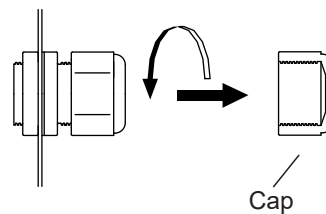


Cap

- 3) Pass the Push Button Switch Cord through the Cap and tighten the Cap.

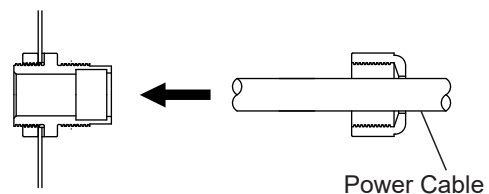

Power Cable

- 4) Attach the terminal to the lead wire end, and wire them to the two terminal blocks as shown in the figure on the right.

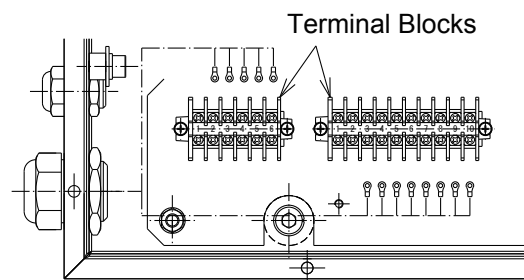

- 5) Pull the Push Button Switch Cord to check that it does not come off.
- 6) Close the cover of the Control Box, and lock it with a pan head screw.

⚠ CAUTION




Mandatory

- The connecting position of the lead wires differs depending on the model. Check the wiring diagram, and attach the terminal to an appropriate position by checking the connection diagram.

Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause malfunction and failure of the hoist and may lead to serious accidents.

- 7) Fixing the Protection Wire (Push Button Switch Wire)
- Pass the Protection Wire through the Set Plate.
 - Fix the Set Plate to the Balance Weight with the Socket Bolt.
- Tightening torque: 2 N•m

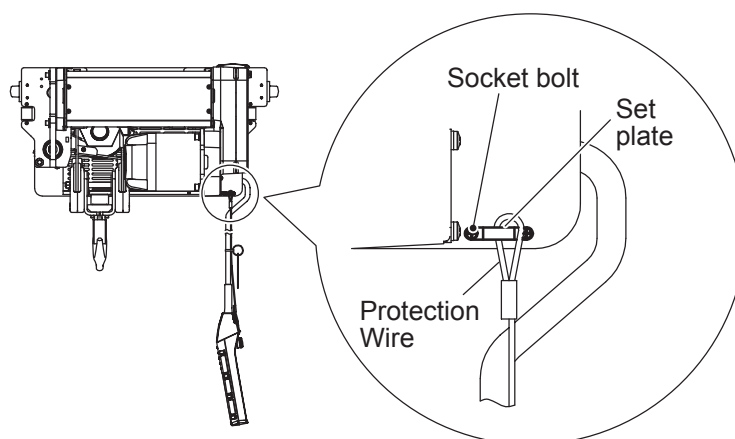

Assembling Parts and Preparing for Installation (Continued)

■ 1-6-3 Checking Quantity of Grease in Reduction Gear

Inside of the Gear Case is filled with grease at the shipping. There is no need to check before installation, but if the grease is found to be insufficient at a regular inspection, please add the grease.

⚠ WARNING



Mandatory

- **Use genuine grease for the reduction gear.**

Use of the grease other than the genuine grease (including mixed use) may result in reduction in durability, causing serious accidents resulting in death or severe injury such as drop of the lifted load.


Grease for the reduction gear

Nameplate: NIPPON OIL Epinoc AP (N) 0

Classification: Grease

JIS K2220-1984 2 types of grease for
central lubrication

Specified quantity: 2500 g

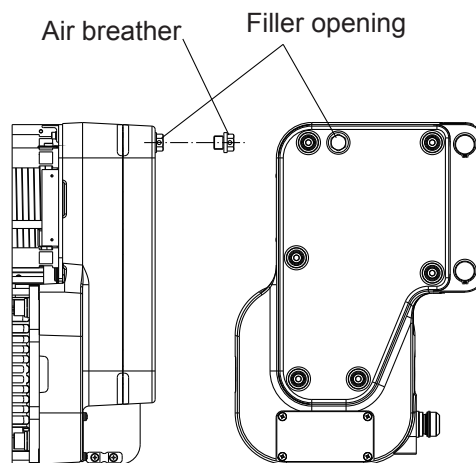

■ 1-6-4 Oiling the Wire Rope

⚠ CAUTION



Prohibited


- Do not carry out the grease applying work in the place near fire or sparks. Otherwise it will result in fire.



Mandatory

- Be sure to apply grease to the Wire Rope. Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause failure of the hoist and may lead to serious accidents.

Application of grease greatly influences on the life of the Wire Rope. Apply appropriate amount of grease (so that no lumps of grease remain on the surface) to the Wire Rope.

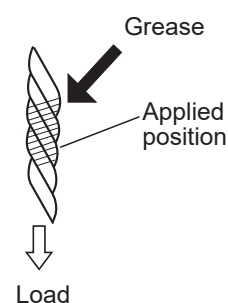


1) Remove foreign matter, rust, and water droplets attached to the Wire Rope.

2) Apply appropriate amount of grease to the Wire Rope.

- Use exclusive grease for the wire rope.
- Apply the grease particularly to the part frequently meshes with the Hook Sheave and the part repeatedly passing through the Rope Guide.

3) After applying the grease, lift/lower the hoist under no-load condition to spread the grease on the Wire Rope.

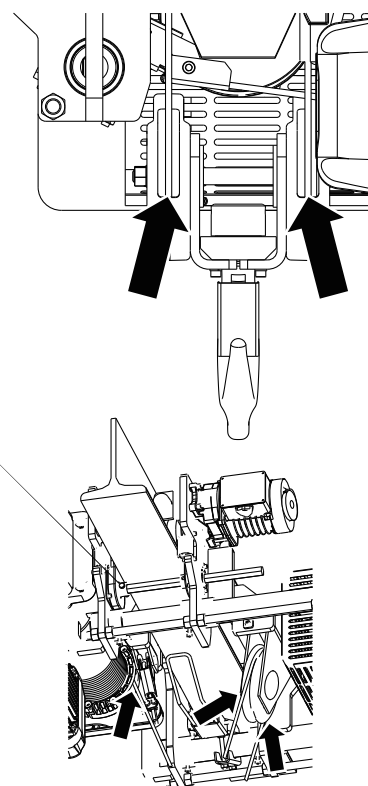

Assembling Parts and Preparing for Installation (Continued)

1-6-5 Adjusting Distance Between Frames of Traversing Device

Checking the Applicable Rail Width

The traverse rails in the ranges shown in the following table can be installed.

Among the I-section steel beams, the beam sizes listed in the following table are applicable.

For the Traversing Device, select and install the rail having a size that satisfies the following conditions.

- The rail width B falls in one of the ranges shown in the following table.

Capacity	Applicable Rail Width Range		
2.8t/3t/3.2t	125 - 175mm	176 - 350mm	351 - 500mm
4.8t/5t			


We will supply a product conforming to the rail width that the customer specifies when placing an order.

Since the length of the Suspension Shaft differs depending on the specified rail width, the supplied product cannot be installed to a rail having a width that falls in another one in the three ranges shown in the above table.

- The dimension of height H of the rail is 250mm or more.
- The thickness t of the flange is 33mm or less.

When installing the Traversing Device on the rail, the width between the Frames of Traversing Device must be adjusted in accordance with the rail width to be used. To adjust the width, change the position of the adjusting bolts.

Improper adjustment of this width will cause the Traversing Device to go off the rail or make a snaking motion.

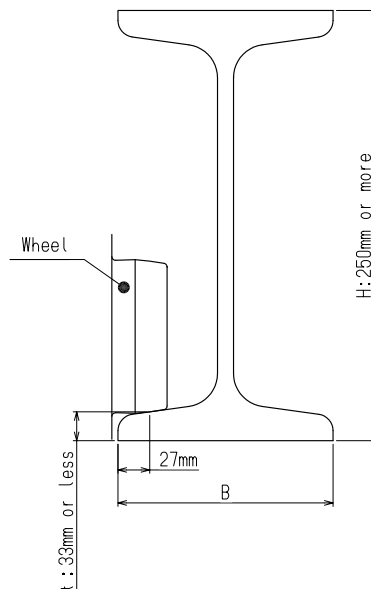

! WARNING




Mandatory


- The traverse rail may require to be reinforced depending on its size and shape. Select a rail having a sufficient strength.

Failure to comply with this instruction may lead to serious accidents resulting in death or severe injury such as drop of the hoist or the lifted load.


Adjusting Distance between Frames of Traversing Device

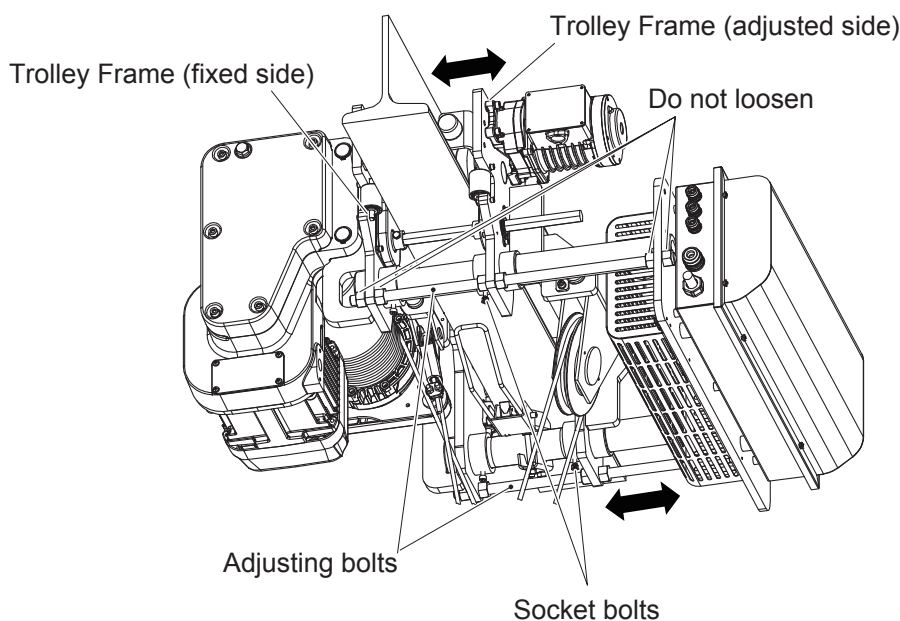

- 1) Loosen the Socket Bolt attached to the lower side of the boss of the Trolley Frame (adjusted side).

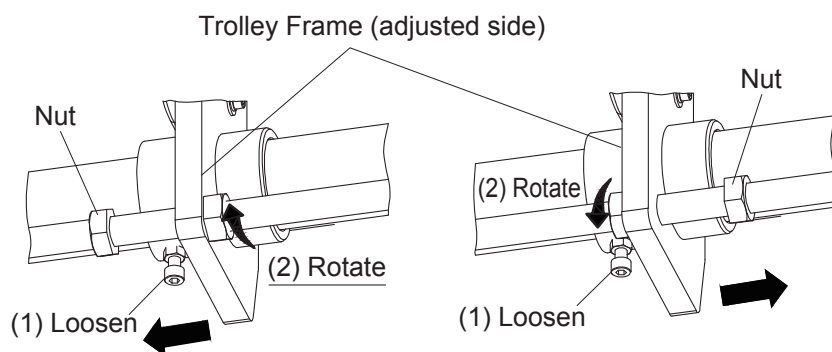

- 2) Rotate the nut of the Adjusting Bolt to adjust the distance of the Trolley Frames (A dimension) by using the applicable rail width as a reference. (Refer to the figures for the movement directions.)

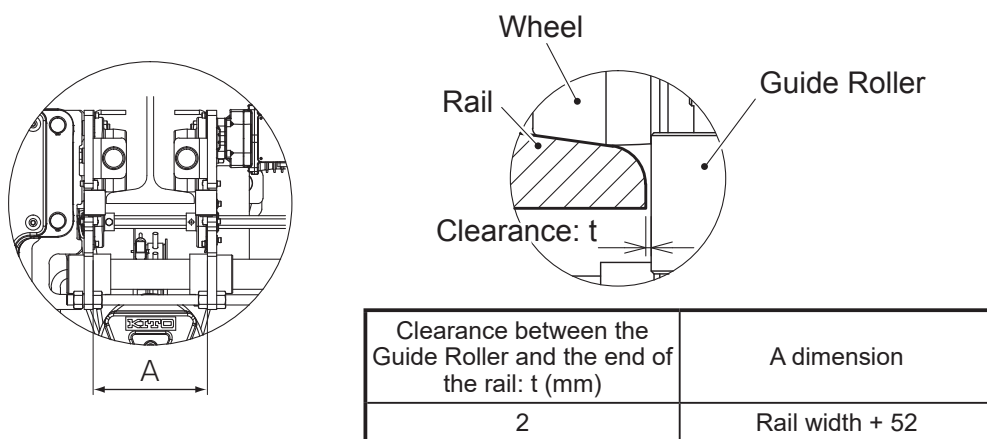

Ex: When the hoist with capacity of 5t is mounted on the rail of 150 mm width, adjusting the A dimension to 202 mm ($A=150 + 52 = 202$ mm) enables the Clearance to be approx. 2 mm.

- 3) After adjusting the interval of the Trolley Frames, fasten the Socket Bolt that was loosened in the step 1) and tighten the nut of the adjusting bolt. Tightening torque for the socket bolt: 9 N•m, for the nut of the adjusting bolt: 150 N•m


Assembling Parts and Preparing for Installation (Continued)

■ Adjusting the Location of Upper Limit Emergency Stop Device (Limit Switch)

The Upper Limit Emergency Stop Device must be attached to a location where the Main Unit and the Hook Block are prevented from interfering with each other.

The Upper Limit Emergency Stop Device operates when the Upper/Lower Limit Stop Device does not work due to failure, improper setting, or abnormal operation of the Upper/Lower Limit Stop Device. The load can be lowered after the Upper Limit Emergency Stop Device has operated.

- 1) Because the Upper Limit Emergency Stop Device has been attached to the Suspension Shaft in advance, the position must be adjusted after installing the hoist on the rail.
- 2) Adjust the position of the Upper Limit Emergency Stop Device to the center of the Traverse Rail or the position where the center of the Hook Block and that of the lever can be coincident, and tighten the nuts shown below for fixing. Tightening torque for the nuts: 28 N•m
- 3) Fix the angle of the lever at the position where the cut of the frame can be horizontal.

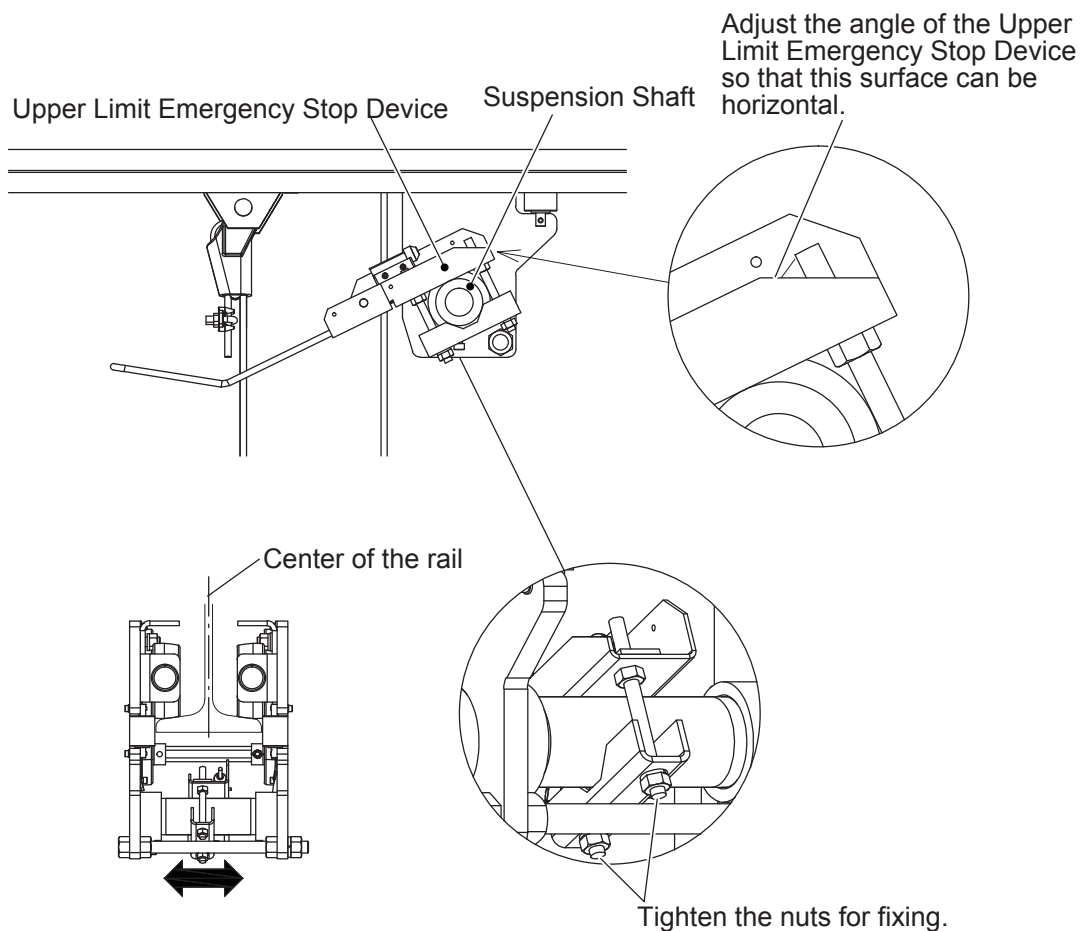

1-6-6 Adjusting Traverse Brake

⚠ WARNING



Prohibited

- Do not set the brake torque to a value beyond the setting range.

Failure to comply with this instruction may cause a rapid stop or large slip, leading to serious accidents.




Mandatory

- Check that the locknut is not loose after changing or adjusting the brake torque.

Failure to comply with this instruction may cause the hoist to overrun, leading to serious accidents.

The Traverse Brake is set and adjusted at shipment so that an optimal brake force is obtained. The brake torque can be changed in accordance with the user's status of use.



The brake torque can be changed by changing the projection amount (Dimension A) of the Adjusting Bolt on the back of the traversing motor.

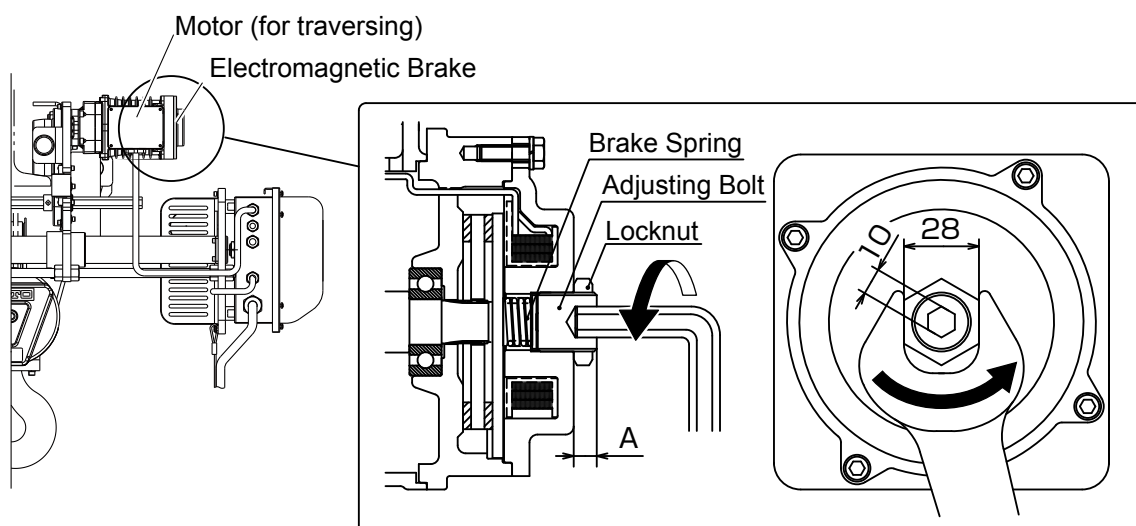

1) Loosen the locknut with a spanner (28).

2) Loosen the Adjusting Bolt with a hexagonal wrench (10). Then, find in the right table the Dimension A corresponding to the brake torque to be set, and adjust the projection amount of the Adjusting Bolt to the Dimension A.

3) Tighten the locknut to lock the Adjusting Bolt, while holding the Adjusting Bolt to prevent it from rotating.

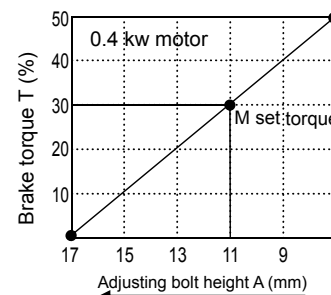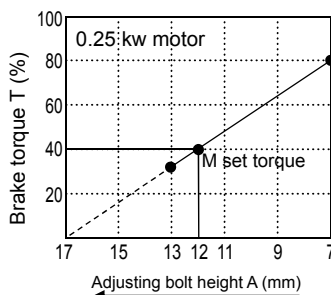

Default settings of the brake torque

Traversing motor output (kw)	Brake torque T (%)	Adjusting bolt height A (mm)
0.25	40	12
0.4	30	11

1-7 Installation

⚠ WARNING




Prohibited

- Installation (removal) of the hoist must be carried out by special installer or by personnel with expertise.**
Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause malfunction and failure of the hoist and may lead to serious accidents.
Consult with the sales shop or KITO for installation, or consign the installation work to special installer or personnel with expertise.
- Do not install the hoist at a place constantly exposed to rain or water or in the environment different from "■1-5-2 Operational Environment" (P13).**
Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause malfunction and failure of the hoist and may lead to serious accidents.
- Do not install the hoist in the motion space of other hoists or any other moving equipment (facilities).**
Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause malfunction and failure of the hoist and may lead to serious accidents.
- Do not install the product at a place where the Main Unit of the hoist interferes with something or is made immovable.**
Failure to comply with this instruction may cause physical damage to equipment and machines including the hoist.



Mandatory


- When installing or removing the hoist, follow the instructions in Owner's Manual.**
Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause malfunction of the hoist and may lead to serious accidents.
- Carry out the work for grounding (earthing) and installation of earth leakage breaker.**
Failure to comply with this instruction can lead to electric leak, which may seriously affect the health of a human body.
Both works must be done by a certified electrical worker.
- When the installation is completed, carry out "■1-9-3 Check after Installation" (P40)**
Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause malfunction of the hoist and may lead to serious accidents.
- Connect the power after all installation works have been completed and just before the operation check. There is a danger of electric shock when accidentally touching a current-carrying part.**
Failure to comply with this instruction can lead to electric shock, which may seriously affect the health of a human body.
- Mount the stopper at the both ends of the traverse rail for trolley.**
<Figure on the right>
Failure to comply with this instruction may cause the hoist to go off the rail or overrun, leading to serious accidents.
- Do not use the hoist by building it into a part of your own traversing device without using the KITO's standard traversing device.**
- Ensure the strength of the structure to which the product is installed so that the hoist can operate without trouble when a load of 125% of its capacity is suspended.**
Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also lead to serious accidents such as drop of the load.
- Connect the Power Cable to the power of rated voltage.**
Failure to comply with this instruction may lead to serious accidents such as fire due to failure of the hoist.

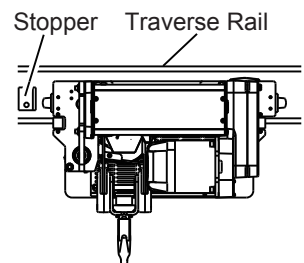

■ Connecting Power and Power Cable

When connecting the Power Cable to the power, connect the cable in accordance with the following instructions.

- Connect the hoist to the power through a breaker.
- Connect the cable in accordance with the phases.
- Carry out earthing work to ground the earth wire.
- Use the correct breaker and Power Cable referring to "■1-6-1 Checking Power and Power Cable" (P14) for the breaker capacity, Power Cable length and its size.

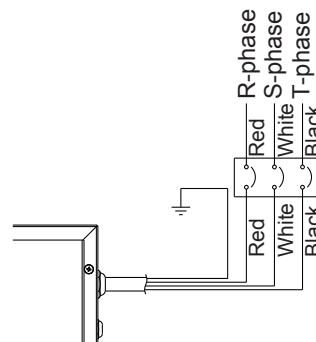

■ 1-7-1 Checking Installation Place

⚠ WARNING



Mandatory

- **Make sure that the strength of the structure is sufficient to install the hoist.**
Failure to comply with this instruction may cause physical damage to equipment and machines including the hoist.
- **Carry out the installation work after securing the stable foothold.**
Failure to comply with this instruction can seriously affect the health of user's body, and may lead to unexpected serious accidents.

Notice before installation

Due to vibration or other impacts during transportation of the product, the rope wound on the Rope Drum may be loosened in some cases. If the product is used as it is, the Wire Rope may float away from of the groove of the Rope Drum and correct winding cannot be performed, resulting in damage to the Rope Guide, Wire Rope, Rope Drum and other parts.

When opening the package, check for slack of the Wire Rope, and if there is, remove the slack before installing the product.

<Procedure to remove slack of the Wire Rope>

- 1) Pull the load side of the Wire Rope wound on the Rope Drum to remove slack and confirm that the Wire Rope is settled in the groove of the Rope Drum.
- 2) If slack still remains, move the loosened part of the Wire Rope toward the Rope Guide side so as to gradually remove the slack. When the slack reaches the Rope Guide, pull the Wire Rope to completely remove the slack.
- 3) If slack cannot be removed by the steps above, detach the Rope Guide and remove the slack and entanglement of the Wire Rope.

* For the procedure of installation and removal of the Rope Guide, see "2-3-9 Wire Rope Replacement Procedure" (P77).

Installation (Continued)

■ 1-7-2 Installing Hoist on Rail

■ Where to Install

⚠ WARNING



Mandatory

- **Make sure that the structure on which to install the hoist has a sufficient strength.**
Failure to comply with this instruction may cause physical damage to equipment and machines including the hoist.



- **Start installation work after securing a good foothold.**
Failure to comply with this instruction can seriously affect the health of user's body, and may lead to unexpected serious accidents.

- **Depending on the size and shape of the Traverse Rail, reinforcement may be necessary for the rail. Be sure to select a rail having a sufficient strength.**
Failure to comply with this instruction may lead to serious accidents resulting in death or severe injury such as drop of the hoist or the lifted load.


■ Installing Hoist on Rail

● Preparation for installation

- 1) Remove the Drum Cover.
- 2) Put the Fiber Slings on the Support Shaft.
- 3) Put the Fiber Slings on the Suspension Shaft.

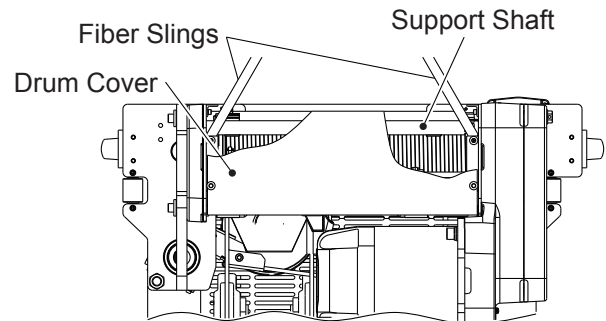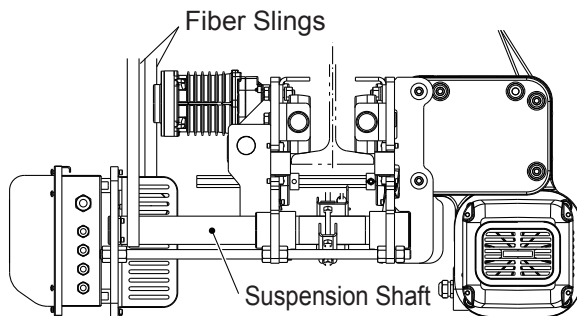

● Installation from the end of the rail

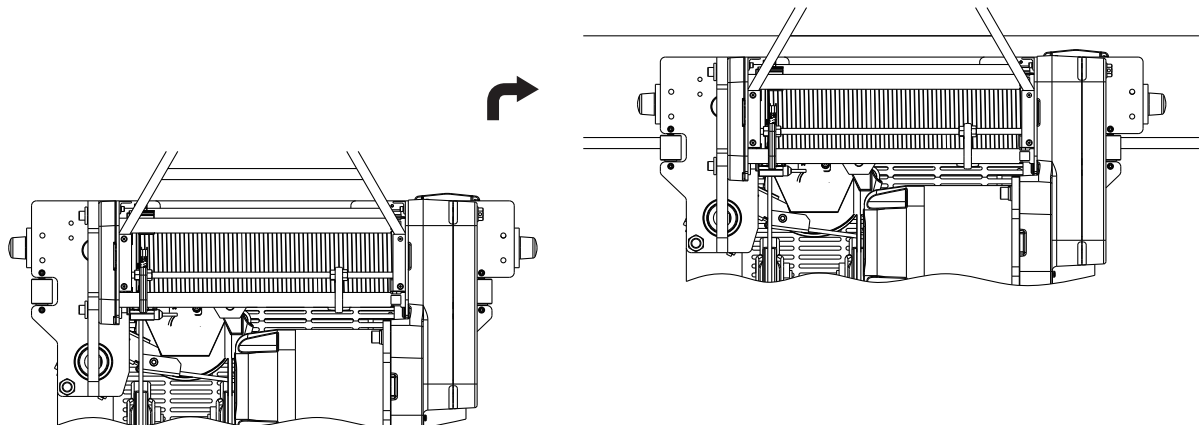

- 1) Check that the distance between the Trolley Frames matches the rail on which to install the hoist.
- 2) Make sure that the rail is set to a level position.
- 3) Lift the hoist up by using the slings that have been prepared for installation.
- 4) Install the hoist from the end of the rail.
- 5) Remove the eyebolts and slings used for installing the hoist.
- 6) If the Upper/Lower Limit Stop Device is not adjusted, install the Drum Cover.

● When the gap between the rail end the wall of the housing is scarce


⚠ CAUTION



Mandatory

- **Securely support the hoist so that it does not tilt.**

Failure to comply with this instruction may cause physical damage to equipment and machines including the hoist.

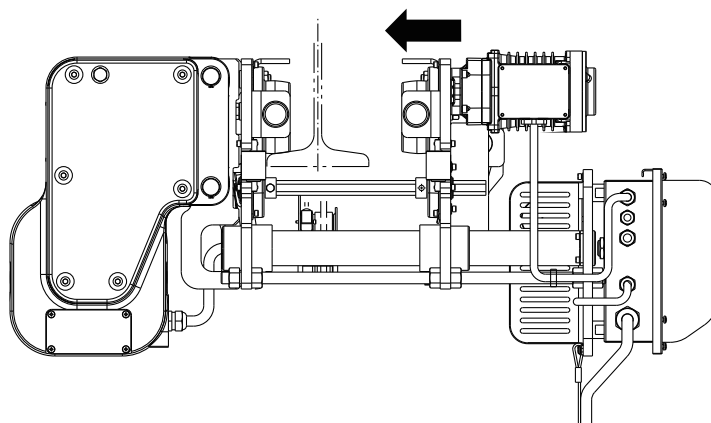

- 1) Expand the space between the Trolley Frames to the width of the Traverse Rail or more, and install the hoist from under the rail.
- 2) Place the wheel of the Trolley Frame on the fixed side onto the running surface of the Traverse Rail, and then move the Trolley Frame on the adjusted side to the rail side by using the nut of the Adjusting Bolt.
- 3) After moving the Trolley Frame, fasten the Socket Bolt of the Trolley Frame on the adjusted side and tighten the nut of the Adjusting Bolt. (See " Adjusting Distance between Frames of Traversing Device" (P22).)
Tightening torque: 9 N•m (for the Socket Bolt)
150 N•m (for the nut of the Adjusting Bolt)
- 4) Remove the eyebolts and slings used for installing the hoist.
- 5) If the Upper/Lower Limit Stop Device is not adjusted, install the Drum Cover.

■ Mounting the Stopper

⚠ WARNING



Prohibited




- **Be sure to mount the stoppers at the both ends of the rail to prevent drop.**
- **Be sure to avoid constantly stopping the hoist by bumping it against the stopper. It is recommended to attach shock attenuating material such as rubber on the stopper surface.**

Failure to comply with these instructions may cause the hoist to go off the rail or overrun, leading to serious accidents.


Installation (Continued)

● Stopper Mounting Positions

Referring to the tables below for mounting positions, mount the stoppers in appropriate positions.

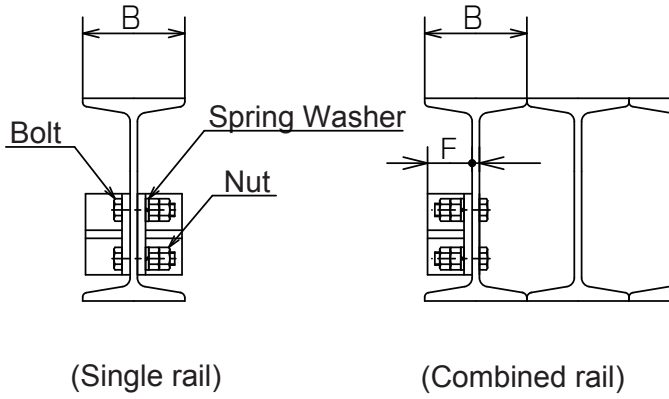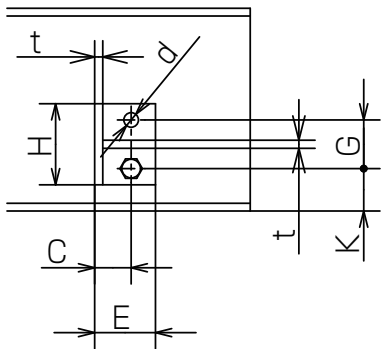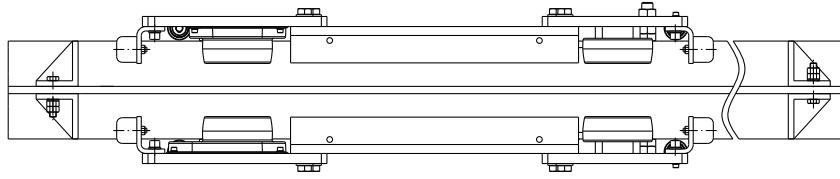

Capacity	F	Selection	H	E	G	C	B	t	K	Φd
2.8t	(B-t) / 2	F ≤ 90	80	C+25	50	40	125-500	9	t ₂ +60	14 (M12)
3t/3.2t		F > 90	100	C+30	60	45				18 (M16)
4.8t		F ≤ 90	110	C+35	65	50				22 (M20)
5t		F > 90								

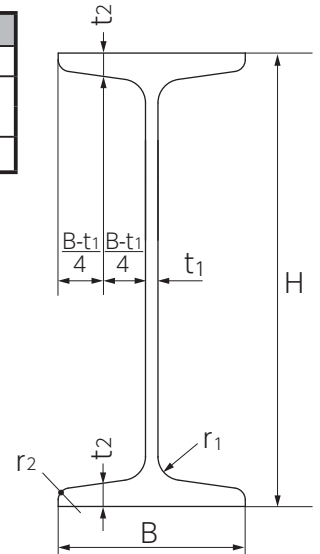

1-8 Setting Upper/Lower Limit Stop Device


The Upper/Lower Limit Stop Device can automatically stop the Hook Block at preset locations (at two upper-limit and lower-limit points) without requiring a positioning operation (such as inching) by push button.

■ Factory Settings

The factory set positions of the Upper/Lower Limit Stop Device are as shown below.

After installing the product, set and adjust the positions in accordance with the user's conditions of use as required.

Initial setting value	
Upper Limit Stop Position	Approx. 20 mm below lever of Upper Limit Emergency Stop Device
Lower Limit Stop Position	Below Upper Limit Stop Position by lifting range

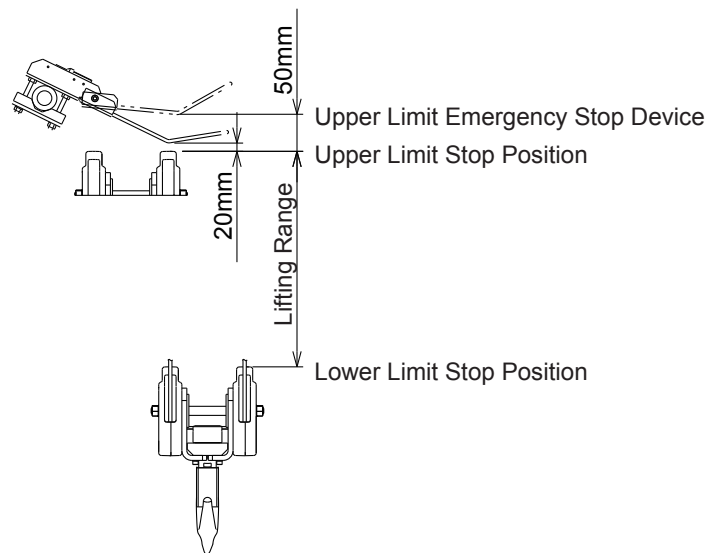

■ Adjustment method

⚠ WARNING



Prohibited

- **Do not adjust the Upper Limit Emergency Stop Device with wet hands.**
Failure to comply with this instruction can lead to electric shock, which may seriously affect the health of a human body.



Prohibited

- **Do not set the Upper Limit Stop Position of the Hook Block to a position higher than the lever of the Upper Limit Emergency Stop Device.**
- **Do not set the Lower Limit Stop Position of the Hook Block to a position below the lifting range (6 m, 9 m, or 12 m).**




Mandatory


- **Adjust the Lower Limit Stop Position of the Hook Block so that two or more winds of wire rope remain on the Rope Drum when stopped.**
- **The Upper/Lower Limit Stop Device is used to limit the moving range of lifted load. Do not use the hoist in such a way that the Upper/Lower Limit Stop Device is always activated.**
- **The Upper/Lower Limit Stop Device may stop the Hook Block at locations shifted from the preset stop positions, due to difference in the weight of the lifted load or aging of the brake. Readjust the position regularly.**
Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause malfunction of the hoist and may lead to serious accidents.

Setting Upper/Lower Limit Stop Device (Continued)

There are two types of Upper/Lower Limit Stop Devices: type A and type B. They differ based on the type of switch bracket they are equipped with as shown in the figure below.

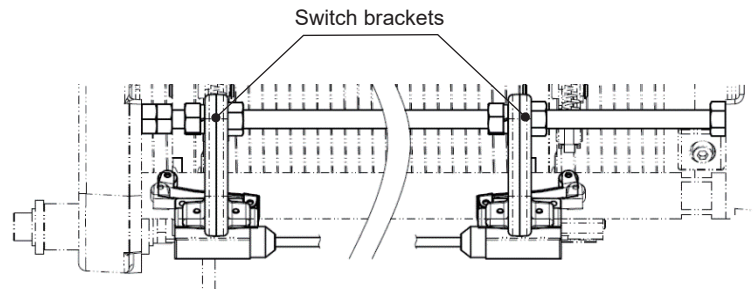

(Type A: Cast switch brackets)

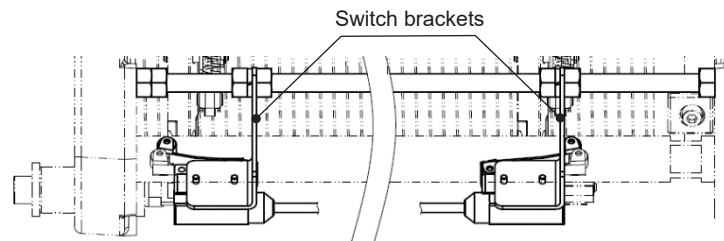

(Type B: Pressed plate switch brackets)

Upper/Lower Limit Stop Device

Follow the procedures described below to adjust the device according to the type of switch bracket.


- 1) Loosen the nut attached to the limit switch bolt, and adjust the position of the switch mounting brackets. Moving the switch brackets by 8.9 mm (1 pitch of the Rope Drum) moves the Upper Limit Stop Position (or Lower Limit Stop Position) by 125 mm (1 role of the Rope Drum).

2) Type A

Adjust the upper and lower switch brackets with the following procedure.

Upper side: Attach the bracket so that the distance from the end surface of the Back Frame to the left end surface of the upper switch bracket is not less than 72 mm.

Lower side: Attach the bracket so that the distance from the end surface of the body to the right end surface of the lower switch bracket is not less than 135 mm.

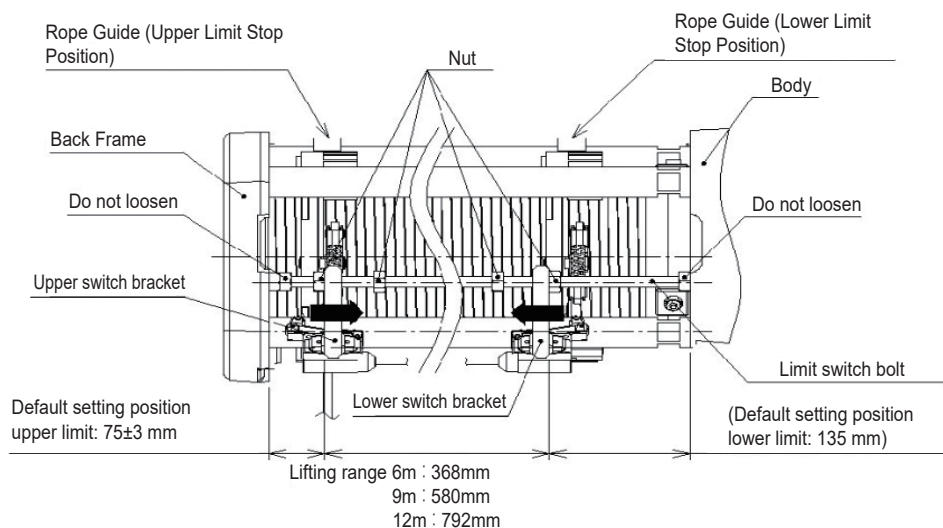


Type A setting position

Type B

Adjust the upper and lower switch brackets with the following procedure.

Upper side: Attach the bracket so that the distance from the end surface of the Back Frame to the left end surface of the upper switch bracket is not less than 90 mm.

Lower side: Attach the bracket so that the distance from the end surface of the body to the right end surface of the lower switch bracket is not less than 129 mm.

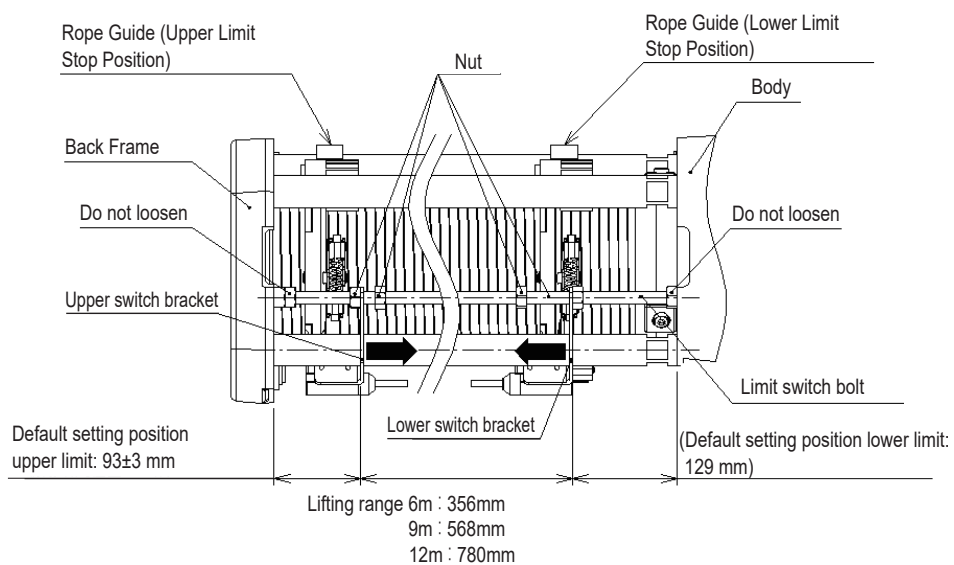

Type B setting position

- 3) After moving the upper and lower switch brackets, fasten the switch brackets securely with nuts (tightening torque: 32 N•m).

1-9 Adjusting Overload Limiter (OLL)

The Overload Limiter is adjusted at the time of shipping to be activated when the load is in the range of 110% to 125% of the capacity. Change the parameters of the inverter to deactivate the Overload Limiter for the load (overload) test.

WARNING



Mandatory

- When you change parameters or carry out maintenance of the inverter, make sure to read this manual and follow the instructions.
- When changing parameters or carrying out maintenance for the inverter is needed, ensure that it is performed by a person who have been certified by the organization that he/she has expertise and enough knowledge on structure and characteristics of the hoist and inverter, or contact the nearest service shop or our customer center.
- After operation, the Control Box may have become hot. Be sure to wait about 30 minutes after the operation before performing maintenance for electrical components in the Control Box.
- Perform electro-static discharge (ESD) before handling the inverter.
- Wait five minutes or more after shutting off the power before performing maintenance for peripheral devices other than the inverter.

Failure to comply with these instructions may lead to an electrical shock, burn, malfunction, failure, or damage to the inverter, and may cause serious accidents resulting in death or severe injury.



Prohibited

- Change of parameters and maintenance of the inverter are performed with the power turned on. Do not remove the cover of the inverter or touch the circuit board and electrical component near the inverter.
- The inverter is designed especially for a KITO product. Do not use any inverter other than KITO's genuine inverters.
- Do not modify the inverter.
- Do not change the wiring.
- Do not perform the withstand voltage test and insulation resistance measurement (mega measurement) with the inverter being connected.
- Do not turn off the power during operation.
- Do not connect the power supply to the output side of the inverter.

Failure to comply with these instructions may lead to an electrical shock, burn, malfunction, failure, or damage to the inverter, and may cause serious accidents resulting in death or severe injury.

1-9-1 Explanation on Inverter

For setting or monitoring parameters of the inverter, what are displayed on the LED operator and how to operate it will be described.

Name and Function of Each Part

Data display area (5 digits)

Information such as a frequency or parameter number is displayed.

ESC key (Escape)

Press this key to return to the state before the ENTER key was pressed.

RESET key

(Reset/shift)

- Press this key to move on to the next digit when setting a value of a parameter.
- This key serves as an error reset key when an error is detected.


RUN lamp

This lamp is lit when the inverter is operating.

UP key

Use this key to select a parameter number, mode, or setting value (increase), and also to move on to the next item or data.

LED lamp

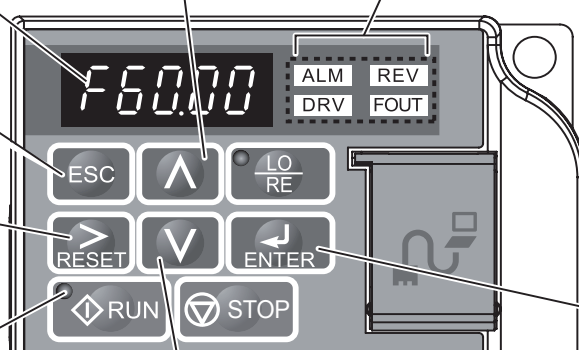

DOWN key



Use this key to select a parameter number, mode, or setting value (decrease), and also to return to the previous item or data.

ENTER key

- Press this key to determine and set each mode, parameter, or setting value.
- Use this key to go out from a screen to the next one.



Checking Display

In a normal condition, display on the LED operator when the power is on is as follows:

No.	Name	Details
Normal state		Monitor concerning the frequency instruction is displayed in the data display area. DRV will be lit.
Abnormal state	 (Ex) Low voltage of the main circuit	The display depends on details of the error. Refer to the attached Inverter Manual, and take a countermeasure. ALM and DRV will be lit.

Characters on Digital Display and Corresponding Description in This Manual

Characters displayed on the LED operator are shown below. In this manual, lighting or blinking of the digital characters are described in the following way.

Lighting	Blinking
	

Adjusting Overload Limiter (OLL) (Continued)

1-9-2 Disabling/Adjusting the OLL Operation

Before carrying out an overload test (with the load at 125% of the capacity), adjust the inverter and disable the OLL to make sure it does not get activated during the test.

The method for disabling the OLL differs based on the inverter software version. Follow the procedure described below to check the inverter version beforehand.

Checking the Inverter Version

When the inverter can be turned on

- 1) Turn the power on.
- 2) Continue pressing **ESC** until the data shown on the display stops changing.
- 3) Press **▲** or **▼** to access the monitor screen.
- 4) Press **ENTER**.
- 5) Press **RESET**, **▲**, or **▼** to set the parameter to U1-25.
- 6) Press **ENTER** to see the software version.
(The figure to the right shows version S5601. The initial letter "S" is not displayed.)
- 7) After checking the version, continue pressing **ESC** until the data shown on the display stops changing.

LED display



Default screen




Monitor screen



When the inverter cannot be turned on

Check the nameplate attached to the inverter to see the software version. (See the figure below.)

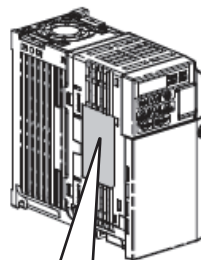

Inverter

Nameplate



PRG: * * * *
Version

The initial letter "S" included in the version number is not shown here.

Example:
If the number on the nameplate is 5604, it means that the inverter version is S5604.

WARNING

Mandatory

- When disabling or adjusting the Overload Limiter (OLL), make sure you select a method that is suitable for the inverter software version.

Failure to comply with these instructions may lead to serious accidents resulting in death or severe injury due to an operational error, failure, or inverter damage.

1-9-2-1 Software Versions S5601 to S5603

Follow the procedure described below to configure the settings correctly.

The settings for each model have a specific value range (upper and lower limits) that cannot be exceeded.

Operating Procedure

1) Turn the power on.

LED display



Default screen

2) Press until the setup mode screen appears.



Parameter setting screen

3) Press to display the parameter setting screen.

4) Press or until the low-speed activation parameter S1-38 or the high-speed activation parameter S-41 is displayed. (The figure on the right shows display for S1-38: low-speed.)



(*Be sure to set both the low- and high-speed parameters.)

5) Pressing displays the current setting values as shown in the following table.



(The highest digit will blink.)



Capacity	Product code	Default settings			
		200 V class		400 V class	
		S1-38	S1-41	S1-38	S1-41
		Low speed	High speed	Low speed	High speed
2.8t	RYLA028ISIS06/09/12	90	105	97	105
	RYLA028IHIS06/09/12	98	105	103	107
3t	RYLA030ISIS06/09/12	99	114	105	113
	RYLA030IHIS06/09/12	106	113	111	115
3.2t	RYLA032ISIS06/09/12	108	123	113	120
	RYLA032IHIS06/09/12	115	121	120	123
4.8t	RYLB048ISIS06/09/12	106	112	110	110
	RYLB048IHIS06/09/12	99	104	108	106
5t	RYLB050ISIS06/09/12	111	118	114	114
	RYLB050IHIS06/09/12	103	107	114	108

(*Be sure to reset the values to these default values after the load test is finished.)

6) Press to move the blinking digit to a digit that is needed to be changed.




Adjusting Overload Limiter (OLL) (Continued)

- 7) Press  or  to register a value shown in the following table so that the OLL will not be activated even when a load that is 1.25 times heavier than the capacity is applied. If fine tuning is necessary, change the value to a desired one.

When OLL is deactivated

Capacity	Product code	Settings for OLL inactivation			
		200 V class		400 V class	
		S1-38	S1-41	S1-38	S1-41
		Low speed	High speed	Low speed	High speed
2.8t	RYLA028ISIS06/09/12	140	155	147	155
	RYLA028IHIS06/09/12	148	155	153	157
3t	RYLA030ISIS06/09/12	149	164	155	163
	RYLA030IHIS06/09/12	156	163	161	165
3.2t	RYLA032ISIS06/09/12	158	173	163	170
	RYLA032IHIS06/09/12	165	171	170	173
4.8t	RyLB048ISIS06/09/12	156	162	160	160
	RyLB048IHIS06/09/12	149	154	158	156
5t	RyLB050ISIS06/09/12	161	168	164	164
	RyLB050IHIS06/09/12	153	157	164	158

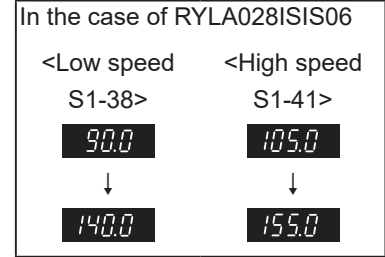


- 8) Press  to register the changed value.

End

- 9) The screen will automatically return to the parameter setting screen (shown in the figure on the right, in the case of S1-38: low speed).

Follow the procedure from step 4 to set S1-41 for the high-speed parameter.

- 10) After setting both the low- and high-speed parameters, press  until the screen returns to the default screen.




After the change is completed, be sure to perform the load test with the condition in which the OLL will not be activated.

Make sure to reset the activation parameter values to the default ones after the load test is finished.

If the values are not reset, the OLL will not be activated properly.

■ 1-9-2-2 Software Versions S5604

⚠ WARNING



- **Do not perform regular operations in test mode.**
(Be sure to switch to drive mode after the load test is finished.)

Failure to comply with these instructions may lead to serious accidents resulting in death or severe injury due to an operational error, failure, or inverter damage.

Prohibited

By switching from drive to test mode in an inverter with software version S5604, you can disable the OLL and carry out an overload test (with the load at 125% of the capacity).

Follow the procedure described below to configure the settings correctly.

- 1) Turn the power on.


LED display



Default screen

- 2) Press  until the setup mode screen appears.



- 3) Press  to display the parameter setting screen.



Parameter setting screen

- 4) Press **▲** or **▼** until the low-speed activation parameter S1-38 or the high-speed activation parameter S-41 is displayed. (The figure on the right shows display for S1-38: low-speed.)

(*Be sure to set both the low- and high-speed parameters.)

- 5) Pressing **ENTER** displays the current setting values as shown in the following table.

Capacity	Product code	Default settings			
		200 V class		400 V class	
		S1-38	S1-41	S1-38	S1-41
		Low speed	High speed	Low speed	High speed
2.8t	RYLA028ISIS06/09/12	90	100	100	101
	RYLA028IHIS06/09/12	101	105	112	113
3t	RYLA030ISIS06/09/12	97	104	109	109
	RYLA030IHIS06/09/12	109	113	119	121
3.2t	RYLA032ISIS06/09/12	103	116	118	117
	RYLA032IHIS06/09/12	117	122	128	130
4.8t	RYLA048ISIS06/09/12	114	117	114	120
	RYLA048IHIS06/09/12	101	105	112	104
5t	RYLA050ISIS06/09/12	118	123	118	126
	RYLA050IHIS06/09/12	107	104	119	109

(*Be sure to reset the values to these default values after the load test is finished.)

- 6) Press **RESET** to move the blinking digit to a digit that is needed to be changed.

- 7) Press **▲** or **▼** to change each parameter value according to the following table.

Capacity	Product code	Set value			
		200 V class		400 V class	
		S1-38	S1-41	S1-38	S1-41
		Low speed	High speed	Low speed	High speed
2.8t	RYLA028ISIS06/09/12	104	114	116	115
	RYLA028IHIS06/09/12	115	118	126	127
3t	RYLA030ISIS06/09/12	106	123	127	127
	RYLA030IHIS06/09/12	124	124	135	137
3.2t	RYLA032ISIS06/09/12	117	141	137	141
	RYLA032IHIS06/09/12	133	130	144	146
4.8t	RYLA048ISIS06/09/12	130	128	129	136
	RYLA048IHIS06/09/12	115	115	127	118
5t	RYLA050ISIS06/09/12	135	136	135	141
	RYLA050IHIS06/09/12	121	120	135	123

In the case of RYLA028ISIS06, 400 V class

<Low speed S1-38>	<High speed S1-41>
↓	↓

- 8) Press **ENTER** to register the changed value.
- 9) The word "TEST" starts blinking on the display, and test mode is activated.

- 10) After setting both the low- and high-speed parameters, press **ESC** until the screen returns to the default screen.

- 11) Carry out a load test.

- 12) After the load test is finished, follow steps 2 to 10 to set the values from the table shown in step 5 as the low-speed (S1-38) and high-speed (S1-41) parameters.

- 13) After exiting test mode, press **ESC** until the screen returns to the default screen.

Test mode is automatically disabled if any of the following occurs.

- (1) Test mode remains active for more than 1 hour.
- (2) The power is turned off and back on (i.e., the machine is restarted).

Adjusting Overload Limiter (OLL) (Continued)

■1-9-3 Check after Installation

Wrong assembling or installation causes death or severe injury. To prevent such danger, check the following.

■Check items

Make sure that the following items are satisfied.

- No bolt, nut nor split pin is lost. Tightening and assembling are completed.
- Protection Wire for Push Button Switch Cord (Push Button Switch Wire) is securely tied to accept and endure the force instead of Push Button Switch Cord when the Push Button Switch Set is drawn.
- The Power Cable is fixed.
- Source voltage is proper.
- The earth wire is connected securely.
- The stoppers are securely mounted on the Traverse Rail.
- The running surface of Traverse Rail is not attached with paint or oil. (The running surface must be bare metal. Do not paint.) There is no obstacle for the Traversing Device to run. The rail is level.
- The Main Unit is installed in a level position without any tilt.
- Cables are not loose and have not come off.

■Operational Check

Carry out the operational check in accordance with "■1-11-5 Function and Performance" (P57) of Daily Inspection.

1-10 How to Use

WARNING



Prohibited

- **Do not use the Wire Rope with heavy rust, damage, breakage, abrasion or deformation.**
Failure to comply with this instruction may lead to serious accidents resulting in death or severe injury such as drop of the lifted load, etc.

- **Do not cut, extend, or weld the Wire Rope.**
Failure to comply with this instruction may lead to serious accidents resulting in death or severe injury such as drop of the lifted load, etc.

- **Do not use the Wire Rope with the Bottom Hook without smooth motion.**
Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause malfunction and failure of the hoist and may lead to serious accidents.

- **Do not use the Hook without a Hook Latch or damaged Hook.**
Failure to comply with this instruction may lead to serious accidents resulting in death or severe injury such as drop of the lifted load, etc.

- **Do not hook the Wire Rope with another hook.**
Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause malfunction and failure of the hoist and may lead to serious accidents.

- **Do not use the Wire Rope when its brake does not function securely, or when the stopping distance is too long.**
Failure to comply with this instruction may lead to unexpected serious accidents.

- **Do not use the product if it moves oppositely to the direction indicated on the push button switch.**
Failure to comply with this instruction may lead to unexpected serious accidents.

- **Do not lower the hoist while the Hook Block is on the load nor operate with no load while the rope is loosened. Otherwise, it may cause a turbulent winding of the Wire Rope.**
Failure to comply with this instruction will lead to failure to obtain normal function and performance of the hoist and may lead to serious accidents.



Mandatory

- **Carry out daily inspection before operation.**
(When any abnormality is found during inspection, turn off the power, indicate "FAILURE" and ask the maintenance engineer for repair.)

- **Check the slinging devices to make sure there is no abnormality.**
Failure to comply with these instructions may lead to serious accidents resulting in death or severe injury.

How to Use (Continued)

⚠ CAUTION



Prohibited

- **Do not use the product with an illegible nameplate or warning label affixed to the Main Unit.**
Failure to comply with this instruction may lead to unexpected serious accidents.



Mandatory

- **When using the product for the first time, affix the labels indicating East, West, North and South on the push button switches according to the direction that the product moves.**
Failure to comply with this instruction may lead to serious accidents due to operational error.
- **Check the contents of the work and make sure that the hoist has proper performance for the capacity and lifting range.**
Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause malfunction and failure of the hoist and may lead to serious accidents.
- **Check the contents of the work and operate the hoist at a place enabling to look out the operating area without hindrance.**
Failure to comply with this instruction may lead to unexpected serious accidents.
- **When looking out the operating area is difficult, arrange an observer near the area for safety.**
- **Operate the hoist at a place with firm foothold without danger of falling, stumbling, slipping or overturning.**
Failure to comply with this instruction may lead to serious accidents due to operational error.
- **Before moving the load, warn all the people in the surroundings.**
Failure to comply with this instruction may lead to unexpected serious accidents.
- **Even if the crane or the hoist is permanently installed and used for the same purpose repeatedly, check the contents of the work and make sure that the work does not exceed the capacity on each occasion.**
Failure to comply with this instruction may lead to unexpected serious accidents.
- **When operating the hoist, wear clothes that do not impede the operation.**
Failure to comply with this instruction may lead to serious accidents due to operational error.
- **Persons operating or working near the hoist must wear protective gears such as earplugs. (Refer to P128 for noise level of the hoist.)**
Failure to comply with this instruction can affect the health of a human body due to noise.

NOTE

Appoint a maintenance engineer or competent personnel among the qualified personnel for operation of cranes or wire rope hoists. Display the name of the personnel in an easily viewable place.

■1-10-1 How to Operate the Push Button Switches

CAUTION



Prohibited

- **Do not hang the Push Button Switch Cord on other objects, or pull the cord strongly.**
Failure to comply with this instruction will cause wire breakage, leading to failure to obtain normal function and performance of the hoist and may lead to serious accidents.
- **Do not use the Push Button Switch if its button does not operate smoothly.**
Failure to comply with this instruction may lead to serious accidents due to operational error.
- **Do not bundle or tie the cord for the adjustment of its length.**
Failure to comply with this instruction will cause wire breakage, leading to failure to obtain normal function and performance of the hoist and may lead to serious accidents.
- **The Push Button Switch is a resin product. Do not use the Push Button Switch in an environment such as using chemicals and solvents. It may cause the deterioration of its fiscal condition.**
Failure to comply with this instruction will lead to failure to obtain normal function and performance of the hoist and may lead to serious accidents.



Mandatory

- **When starting operation of the hoist after stopping the hoist by pushing the Emergency Stop Button, be sure to confirm there are no hazards around the workplace before releasing the lock of the Emergency Stop Button and starting operation.**
Failure to comply with this instruction may lead to unexpected serious accidents.

NOTE


When taking hands off the Push Button Switch after operation, do not throw the switch. Be careful not to hit other workers with the Push Button Switch.

How to Use (Continued)

7-Push Button Switch Set

The 7-Push Button Switch Set has a lock type emergency stop button and operation push button switches. One-step push button switches or two-step push button switches are mounted as operation push button switches corresponding to speed.

The buttons of the push button switch set are expressed as **(E)** and **(W)** for traverse movement and as **(S)** and **(N)** for travel movement.

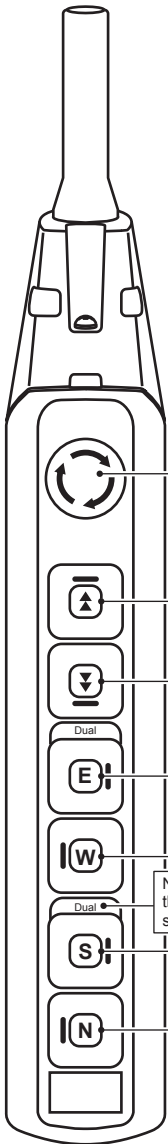

● Emergency Stop Button

- 1) Press the Emergency Stop Button **(E-Stop)** deeply when carrying out an emergency stop.
 - The button is locked at the pressed end.
 - 2) Turn the Emergency Stop Button **(E-Stop)** clockwise to cancel the lock.
 - Press-locked **(E-Stop)** button returns to the original position.
- * When the hoist is not used, press the Emergency Stop Button **(E-Stop)** deeply to the end.

● Operation Button

● Lift/Lower Button

Dual Speed Model	
(▲)	<ol style="list-style-type: none"> 1) Press (▲) button to lift the load. 2) When lifting the load at high speed, press the (▲) button further to the end. <ul style="list-style-type: none"> • The hoist stops when the button is released.
(▼)	<ol style="list-style-type: none"> 1) Press (▼) button to lower the load. 2) When lowering the load at high speed, press the (▼) button further to the end. <ul style="list-style-type: none"> • The hoist stops when the button is released.

● Traverse Button

Dual Speed Model	
(E)	<ol style="list-style-type: none"> 1) Press (E) button to move the Traversing Device to the east at low speed. <ul style="list-style-type: none"> • The hoist stops when the button is released. 2) Press (E) button further to move the Traversing Device to the east at high speed.
(W)	<ol style="list-style-type: none"> 1) Press (W) button to move the Traversing Device to the west at low speed. <ul style="list-style-type: none"> • The hoist stops when the button is released. 2) Press (W) button further to move the Traversing Device to the west at high speed.


● Travel Button

Single Speed Model		Dual Speed Model	
(S) (→)	<ol style="list-style-type: none"> 1) Press (S) button to move the crane to the south. <ul style="list-style-type: none"> • The crane stops when the button is released. 	(S) (→)	<ol style="list-style-type: none"> 1) Press (S) button to move the crane to the south at low speed. 2) Press (S) button further to the end to move the crane to the south at high speed. <ul style="list-style-type: none"> • The crane stops when the button is released.
(N) (←)	<ol style="list-style-type: none"> 1) Press (N) button to move the crane to the north. <ul style="list-style-type: none"> • The crane stops when the button is released. 	(N) (←)	<ol style="list-style-type: none"> 1) Press (N) button to move the crane to the north at low speed. 2) Press (N) button further to the end to move the crane to the north at high speed. <ul style="list-style-type: none"> • The crane stops when the button is released.

5-Push Button Switch Set

5-Push Button Switch Set has a lock type emergency stop button and operation push button switches. One-step push button switches or two-step push button switches are mounted as operation push button switches.

The buttons of the push button switch set are expressed as **E** and **W** or **→** and **←** for traverse movement.

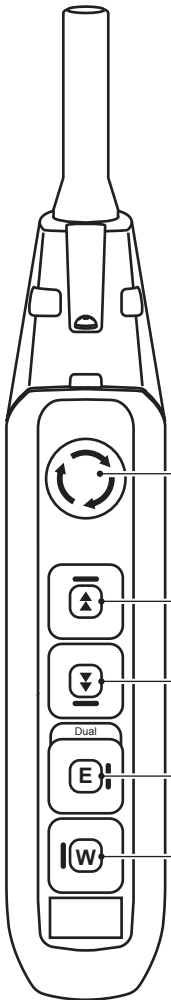

● Emergency Stop Button

- | | |
|---|--|
| ⊘ | <ol style="list-style-type: none"> 1) Press the Emergency Stop Button ⊘ deeply when carrying out an emergency stop. <ul style="list-style-type: none"> • The button is locked at the pressed end. 2) Turn the Emergency Stop Button ⊘ clockwise to cancel the lock. <ul style="list-style-type: none"> • Press-locked ⊘ button returns to the original position. <p>* When the hoist is not used, press the Emergency Stop Button ⊘ deeply to the end.</p> |
|---|--|

● Operation Button

● Lift/Lower Button

Dual Speed Model	
⬆	<ol style="list-style-type: none"> 1) Press ⬆ button to lift the load. 2) When lifting the load at high speed, press the ⬆ button further to the end. <ul style="list-style-type: none"> • The hoist stops when the button is released.
⬇	<ol style="list-style-type: none"> 1) Press ⬇ button to lower the load. 2) When lowering the load at high speed, press the ⬇ button further to the end. <ul style="list-style-type: none"> • The hoist stops when the button is released.

● Traverse Button

Dual Speed Model	
E	<ol style="list-style-type: none"> 1) Press E button to move the Traversing Device to the east at low speed. <ul style="list-style-type: none"> • The hoist stops when the button is released. 2) Press E button further to move the Traversing Device to the east at high speed.
W	<ol style="list-style-type: none"> 1) Press W button to move the Traversing Device to the west at low speed. <ul style="list-style-type: none"> • The hoist stops when the button is released. 2) Press W button further to move the Traversing Device to the west at high speed.

■ 1-10-2 Operation


■ General

WARNING



Prohibited

- **Do not operate the hoist in an environment with flammable or explosive gas.**
Failure to comply with this instruction may lead to serious accidents such as fire due to failure of the hoist.
- **Do not use the hoist exceeding the ratings (short period rating, intermittent rating) of the lifting motor and the maximum start-up frequency.**
Failure to comply with this instruction may lead to serious accidents such as fire due to burning of the hoist motor.
- **Do not use the hoist by the voltage other than the rated voltage.**
Failure to comply with this instruction may lead to serious accidents such as fire due to failure of the hoist.
- **Do not use the Emergency Stop Button for ordinary stop operation.**
Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause malfunction and failure of the hoist and may lead to serious accidents.
- **Do not expose the Wire Rope to sparks from welding.**
Failure to comply with this instruction will significantly shorten the life of the wire rope, not only resulting in failure to obtain normal function and performance of the hoist, but also causing failure of the hoist, leading to serious accidents.
- **Do not contact welding rods or electrodes with the Wire Rope.**
Failure to comply with this instruction will significantly shorten the life of the wire rope, not only resulting in failure to obtain normal function and performance of the hoist, but also causing failure of the hoist, leading to serious accidents.
- **Do not use the Wire Rope as the earth for welding work. (Fig. A)**
Failure to comply with this instruction can seriously affect the health of user's body, and may lead to unexpected serious accidents.

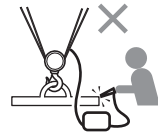

A



Mandatory

- **Follow the operating environment and conditions for the hoist.**
Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause malfunction and failure of the hoist and may lead to serious accidents.


■ Slinging

⚠ WARNING



Prohibited

- **Do not apply a load to the tip of the Hook or the Hook Latch. (Fig. B)**
Failure to comply with this instruction may lead to serious accidents resulting in death or severe injury such as drop of the lifted load, etc.
- **Do not bind a load with the Wire Rope directly. (Fig. C)**
Failure to comply with this instruction may lead to serious accidents resulting in death or severe injury such as drop of the lifted load, etc.
- **Do not operate the Wire Rope while it is in contact with any sharp edges. (Fig. D)**
Failure to comply with this instruction may lead to serious accidents resulting in death or severe injury such as drop of the lifted load, etc.

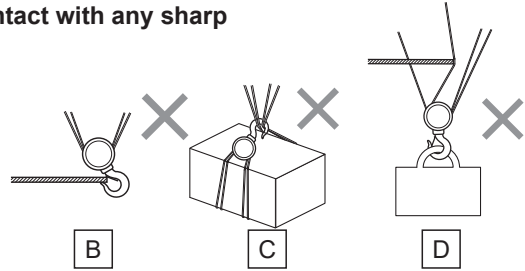

Mandatory

- **Use the sling appropriate for the weight and shape of a load.**
Failure to comply with this instruction may lead to serious accidents resulting in death or severe injury such as drop of the lifted load, etc.
Inappropriate slinging may result in danger such as drop of a lifted load.
- **Carry out the slinging with equal load on slinging devices for stable lifting of a load.**
Failure to comply with this instruction may lead to serious accidents resulting in death or severe injury such as drop of the lifted load, etc.
- **Attach the slinging devices securely to a load.**
Failure to comply with this instruction may lead to serious accidents resulting in death or severe injury such as drop of the lifted load, etc.
- **Attach the slinging devices to the Bottom Hook correctly.**
Failure to comply with this instruction may lead to serious accidents resulting in death or severe injury such as drop of the lifted load, etc.

How to Use (Continued)

■ Lifting/Lowering

⚠ WARNING




Prohibited

- **Do not lift more than the capacity. (Fig. E)**
Failure to comply with this instruction may lead to serious accidents resulting in death or severe injury such as drop of the lifted load, etc.
- **Do not operate the hoist exceeding the lifting range.**
Failure to comply with this instruction may lead to serious accidents resulting in death or severe injury such as drop of the lifted load, etc.
- **Do not try to lift fixed structures (floor, ground, or buildings).**
Failure to comply with this instruction may cause physical damage to equipment and machines including the hoist.
- **Do not constantly stop the hoist with the Upper Limit Emergency Stop Device (limit switch).**
Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause malfunction and failure of the hoist and may lead to serious accidents.
- **Do not use the hoist when the Overload Limiter is operated to stop winding.**
Failure to comply with this instruction may lead to serious accidents resulting in death or severe injury such as drop of the lifted load, etc.
- **Do not swing the lifted load.**
Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause malfunction and failure of the hoist and may lead to serious accidents.
- **Do not wind the slack Wire Rope with a load in one action to avoid exposing the Wire Rope to shock.**
Failure to comply with this instruction may lead to serious accidents due to failure of the hoist. Stop lifting when the Wire Rope is stretched tight. Then lift slowly.
- **Do not carry out excessively frequent inching.**
Failure to comply with this instruction may lead to serious accidents due to failure of the hoist.
- **Do not carry out plucking (sudden reversing of the motion).**
Failure to comply with this instruction may lead to serious accidents due to failure of the hoist. When reversing the motion, first stop the hoist, and then reverse it.
- **Do not cause the load on the hook to fall downwards when taking a load off from a pallet. (Fig. F)**
Failure to comply with this instruction may lead to serious accidents due to failure of the hoist.
- **Do not cause the load to come into contact with the Wire Rope.**
Failure to comply with this instruction may lead to serious accidents resulting in death or severe injury such as drop of the lifted load, etc.
- **Do not rotate a lifted load. Use the device for rotation.**
Failure to comply with this instruction may lead to serious accidents due to failure of the hoist.
- **Do not carry out the welding or cutting work while a load is lifted.**
Failure to comply with this instruction may lead to unexpected serious accidents.
- **Do not carry out repair or disassembling while a load is suspended.**
Failure to comply with this instruction may lead to serious accidents resulting in death or severe injury such as drop of the lifted load, etc. When repairing or disassembling a wire rope hoist, ensure that the product is placed down on the floor and that only maintenance engineers maintain the hoist.
- **Do not enter beneath a lifted load.**
Failure to comply with this instruction may lead to unexpected serious accidents.



E

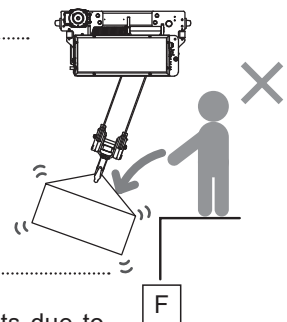

F

⚠ WARNING



Mandatory

- **When the Upper Limit Emergency Stop Device (Limit switch) is operated, stop the lifting work immediately and lower the load.**


Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause malfunction and failure of the hoist and may lead to serious accidents.

- **Move the hoist right above the load and then lift the load. (Do not pull the load in an inclined direction.) (Fig. G)**

Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause malfunction and failure of the hoist and may lead to serious accidents.

- **Do not leave from the operating position while a load is lifted. Always keep an eye on the lifted load.**

Failure to comply with this instruction may lead to unexpected serious accidents.

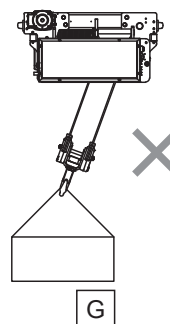

⚠ CAUTION



Prohibited

- **Do not use the Overload Limiter to measure the weight of a load.**

Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause malfunction and failure of the hoist and may lead to serious accidents.

The use of the Overload Limiter other than the intended purpose may result in injury or property damage.



Mandatory

- **When carrying a lifted load using a lifting magnet or a vacuum chuck, lower the height of the lifted load as low as possible.**





Failure to comply with this instruction may lead to unexpected serious accidents.




- **Do not lift a load with two wire rope hoists.**

Failure to comply with this instruction may lead to serious accidents resulting in death or severe injury such as drop of the lifted load, etc.

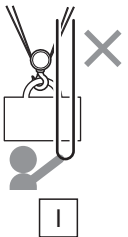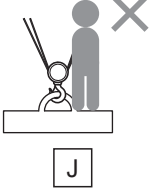

How to Use (Continued)



Travel / Traverse

 WARNING		
 Prohibited	<ul style="list-style-type: none"> • Do not operate the hoist underneath the load or transport a load over people. (Fig. I) Failure to comply with this instruction may lead to unexpected serious accidents. • Do not operate the hoist when any person is in the area where the lifted load moves. Failure to comply with this instruction may lead to unexpected serious accidents. • Do not allow people to enter into the area where a lifted load moves. Failure to comply with this instruction may lead to unexpected serious accidents. • Do not ride on a lifted load and do not use the hoist to support, lift, or transport people. (Fig. J) Failure to comply with this instruction may lead to unexpected serious accidents. • Prevent the hoist from bumping against a building or a structure. Failure to comply with this instruction may lead to serious accidents due to failure of the hoist. • Do not operate or move the hoist while moving backward with a load kept lifted. Failure to comply with this instruction can cause accidents affecting the health of a human body due to dropping, stumbling, tipping, or pinching. Operate the hoist while looking forward from the back of a load and moving ahead. 	 

 CAUTION	
 Prohibited	<ul style="list-style-type: none"> • Do not bump the lifted load against other structures or wiring. Failure to comply with this instruction may lead to unexpected serious accidents.
 Mandatory	<ul style="list-style-type: none"> • If the wire rope is entangled, stop the operation immediately and reset the entangled ropes. Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause malfunction and failure of the hoist and may lead to serious accidents.

In Abnormality or Failure


 WARNING	
 Mandatory	<ul style="list-style-type: none"> • If the hoist is damaged or abnormal noise or vibration occurs, stop the operation immediately. Failure to comply with this instruction may lead to unexpected serious accidents. • If the hoist moves in the direction opposite to the indication on the Push Button Switch, stop the operation immediately. Failure to comply with this instruction may lead to unexpected serious accidents. • When the kink, entanglement, crack, deformation, attachment of foreign matters or abnormal engagement of the Wire rope is observed, stop the operation immediately. Failure to comply with this instruction may lead to serious accidents resulting in death or severe injury such as drop of the lifted load, etc.

 CAUTION	
 Mandatory	<ul style="list-style-type: none"> • When any abnormality is observed during the operation, indicate "FAILURE" and contact the maintenance engineers. Failure to comply with this instruction may lead to unexpected serious accidents. • Should the power be interrupted, secure safety and contact the maintenance engineers. Failure to comply with this instruction may lead to unexpected serious accidents.


■1-10-3 How to Sling the Load Properly

Sling the load at the extended line of the hook shaft.


Do not carry out dangerous hooking as shown below.

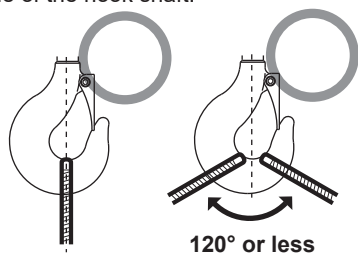

120° or less

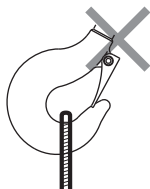


Improper hooking position of the lifted load or the sling

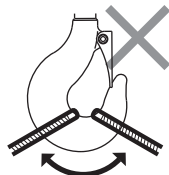


Angle exceeding 120°

Angle too wide

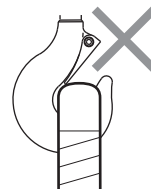

Hook Latch not closed

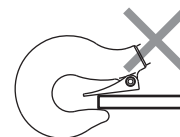

Hooking of the load at the tip of the Hook

■1-10-4 How to Suppress the Swinging of a Load

⚠ WARNING



Prohibited

- Do not move the hoist with a load hung at one side of the Crane Saddle (edge of the rail). Otherwise the load swings and hits a person or an object or drops to result in death or severe injury.


Swinging of a load makes it difficult and dangerous to move the hoist. The basic idea of the operation is not to cause a load to swing. For this purpose, observe the following instructions.

- Do not pull a load in an inclined direction.
- Start slowly when traversing the load.
- Do not lift suddenly.




Even if you observe the above instructions, the lifted load may swing at the start and the stop of the hoist. Following operations can reduce the swing of the lifted load.

■ Operation

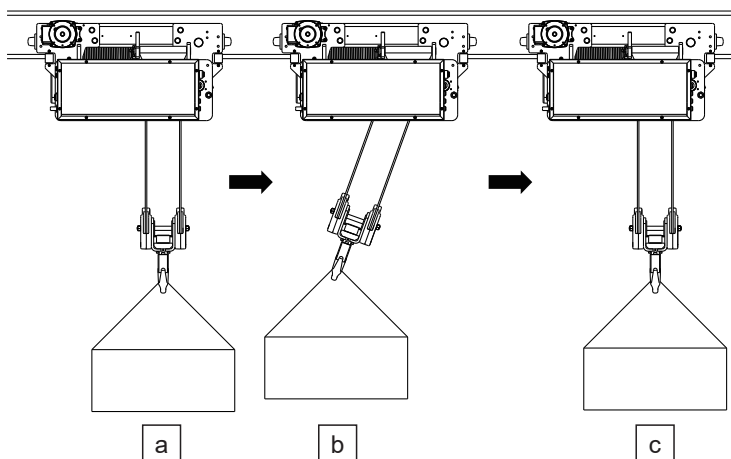- 1) Press the Traverse Button. (Fig. a)
- 2) When the hoist starts to move, the lifted load delays slightly. (Fig. b)
- 3) Release the button slightly before the time when the lifted load swings to the center position.
- 4) When the lifted load comes to the position just beneath the hoist, press the button again and continue to traverse the load. (Fig. c)



■1-10-5 Precautions After Work

 CAUTION	
 Prohibited	<ul style="list-style-type: none"> • Do not store the hoist in the excessively lifted state (where the Upper Limit Emergency Stop Device is active), or excessively lowered state (lowered to a length beyond the lifting range). Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause malfunction and failure of the hoist and may lead to serious accidents.
 Mandatory	<ul style="list-style-type: none"> • Store the hoist with power off. Failure to comply with this instruction may lead to unexpected serious accidents. • Indicate "FAILURE" on the hoist that needs repair to prevent it from being used by mistake. Failure to comply with this instruction may lead to unexpected serious accidents. • Clean the hoist by wiping off dust and water droplets before storing. Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause malfunction and failure of the hoist and may lead to serious accidents. • Clean the parts that house, or are scraped by, the wire rope, such as the rope drum, hook sheave, idle sheave, and rope guide, by removing the dirt, foreign matter, and water droplets from them before storing. Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause malfunction and failure of the hoist and may lead to serious accidents. • When the hoist is installed outdoors, cover it with rain cover or roof after applying rust proof treatment. Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause malfunction and failure of the hoist and may lead to serious accidents.

NOTE	
<ul style="list-style-type: none"> • Frequently clean the push buttons not to allow the dust and sands to attach. • When storing the hoist for a long period, it is effective to perform idling operation at a certain interval in order to prevent rusting. • When not using the hoist, wind up the Hook for storage to the height where it does not interfere with passers-by or other works. • Decide the place to store the hoist in advance. It is recommended to hang the push button set on the pillar. 	

1-11 Daily Inspection

WARNING



Mandatory

- **Carry out daily inspection before use.**

Failure to carry out the inspection may make it impossible to maintain normal function and performance of the hoist, resulting in failure to use the hoist safely and leading to serious accidents.

When any abnormality is found during inspection, turn off the power, indicate "FAILURE" and ask the maintenance engineer for repair.



Daily Inspection


Mainly the operator of the hoist shall carry out the daily inspection to check the conditions of the hoist by visual check and operation under no load.

■ 1-11-1 Appearance

Item	Check method	Criteria	When failed
Indication of nameplates and labels	<ul style="list-style-type: none"> • Check visually. 	<ul style="list-style-type: none"> • No peel off. Indication can be seen clearly. 	<p>Carry out cleaning, repair or replace with a new nameplate or label.</p> <p>When ordering a nameplate, please inform KITO of the Product Code and Serial No.</p>
Deformation and damage of Main Unit and each part	<ul style="list-style-type: none"> • Check visually. 	<ul style="list-style-type: none"> • No apparent deformation or corrosion 	<p>Replace the parts with deformation, damage, flaw or crack.</p>
Bolts, nuts and split pins	<ul style="list-style-type: none"> • Check visually. 	<ul style="list-style-type: none"> • The bolts, nuts, and split pins that can be seen from exterior must be free from loosening and coming off. 	<p>Fasten bolts, nuts and split pins securely.</p>
Traverse Rail	<ul style="list-style-type: none"> • Check visually on the floor. 	<ul style="list-style-type: none"> • No apparent deformation, abrasion, or damage • No other structural abnormality 	<p>Replace the Traverse Rail.</p>

Daily Inspection (Continued)**■1-11-2 Wire Rope**



Item	Check method	Criteria	When failed
Type	• Check visually.	• Same as the indication on the nameplate. (outside diameter, number of strands, and direction of twist)	Use the genuine product.
Breakage of wire	• Check visually.	• No apparent breakage	Carry out the inspection item of "■2-2-2 Wire Rope" (P62) of Chapter 2, Frequent inspection.
Abrasion	• Check visually.	• No apparent abrasion	Carry out the inspection item of "■2-2-2 Wire Rope" (P62) of Chapter 2, Frequent inspection.
Rust, Corrosion	• Check visually.	• No apparent rust and corrosion	Carry out the inspection item of "■2-2-2 Wire Rope" (P62) of Chapter 2, Frequent inspection.
Kink and loss of Shape  Kink  Loss of shape	• Check visually.	• No kink or loss of shape	Carry out the inspection item of "■2-2-2 Wire Rope" (P62) of Chapter 2, Frequent inspection.
Grease	• Check visually.	• To be greased adequately	Apply grease

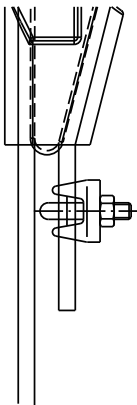Item	Check method	Criteria	When failed						
Rope End Fixing Part	<ul style="list-style-type: none"> Check visually. 	<ul style="list-style-type: none"> No strand breakage or rust No coming off of wire clip <p style="text-align: center;"><Tightening Torque of Wire Clip></p> <table border="1"> <tr> <td>Rope diameter (mm)</td> <td>φ8</td> </tr> <tr> <td>Tightening torque (N•m)</td> <td>9</td> </tr> <tr> <td>U-bolt size</td> <td>M8</td> </tr> </table>	Rope diameter (mm)	φ8	Tightening torque (N•m)	9	U-bolt size	M8	<p>Carry out the inspection item of "■2-2-2 Wire Rope" (P62) of Chapter 2, Frequent inspection.</p> <p>Tighten the wire clip securely.</p>
Rope diameter (mm)	φ8								
Tightening torque (N•m)	9								
U-bolt size	M8								

■1-11-3 Hook Block

Item	Check method	Criteria	When failed
Opening of the Hook	<ul style="list-style-type: none"> Check visually. 	<ul style="list-style-type: none"> No apparent opening of the Hook 	<p>Carry out the inspection item of "■2-2-3 Hook Block" (P64) of Chapter 2, Frequent inspection.</p>
Abrasion and corrosion of the Hook	<ul style="list-style-type: none"> Check visually. 	<ul style="list-style-type: none"> No apparent abrasion or corrosion 	<p>Carry out the inspection item of "■2-2-3 Hook Block" (P64) of Chapter 2, Frequent inspection.</p>
Deformation, Flaw, Corrosion (Whole unit)	<ul style="list-style-type: none"> Check visually. 	<ul style="list-style-type: none"> No apparent deformation, flaw and corrosion No attachment of foreign matters such as spatter No bending or twisting 	<p>Carry out the inspection item of "■2-2-3 Hook Block" (P64) of Chapter 2, Frequent inspection.</p>
Inclination and balance	<ul style="list-style-type: none"> Check visually. 	<ul style="list-style-type: none"> To have no inclination, and to be balanced 	<p>Correct the position and direction of hook block, and twist of the wire rope.</p>
Hook Latch	<ul style="list-style-type: none"> Check visually and by operation. 	<ul style="list-style-type: none"> To have no apparent deformation, and to open/close smoothly. The Hook Latch is mounted securely inside the Hook opening. 	<p>Replace the Hook Latch.</p>

Daily Inspection (Continued)

Item	Check method	Criteria	When failed
Hook movement (Rotation) 	<ul style="list-style-type: none"> Check visually and by operation. 	<ul style="list-style-type: none"> To rotate smoothly by 360 degrees. 	Replace the hook or thrust bearing for hook.
Hook sheave	<ul style="list-style-type: none"> Check visually and by operation. 	<ul style="list-style-type: none"> To move (rotate) smoothly. The groove must be free from deformation, damage, and apparent abrasion. 	Replace the hook sheave.
Hook nut	<ul style="list-style-type: none"> Check visually and by operation. 	<ul style="list-style-type: none"> No coming off of the spring pin 	Replace the spring pin.
Hook sheave cover	<ul style="list-style-type: none"> Check visually. 	<ul style="list-style-type: none"> No deformation, damage, or loosened bolt 	Replace the hook sheave cover.

■ 1-11-4 Push Button Switch

Item	Check method	Criteria	When failed
Switch body	<ul style="list-style-type: none"> Check visually. 	<ul style="list-style-type: none"> No deformation, damage and no loosened screw To have clear indication. No discoloration 	lean and repair the label or replace with a new label. Affix the label securely.

■1-11-5 Function and Performance

- Check the following item with no load.

Item	Check method	Criteria	When failed
Operational Check	<ul style="list-style-type: none"> • No-load operation 	<ul style="list-style-type: none"> • The Wire Rope can be wound smoothly. • Wire rope must be properly wound on the rope drum. • Rope guide must operate smoothly. • Idle sheave must rotate smoothly. • When the operation is stopped, the motor stops immediately. • When the Emergency Stop Button is pressed, all hoist motions stop. • When operating other push buttons while the Emergency Stop Button is pressed, the hoist does not start operation. • After canceling the Emergency Stop Button, the hoist operates normally. • To be operated in the same direction as the arrow indicated on the button. (Not to be operated in the reverse direction.) • Operation buttons must move smoothly. • Lifting and lowering operations must be smooth. • To traverse without snaking motion. 	<p>Refer to "■3-1-1 Guidance on Troubleshooting" (P98)</p> <p>Check the cause of failure, and take measures.</p>
Brake (before operation)	<ul style="list-style-type: none"> • No-load operation 	<ul style="list-style-type: none"> • Brake must operate reliably to stop the hook block immediately. 	<p>Carry out the inspection item of "■2-3-8 Function and Performance" (P80) of Chapter 2, Frequent inspection.</p>
Upper/Lower Limit Stop Device	<ul style="list-style-type: none"> • No-load operation 	<ul style="list-style-type: none"> • Motor must stop automatically when operating the hoist to the preset upper limit and lower limit. 	<p>Refer to "■3-1-1 Guidance on Troubleshooting" (P98)</p> <p>Check the cause of failure, and take measures.</p>
Abnormal Sound	<ul style="list-style-type: none"> • No-load operation 	<ul style="list-style-type: none"> • No abnormal sounds and vibrations 	<p>Refer to "■3-1-1 Guidance on Troubleshooting" (P98)</p> <p>Check the cause of failure, and take measures.</p>

Daily Inspection (Continued)

Chapter 2

Inspection

This chapter describes the frequent inspection items, the periodic inspection items, and the disassembly procedures.

Refer to Chapter 1 “Handling the Product” for the daily inspection items.

Inspection is the first step toward safety. Carry out daily inspection, frequent inspection and periodic inspection for safe use of the product.

2-1 Safety Precautions	60	2-4-3 Guidelines on Timing for Replacing Reduction Gear, Motor, Brake, Sheave, and Wheel	92
2-1-1 General Matters related to Inspection	60		
2-2 Frequent Inspection	62		
2-2-1 Appearance	62		
2-2-2 Wire Rope	62		
2-2-3 Hook Block	64		
2-2-4 Push Button Switch	65		
2-2-5 Main Unit: Lifting Unit	66		
2-2-6 Lifting Reduction Gear	69		
2-2-7 Trolley Frame	70		
2-2-8 Control Box	71		
2-2-9 Power Supply and Wiring	72		
2-2-10 Electric Characteristics	72		
2-2-11 Function and Performance	73		
2-3 Periodic Inspection	74		
2-3-1 Appearance	75		
2-3-2 Main Unit	75		
2-3-3 Lifting Reduction Gear	76		
2-3-4 Main Unit: Traverse Unit	77		
2-3-5 Traversing Reduction Gear	78		
2-3-6 Grease	79		
2-3-7 Electric Characteristics	79		
2-3-8 Function and Performance	80		
2-3-9 Wire Rope Replacement Procedure	81		
2-4 Guidelines on Replacement of Lubricants and Parts	91		
2-4-1 Checking Number of Starts and Operating Hours ...	91		
2-4-2 Guidelines on Timing of Replacement or Application of Lubricants	92		

2-1 Safety Precautions

■2-1-1 General Matters related to Inspection

⚠ WARNING



Prohibited

- **Periodic inspection of the hoist must be performed by maintenance engineer.**
Failure to comply with this instruction may make it impossible to properly perform inspection/checking and disassembling/assembling of the hoist, and may not only result in failure to obtain normal function and performance of the hoist, but may also lead to serious accidents.
- **Do not use the part exceeding the service limit or criteria and the parts other than genuine part.**
Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause failure of the hoist and may lead to serious accidents.
Even if the part is genuine KITO part, it cannot be used for other models. Refer to Disassembly/Assembly Manual separately provided for the correct use of the part.
- **Do not carry out the inspection of the hoist with a lifted load.**
Failure to comply with this instruction may lead to unexpected serious accidents.
- **Turn off the main power when carrying out the inspection.**
Failure to comply with this instruction can lead to electric shock, which may seriously affect the health of a human body.
- **Do not use lubricant such as oil and grease in places with fire or sparks.**
Failure to comply with this instruction may lead to serious accidents such as fire.



Mandatory

- **Carry out regular inspections (frequent and periodic). Keep the record of the frequent and periodic inspections. Carry out the inspections at an appropriate frequency, paying attention to conditions obtained from daily inspection and operating sound.**
The record of inspection makes it possible to obtain information on the conditions of hoist such as function and performance of the hoist, and the cycle of part replacement, and facilitates maintenance planning for the hoist. Failure to carry out the inspection may make it impossible to maintain normal function and performance of the hoist, resulting in failure to use the hoist safely and leading to serious accidents.
- **Put the hoist on the floor or work bench when performing the repair and disassembling of the hoist.**
Failure to comply with this instruction may make it impossible to properly perform inspection/checking and disassembling/assembling of the hoist, and may not only result in failure to obtain normal function and performance of the hoist, but may also lead to serious accidents.
- **Even if the components of the hoist does not exceed the service limit, replace the parts when the hoist has exceeded the total operating hours derived from the grade indicated on the hoist and the load factor.**
Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause failure of the hoist and may lead to serious accidents.
- **Do not use the hoist when any abnormality is observed during the inspection. Indicate "FAILURE" on the hoist and contact with maintenance engineer or KITO for repair.**
Failure to comply with this instruction may lead to unexpected serious accidents.
- **Be sure to carry out the functional and performance check in the regular (frequent and periodic) inspections.**
Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause failure of the hoist and may lead to serious accidents.
- **When performing the functional and performance check, be sure to perform the check first at no load and then at the rated load.**
Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause failure of the hoist and may lead to serious accidents.
- **Indicate "CHECKING" when performing the inspection.**
When a crane is operated erroneously during the inspection, it may result in accidents such as fall-off of parts and tools as well as fall-down of a person.

⚠ CAUTION



Mandatory

- **Wear protection equipment such as protection goggles and gloves depending on the work contents.**
Otherwise it may result in the injury due to scattered oil or sharp edge of a part.

- **Pay attention to the work method, work procedure and work posture.**
Weight of the product or parts may cause your hand to get caught or may hurt your waist.
Especially be careful for the work on an unstable scaffold such as the work at a highly lifted place using a stepladder.

- **Wear a helmet and a safety belt when working at a highly lifted place.**
Otherwise it may result in injury or fall-down of a person.

- **Adequately remove the oil attached to the product or spilt on the floor.**
Otherwise it may result in injury due to dropping of the product or slipping.

- **Keep the work area clean when disassembling the product.**
Assembling or mixing the parts other than genuine parts may result in damage of the product or accidents due to defective operation.

NOTE

- **When performing the frequent inspection, carry out the daily inspection at the same time.**
- **When performing the periodic inspection, carry out the frequent inspection and the daily inspection at the same time.**
- **When detecting any abnormality due to erroneous use during inspection, the maintenance engineer shall instruct the user for correct use of the hoist.**
Ex. (1) The damage of the Wire Rope and the Rope Guide (Cause: pulling in an inclined direction)
(2) The loosening or deformation of the Upper Limit Emergency Stop Device (Cause: habitual use of the Upper Limit Emergency Stop Device)

2-2 Frequent Inspection

⚠ WARNING



Mandatory

- **Be sure to carry out the functional and performance check in the frequent inspection.**
Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause failure of the hoist and may lead to serious accidents.

NOTE

When performing the frequent inspection, carry out the daily inspection at the same time.


Frequent Inspection








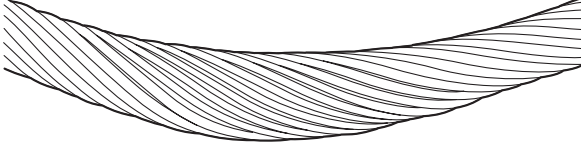

The maintenance engineer, or the person appointed by the maintenance engineer, shall carry out the frequent inspection to check the conditions of the hoist by visual check, measurement, and operation under the rated load. Also, keep and store the record of inspection.

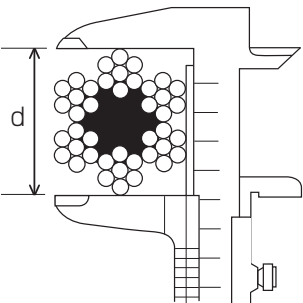■ 2-2-1 Appearance

Item	Check method	Criteria	When failed
Traverse Rail	• Check visually.	<ul style="list-style-type: none"> • No bending of traverse surface • No deficiencies that affect traversing motion • No oil stain 	Replace the Traverse Rail.
Stopper	• Check visually.	<ul style="list-style-type: none"> • No loosened bolt • No apparent deformation or damage 	<ul style="list-style-type: none"> • Tighten the Stopper. • Replace the Stopper. • Avoid the Stopper from being struck constantly.



■ 2-2-2 Wire Rope


Item	Check method	Criteria	When failed															
Breakage of wire	Check by measurement.	<ul style="list-style-type: none"> • The ratio of broken wires in a single strand must be less than 10%. • The number of wires with valley breaks in a single strand must be less than two. 	Replace the Wire Rope.															
Abrasion	Check by measurement. 	<ul style="list-style-type: none"> • Measure a part of the rope with significant abrasion and check that the diameter d is not reduced by 7% or more. (For the standard diameter d of the rope, refer to the values on page 10.) <table border="1" data-bbox="762 1908 1444 2105"> <thead> <tr> <th rowspan="2">Capacity</th> <th colspan="3">Wire Rope</th> </tr> <tr> <th>Nominal diameter (mm)</th> <th>Structure</th> <th>10% of the number of wires</th> </tr> </thead> <tbody> <tr> <td>2.8t,3t,3.2t</td> <td>ø8</td> <td>6x29 (Fi)</td> <td>17 wires</td> </tr> <tr> <td>4.8t,5t</td> <td>ø8</td> <td>6x26 (P·WS)</td> <td>15 wires</td> </tr> </tbody> </table>	Capacity	Wire Rope			Nominal diameter (mm)	Structure	10% of the number of wires	2.8t,3t,3.2t	ø8	6x29 (Fi)	17 wires	4.8t,5t	ø8	6x26 (P·WS)	15 wires	Replace the Wire Rope.
Capacity	Wire Rope																	
	Nominal diameter (mm)	Structure	10% of the number of wires															
2.8t,3t,3.2t	ø8	6x29 (Fi)	17 wires															
4.8t,5t	ø8	6x26 (P·WS)	15 wires															

Item	Check method	Criteria	When failed
Damage to the shape	Check visually.	<ul style="list-style-type: none"> No apparent damage to the shape as shown below. 	Replace the Wire Rope.
Wire getting out from the strands		Plus kink (the twist is partly tightened)	
			
Core jutting out		Minus kink (the twist is partly loosened)	
			
Partly reduced diameter of the strands		Waves (spiral-shaped)	
			
Strand getting out from other strands		Basket shape (swollen in a basket shape)	
			
Flat rope (partly pressed to be flat)			
			


Frequent Inspection (Continued)

■ 2-2-3 Hook Block

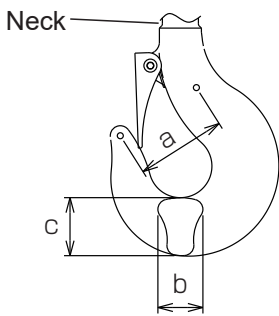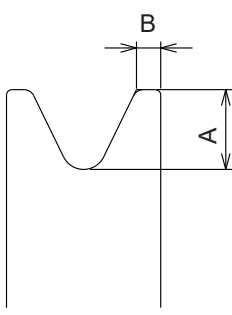Item	Check method	Criteria	When failed																					
Opening of the Hook	<ul style="list-style-type: none"> Check by measurement. <div style="text-align: center; margin-top: 20px;">  </div>	<ul style="list-style-type: none"> The opening of the Hook (Dimension a) must not exceed the limit value 5%. The abrasion of the dangerous section (Dimensions b and c) must not exceed 10%. The twist angle of the tip of the Hook must not exceed 10 degrees. The neck must not have plastic deformation. <table border="1" style="margin: 10px auto; border-collapse: collapse; text-align: center;"> <thead> <tr> <th rowspan="3"></th> <th rowspan="3">Capacity (t)</th> <th colspan="4">Hook</th> </tr> <tr> <th colspan="2">Dimension a (mm)</th> <th colspan="2">Dimension b (mm)</th> </tr> <tr> <th>Standard</th> <th>Limit</th> <th>Standard</th> <th>Limit</th> </tr> </thead> <tbody> <tr> <td>Low Headroom Type</td> <td>2.8, 3, 3.2 4.8, 5.0</td> <td>90 105</td> <td>45 53</td> <td>40.5 47.7</td> <td>58 67</td> <td>52.2 60.3</td> </tr> </tbody> </table> <p style="font-size: small; margin-top: 5px;">*) The above values of Dimension a are for reference. Perform checking based on the values measured at purchasing.</p>		Capacity (t)	Hook				Dimension a (mm)		Dimension b (mm)		Standard	Limit	Standard	Limit	Low Headroom Type	2.8, 3, 3.2 4.8, 5.0	90 105	45 53	40.5 47.7	58 67	52.2 60.3	Replace the Hook.
	Capacity (t)	Hook																						
		Dimension a (mm)			Dimension b (mm)																			
		Standard	Limit	Standard	Limit																			
Low Headroom Type	2.8, 3, 3.2 4.8, 5.0	90 105	45 53	40.5 47.7	58 67	52.2 60.3																		
Abrasion and Corrosion of the Hook	<ul style="list-style-type: none"> Check by measurement. 	<ul style="list-style-type: none"> No apparent abrasion and corrosion Each dimension must not exceed the limit shown in the table above. 	Replace the Hook.																					
Hook Sheave	<ul style="list-style-type: none"> Check by measurement. <div style="text-align: center; margin-top: 20px;">  </div>	<ul style="list-style-type: none"> The abrasion of the groove (A) must not exceed 15% of the wire rope diameter. The abrasion of the side wall (in thickness) (B) must not exceed 10% of the wire rope diameter. No deficiencies that damage the wire rope No cracks <table border="1" style="margin: 10px auto; border-collapse: collapse; text-align: center;"> <thead> <tr> <th rowspan="3"></th> <th rowspan="3">Capacity (t)</th> <th colspan="4">Hook Sheave</th> </tr> <tr> <th colspan="2">Dimension A (mm)</th> <th colspan="2">Dimension B (mm)</th> </tr> <tr> <th>Standard</th> <th>Limit</th> <th>Standard</th> <th>Limit</th> </tr> </thead> <tbody> <tr> <td>Low Headroom Type</td> <td>2.8 to 5</td> <td>15</td> <td>16.2</td> <td>4.6</td> <td>3.8</td> </tr> </tbody> </table>		Capacity (t)	Hook Sheave				Dimension A (mm)		Dimension B (mm)		Standard	Limit	Standard	Limit	Low Headroom Type	2.8 to 5	15	16.2	4.6	3.8	Replace the Hook Sheave.	
	Capacity (t)	Hook Sheave																						
		Dimension A (mm)			Dimension B (mm)																			
		Standard	Limit	Standard	Limit																			
Low Headroom Type	2.8 to 5	15	16.2	4.6	3.8																			

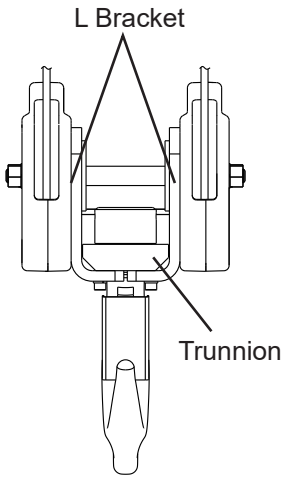Item	Check method	Criteria	When failed
L Bracket, Trunnion	<ul style="list-style-type: none"> • Check visually.  <p>The diagram shows a top-down view of a hook block assembly. Two vertical L-shaped brackets are positioned on either side of a central trunnion. The trunnion is a horizontal shaft with a hook at the bottom. Labels 'L Bracket' and 'Trunnion' point to their respective parts.</p>	<ul style="list-style-type: none"> • No deformation, damage, or loosened nut • No apparent abrasion of holes 	Replace the Hook Block. Tighten securely. Nut tightening torque values: 153 N•m for M16



■2-2-4 Push Button Switch

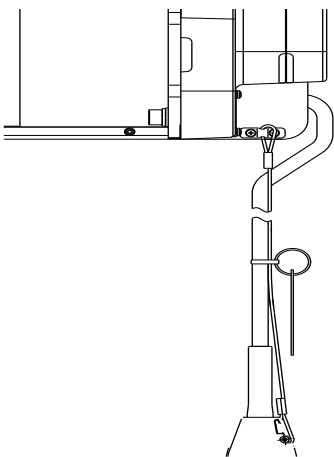Item	Check method	Criteria	When failed
Push Button Switch Cord	<ul style="list-style-type: none"> • Check visually.  <p>The diagram shows a side view of a push button switch mechanism. A horizontal cord is attached to the top of the switch housing. A vertical shaft with a button on top is connected to the switch mechanism. A protection wire is shown looping around the cord and the button mechanism.</p>	<ul style="list-style-type: none"> • To be attached securely • Protection Wire must prevent external force from being applied on the cord (cable) when Push Button is pulled. • To have no damage 	Tie the Push Button Switch Cord and the Protection Wire to the unit properly.


Frequent Inspection (Continued)



■2-2-5 Main Unit: Lifting Unit

Item	Check method	Criteria	When failed
Reduction Gear, Back Frame, Support Shaft, Trolley Frame Joint (joint plate)	<ul style="list-style-type: none"> • Check visually. 	<ul style="list-style-type: none"> • No apparent deformation, abrasion, or damage • No abnormality at connected parts • No loosening of fasteners such as bolts 	Replace the Reduction Gear, Back Frame, Support Shaft, or Trolley Frame. Tighten the bolts securely.
Rope Drum	<ul style="list-style-type: none"> • Check visually and by measurement. 	<ul style="list-style-type: none"> • No apparent deformation, abrasion, or cracking • The abrasion in the groove must not exceed 20% of the wire rope diameter. 	Contact KITO.
Rope Clamp	<ul style="list-style-type: none"> • Check visually. 	<ul style="list-style-type: none"> • No loosening, displacement, or coming off 	Tighten the Rope Clamp securely. Bolt tightening torque values: 18 N•m for M8

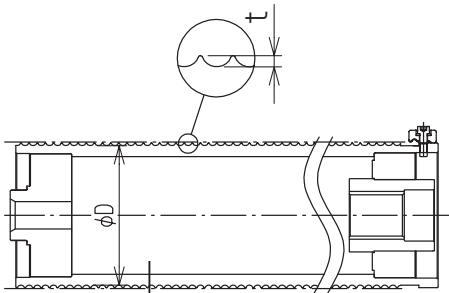
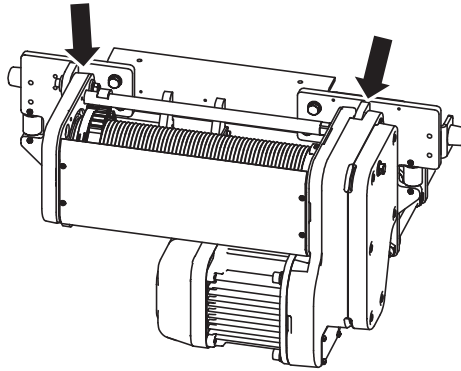


	Capacity (t)	Dimension t (mm)		Dimension D (mm)	
		Standard	Limit	Standard	Limit
Low Headroom Type	2.8 to 5	3	4.6	φ152	φ148.8

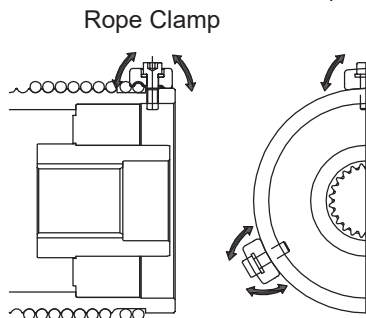


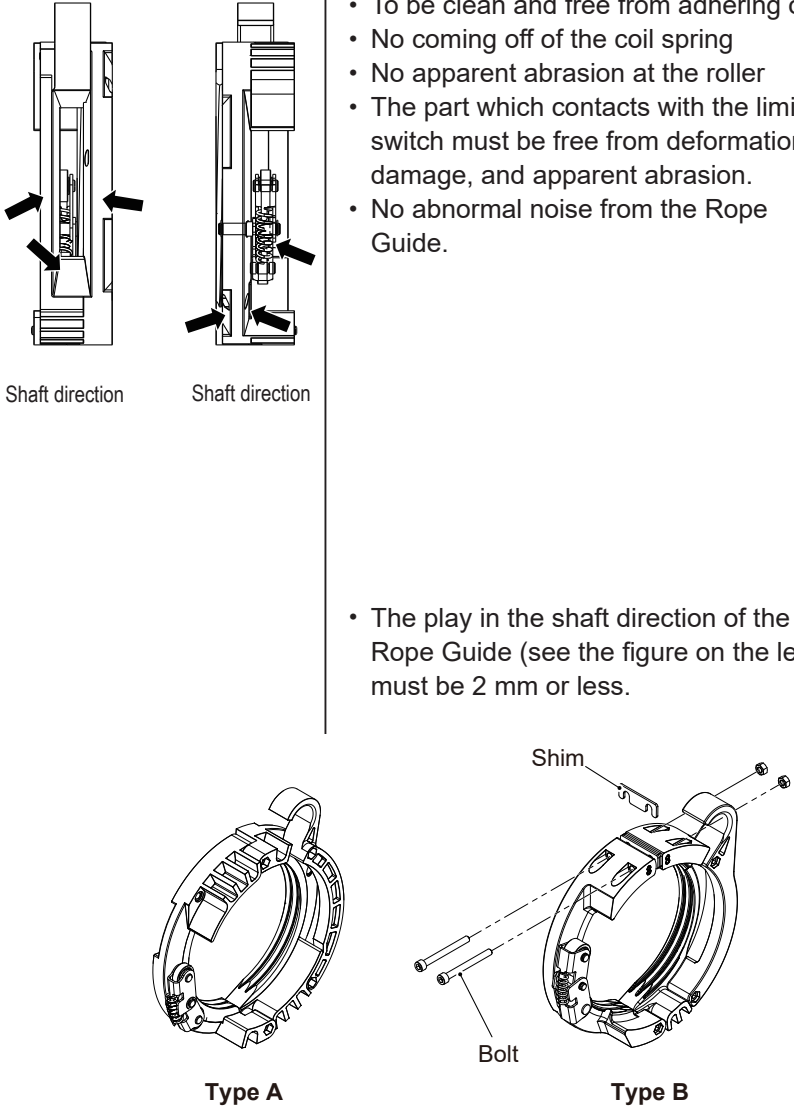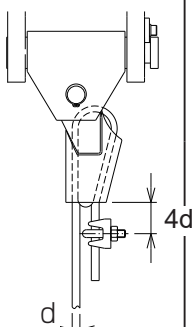Item	Check method	Criteria	When failed
<p>Rope Guide</p>  <p>The diagrams illustrate the rope guide assembly. The top part shows two cross-sectional views of the rope guide on a shaft, with arrows indicating the 'Shaft direction'. Below these are two views of the rope guide housing: 'Type A' and 'Type B'. 'Type B' shows a 'Shim' and a 'Bolt' used for adjustment.</p>	<ul style="list-style-type: none"> Check visually and by operation./ Check the amount of play. 	<ul style="list-style-type: none"> The guide must be free from deformation, damage, and apparent abrasion. To be clean and free from adhering oil No coming off of the coil spring No apparent abrasion at the roller The part which contacts with the limit switch must be free from deformation, damage, and apparent abrasion. No abnormal noise from the Rope Guide. <ul style="list-style-type: none"> The play in the shaft direction of the Rope Guide (see the figure on the left) must be 2 mm or less. 	<p>Replace the components of the Rope Guide. Clean the Rope Guide. Apply grease to the following locations of the Rope Guide, etc. (See below)</p> <ul style="list-style-type: none"> Guide Roller part Convex part engaged with the Drum Rope Drum groove <ul style="list-style-type: none"> For Type A: Replace the Rope Guide. For Type B: Loosen the bolts and remove the Shim to adjust the amount of play.
<p>End Fixing Part</p>  <p>The diagram shows the end fixing part of a wire rope. It features a wire clip and a nut. The distance from the lower end of the socket to the wire clip is labeled as $4d$, and the diameter of the wire is labeled as d.</p>	<ul style="list-style-type: none"> Check visually. 	<ul style="list-style-type: none"> No apparent deformation, abrasion, or damage No loosened nut The wire clip must be fixed at a distance of four times the wire rope diameter from the lower end of the socket. 	<p>Replace the parts. Tighten the nuts securely. Torque value: 9 N•m for M8</p>

Frequent Inspection (Continued)



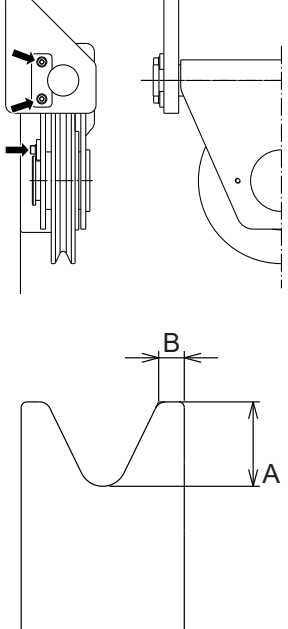
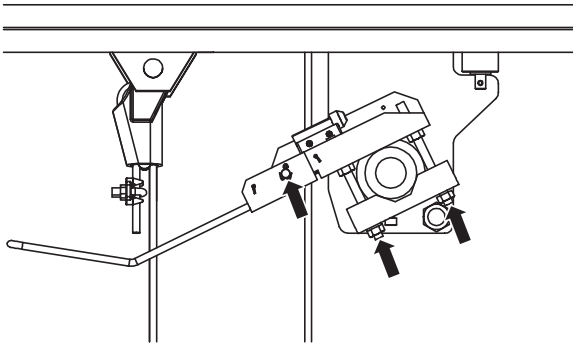
Item	Check method	Criteria	When failed																				
Idle Sheave	<ul style="list-style-type: none"> Check visually and by measurement. 	<ul style="list-style-type: none"> No loosening or coming off of the bolts To move smoothly No deformation, damage, or apparent abrasion The abrasion (in diameter) of the groove must not exceed 15% of the wire rope diameter. The abrasion of the side wall (in thickness) (B) must not exceed 10% of the wire rope diameter. No deficiencies that damage the wire rope No cracks <table border="1" data-bbox="746 745 1369 891"> <thead> <tr> <th rowspan="3"></th> <th rowspan="3">Capacity (t)</th> <th colspan="4">Sheave</th> </tr> <tr> <th colspan="2">Dimension A (mm)</th> <th colspan="2">Dimension B (mm)</th> </tr> <tr> <th>Standard</th> <th>Limit</th> <th>Standard</th> <th>Limit</th> </tr> </thead> <tbody> <tr> <td>Low Headroom Type</td> <td>2.8 to 5</td> <td>15</td> <td>16.2</td> <td>4.6</td> <td>3.8</td> </tr> </tbody> </table>		Capacity (t)	Sheave				Dimension A (mm)		Dimension B (mm)		Standard	Limit	Standard	Limit	Low Headroom Type	2.8 to 5	15	16.2	4.6	3.8	Tighten securely. Replace the Idle Sheave.
	Capacity (t)	Sheave																					
		Dimension A (mm)			Dimension B (mm)																		
		Standard	Limit	Standard	Limit																		
Low Headroom Type	2.8 to 5	15	16.2	4.6	3.8																		
Upper Limit Emergency Stop Device	<ul style="list-style-type: none"> Check visually. 	<ul style="list-style-type: none"> The lever must be free from large deformation, damage, and abrasion. To move smoothly To be clean No loosened nut or bolt No coming off of split pins 	Replace or clean the parts of the Upper Limit Emergency Stop Device. Tighten the nuts and bolts securely. Replace split pins. Torque value: 35 N•m for M10 2 N•m for M4																				

■2-2-6 Lifting Reduction Gear

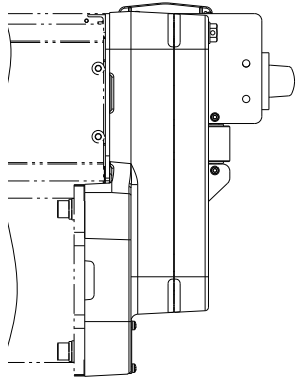Item	Check method	Criteria	When failed
Gear Case, Body	<ul style="list-style-type: none"> • Check visually. 	<ul style="list-style-type: none"> • No apparent deformation, damage, or cracking • No leakage of grease 	Replace the Reduction Gear. Tighten the bolts securely. 40 N•m for M10

Frequent Inspection (Continued)

■ 2-2-7 Trolley Frame

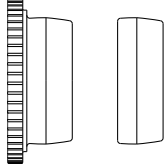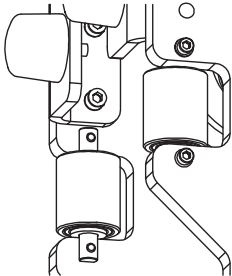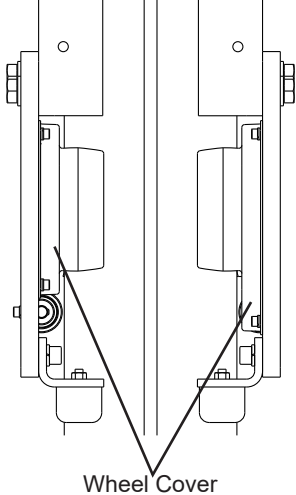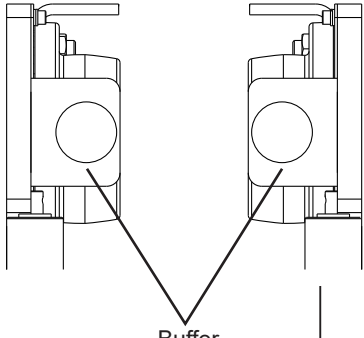Item	Check method	Criteria	When failed
Wheel 	<ul style="list-style-type: none"> • Check visually. 	<ul style="list-style-type: none"> • No apparent deformation, damage, or abrasion • No oil stain on the running surface • The teeth must be lubricated with sufficient grease. 	Replace the parts. Clean the stained parts. Apply grease.
Guide Roller 	<ul style="list-style-type: none"> • Check visually. 	<ul style="list-style-type: none"> • No apparent deformation, damage, or abrasion • The Guide Roller must rotate smoothly. • No loosened socket bolt 	Replace the Guide Roller components. Tighten securely. Torque value: 18 N•m for M8
Wheel Cover  <p style="text-align: center;">Wheel Cover</p>	<ul style="list-style-type: none"> • Check visually. 	<ul style="list-style-type: none"> • No apparent deformation or damage • No loosened bolt 	Replace the Wheel Cover. Tighten the bolts securely. Torque value: 6 N•m for M6
Buffer, Buffer Bracket  <p style="text-align: center;">Buffer</p>	<ul style="list-style-type: none"> • Check visually. 	<ul style="list-style-type: none"> • No apparent bending or damage • No loosened bolt 	Replace the Buffers and Buffer Brackets. Tighten the bolts securely. Torque value: 35 N•m for M10

■2-2-8 Control Box



Item	Check method	Criteria	When failed
Appearance	<ul style="list-style-type: none"> • Check visually. 	<ul style="list-style-type: none"> • To be attached securely to the Main Unit • No apparent deformation or damage • The cables must be connected securely without slack. 	Replace the Control Box. Attach the Control Box securely. Connect the cables securely.
Internal Wiring	<ul style="list-style-type: none"> • Check visually. 	<ul style="list-style-type: none"> • The electrical parts must be fixed securely. • The lead wire must not be slack. • No wire breakage, burning, or welding. • The connector must be securely inserted. 	Connect the wiring securely. Replace the wiring with new wiring, referring to “■3-1-1 Guidance on Troubleshooting (P98-99)”.
Error Code Display	<ul style="list-style-type: none"> • Check visually. 	<ul style="list-style-type: none"> • No error must be shown on the display of the inverter. 	Check the error code and remove the cause or take measures, referring to the Inverter Manual separately provided.
Contamination and attachment of foreign matters	<ul style="list-style-type: none"> • Check visually. 	<ul style="list-style-type: none"> • No contamination with water droplets or foreign matters 	Remove the foreign matter.

Frequent Inspection (Continued)

■ 2-2-9 Power Supply and Wiring



Item	Check method	Criteria	When failed
Power Cable	<ul style="list-style-type: none"> • Check visually. 	<ul style="list-style-type: none"> • To have enough length • To have no damage • To be connected securely 	Replace the Power Cable.
External Relay Cable	<ul style="list-style-type: none"> • Check visually. 	<ul style="list-style-type: none"> • To have enough length • No damage • To be connected securely 	Replace the External Relay Cable. Connect the cable securely.

■ 2-2-10 Electric Characteristics

Item	Check method	Criteria	When failed
Source Voltage	<ul style="list-style-type: none"> • Check by measurement. 	<ul style="list-style-type: none"> • The rated voltage must be supplied. <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p style="text-align: center;"> WARNING</p> <div style="display: flex; align-items: center;">  <ul style="list-style-type: none"> • Do not perform inspections with wet hands. • Do not directly touch the part where voltage is supplied. </div> <p style="margin-top: 10px;">Failure to comply with these instructions may lead to serious accidents such as fire due to failure of the hoist.</p> </div>	Supply proper power.

■2-2-11 Function and Performance

● Perform the following inspections with no load.

Item	Check method	Criteria	When failed
Abnormal noise	<ul style="list-style-type: none"> No-load operation 	<ul style="list-style-type: none"> No irregular rotating sound No howling sound of the Motor or scraping sound of the Brake No abnormal sound from the place near the Rope Guide No abnormal sound from the inside of the Reduction Gear <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p style="text-align: center;"> WARNING</p> <div style="display: flex; align-items: flex-start;"> <div style="text-align: center; margin-right: 10px;">  <p>Mandatory</p> </div> <div> <ul style="list-style-type: none"> Be sure to carry out the functional and performance check in the regular (frequent and periodic) inspections. Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause failure of the hoist and may lead to serious accidents. </div> </div> </div>	Take measures, referring to "■3-1-1 Guidance on Troubleshooting (P98-99)".

2-3 Periodic Inspection

⚠ WARNING



Mandatory


- **Put the hoist on the floor or work bench when performing the repair and disassembling of the hoist.**
Failure to comply with this instruction may make it impossible to properly perform inspection/checking and disassembling/assembling of the hoist, and may not only result in failure to obtain normal function and performance of the hoist, but may also lead to serious accidents.
- **Be sure to carry out the functional and performance check in the regular (frequent and periodic) inspections.**
Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause failure of the hoist and may lead to serious accidents.
- **Wear insulating gloves when measuring voltage.**
Failure to comply with this instruction can lead to electric shock, which may seriously affect the health of a human body.
- **When measuring the electric characteristics (insulation resistance, but except voltage measurement), turn off the power.**
Failure to comply with this instruction can lead to electric shock, which may seriously affect the health of a human body.

NOTE


When performing the periodic inspection, carry out the frequent inspection and the daily inspection at the same time.

The maintenance engineer, or the person appointed by the maintenance engineer, shall carry out the periodic inspection to check the conditions of the hoist by checking the operation status with the inverter (Refer to "■2-4-1 Checking Number of Starts and Operating Hours" (P91)), disassembling, measurement, and operation under the rated load.

■2-3-1 Appearance

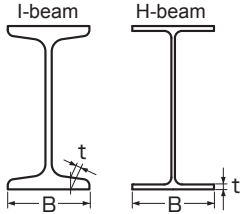Item	Check method	Criteria	When failed
Traverse Rail	<ul style="list-style-type: none"> Check by measurement. 	<ul style="list-style-type: none"> The abrasion in width of the rail must be 5% or less of the standard value. The abrasion in thickness of the rail must be 10% or less of the standard value. (Refer to P22) <p>* In the measurement, measure first the unworn part and then the worn part, and then compare the measurements.</p>	Replace or repair the rail.


■2-3-2 Main Unit

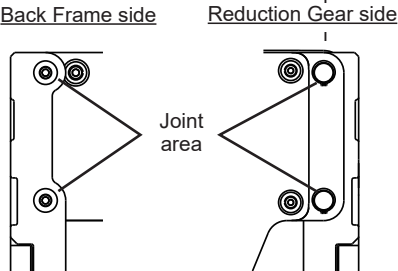Item	Check method	Criteria	When failed
Joint areas at the Body and Back Frame with the Trolley Frame	<ul style="list-style-type: none"> Check by measurement. 	<ul style="list-style-type: none"> The difference between vertical and horizontal dimensions of the holes for connection with the Traverse Unit must not exceed 0.5 mm. 	Replace the wear, deformed or damaged part.
Upper Limit Emergency Stop Device	<ul style="list-style-type: none"> Check visually and by operation. 	<ul style="list-style-type: none"> To be fixed securely without looseness at mounting part. Perform lifting operation with no load and check that the Hook Block pushes up the lever to immediately stop the lifting operation. Before the inspection, be sure to adjust the Upper/Lower Limit Stop Device so that the device will not be activated. After the inspection, be sure to return the position of the Upper/Lower Limit Stop Devices. (See "1-8 Setting Upper/Lower Limit Stop Device" (P31).) 	Mount the Upper Limit Emergency Stop Device securely. Take measures, referring to "■3-1-1 Guidance on Troubleshooting (P98-99)".
Upper/Lower Limit Stop Device	<ul style="list-style-type: none"> Check by operation. 	<ul style="list-style-type: none"> The Upper/Lower Limit Stop Device must operate normally (when checked under no load). 	Take measures, referring to "■3-1-1 Guidance on Troubleshooting (P98-99)".

Periodic Inspection (Continued)



■2-3-3 Lifting Reduction Gear

Item	Check method	Criteria	When failed
Gear Case, Body	<ul style="list-style-type: none"> • Check visually. 	<ul style="list-style-type: none"> • No abrasion, deformation, or damage on the inner surface • No displacement (coming off of positioning pin) 	Replace the Reduction Gear.
Bearing	<ul style="list-style-type: none"> • Check the operating hours by visual inspection and using inverter. 	<ul style="list-style-type: none"> • No apparent abrasion, flaw, or damage • To rotate smoothly • The total operating hours must not exceed the guideline for replacement (1600 H). 	Replace the Bearing.
Gear Shaft, Gear 2, Gear 3, Gear 4, Gear 6, Pinion	<ul style="list-style-type: none"> • Check for abnormal sound and vibration. • Check the operating hours using inverter. 	<ul style="list-style-type: none"> • No abnormal sound and vibration from the Reduction Gear during operation • The total operating hours must not exceed the guideline for replacement (1600 H). 	Replace the Reduction Gear.
Oil Seal and Packing	<ul style="list-style-type: none"> • Check visually. 	<ul style="list-style-type: none"> • No deformation or cracking • No leakage of oil 	Replace the parts.

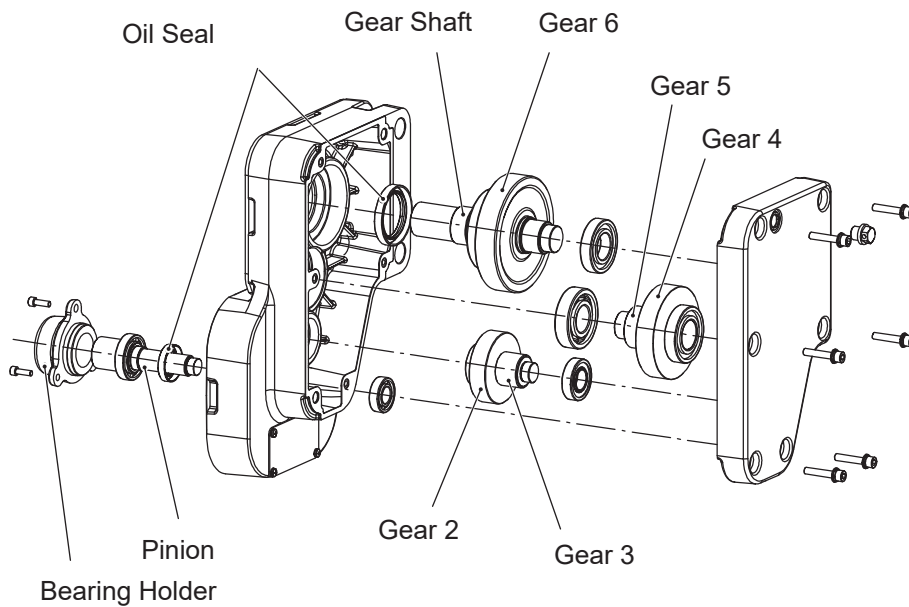

*After disassembling and inspecting the reduction gear, apply lubricant according to the instructions on "■2-4-2 Guidelines on Timing of Replacement or Application of Lubricants" (P92).


■2-3-4 Main Unit: Traverse Unit

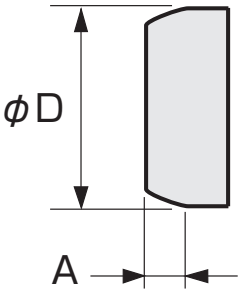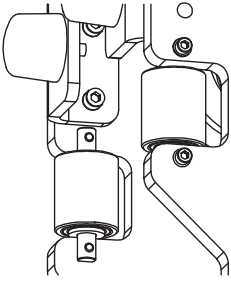Item	Check method	Criteria	When failed														
Trolley Frame, Beam, Suspension Shaft, and Adjusting Bolt	<ul style="list-style-type: none"> Check visually and by measurement. 	<ul style="list-style-type: none"> No apparent deformation, abrasion, or damage No abnormality at welded parts No loosening of fasteners such as bolts 	Replace the Trolley Frame, Beam, Suspension Shaft, or Adjusting Bolt. Tighten the bolts and screws. Refer to Disassembly/Assembly Manual for the torque values.														
Wheel	<ul style="list-style-type: none"> Check visually and by measurement. 	<ul style="list-style-type: none"> The Dimension D must not be reduced to below the limit value due to abrasion of the running surface. The difference (ellipticity) in the running surface diameter must not exceed 1 mm. <table border="1" data-bbox="742 1070 1153 1176"> <thead> <tr> <th rowspan="2">Capacity (t)</th> <th colspan="2">Dimension A (mm)</th> <th colspan="2">Dimension D (mm)</th> </tr> <tr> <th>Standard</th> <th>Standard</th> <th>Standard</th> <th>Limit</th> </tr> </thead> <tbody> <tr> <td>2.8 to 5</td> <td>20</td> <td>125</td> <td>125</td> <td>112.5</td> </tr> </tbody> </table> <p>* The Dimension A indicates the position to measure the Dimension D.</p>	Capacity (t)	Dimension A (mm)		Dimension D (mm)		Standard	Standard	Standard	Limit	2.8 to 5	20	125	125	112.5	Replace the Wheel.
Capacity (t)	Dimension A (mm)			Dimension D (mm)													
	Standard	Standard	Standard	Limit													
2.8 to 5	20	125	125	112.5													
Guide Roller	<ul style="list-style-type: none"> Check visually and by measurement. 	<ul style="list-style-type: none"> The abrasion in the outside diameter must not exceed 1 mm (when compared with unworn parts). 	Replace the Guide Roller.														

Periodic Inspection (Continued)

■2-3-5 Traversing Reduction Gear

Item	Check method	Criteria	When failed
Gear Case and Break Bracket	<ul style="list-style-type: none"> Check visually. 	<ul style="list-style-type: none"> No abrasion, deformation, or damage on the inner surface No displacement 	Replace the Traversing Reduction Gear.
Bearing	<ul style="list-style-type: none"> Check the operating hours by visual inspection and using inverter. 	<ul style="list-style-type: none"> No apparent abrasion, flaw, or damage To rotate smoothly The total operating hours must not exceed the guideline for replacement (800 H). 	Replace the Bearing.
Gear 2, Pinion, and Motor Shaft	<ul style="list-style-type: none"> Check the operating hours by visual inspection and using inverter. 	<ul style="list-style-type: none"> No apparent abrasion, deformation, or damage The total operating hours must not exceed the guideline for replacement (800 H). The abrasion of the tooth must not exceed 10% of the tooth thickness. 	Replace the Traversing Reduction Gear.
Packing	<ul style="list-style-type: none"> Check visually. 	<ul style="list-style-type: none"> No leakage of oil 	Replace the Packing.

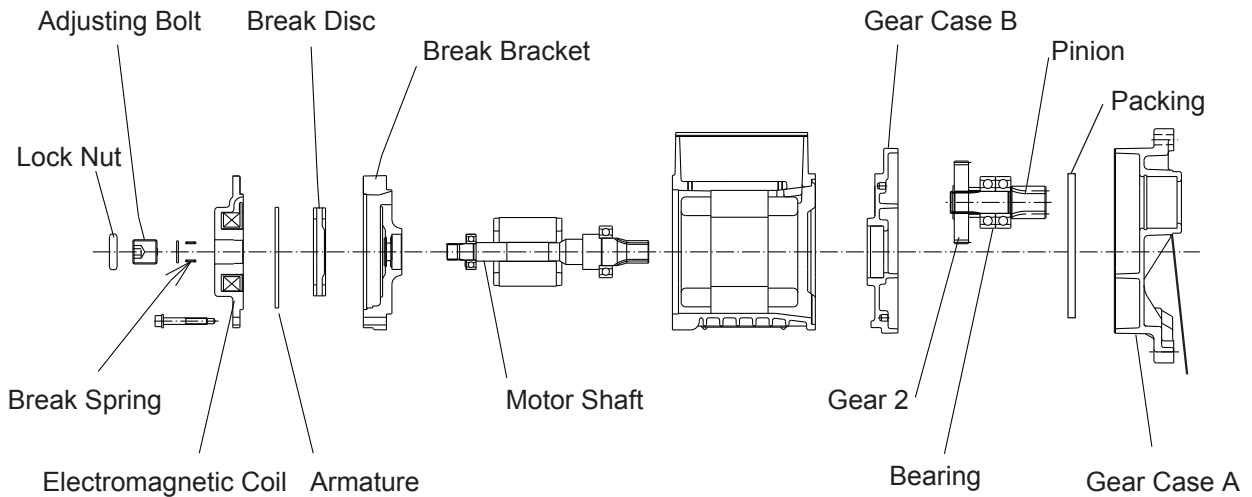

*After disassembling and inspecting the reduction gear, apply lubricant according to the instructions on "■2-4-2 Guidelines on Timing of Replacement or Application of Lubricants" (P92).

■2-3-6 Grease

Item	Check method	Criteria	When failed
Grease Leakage	<ul style="list-style-type: none"> • Check visually. 	<ul style="list-style-type: none"> • To have no leakage of grease from Packings, Oil Seals or Air Breather. 	Replace the Packings and the Oil Seals.

■2-3-7 Electric Characteristics

Item	Check method	Criteria	When failed
Insulation Resistance	<ul style="list-style-type: none"> • Check by measurement using an insulation resistance meter. 	<ul style="list-style-type: none"> • Insulation resistance must be 5 MΩ or higher. 	Replace the defective parts.
Grounding Resistance	<ul style="list-style-type: none"> • Check by measurement. 	<ul style="list-style-type: none"> • To be grounded with D-class grounding (with grounding resistance of 100 Ω or lower). 	Make a grounding correctly.

WARNING




Mandatory

- **Be sure to shut off the power when measuring the resistance.**
Failure to comply with this instruction may result in death or severe injury due to electric shock, etc.
- **After completion of the inspection of each part, perform the operational check for correct operation.**
Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause failure of the hoist and may lead to serious accidents.

Periodic Inspection (Continued)

■2-3-8 Function and Performance


Item	Check method	Criteria	When failed
Operational Check	<ul style="list-style-type: none"> Perform operation under the rated load. 	<ul style="list-style-type: none"> Perform inspection of the items on function/performance of daily inspection with no load, and then perform the inspection of the same items with the rated load. <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p style="text-align: center;">⚠ WARNING</p> <div style="display: flex; align-items: center;">  <p> <ul style="list-style-type: none"> Be sure to carry out the functional and performance check in the regular (frequent and periodic) inspections. Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause failure of the hoist and may lead to serious accidents such as death or severe injury. </p> </div> <p style="font-size: small; margin-top: 5px;">Mandatory</p> </div>	Take measures, referring to “■3-1-1 Guidance on Troubleshooting (P98-99)”.
Brake	<ul style="list-style-type: none"> Perform operation under the rated load. Check visually and by measurement. 	<ul style="list-style-type: none"> The stopping distance of lifting/ lowering must be within 1% of the lifting distance per minute. The stopping distance of traversing must be within 10% of the traversing distance per minute. 	Take measures, referring to “■3-1-1 Guidance on Troubleshooting (P98-99)”.

■2-3-9 Wire Rope Replacement Procedure

To replace a Wire Rope, lower the Wire Rope Hoist body or the Hook Sheave onto the floor to sag the rope.


■ Removing Wire Rope

Follow the procedure below to remove the Wire Rope.

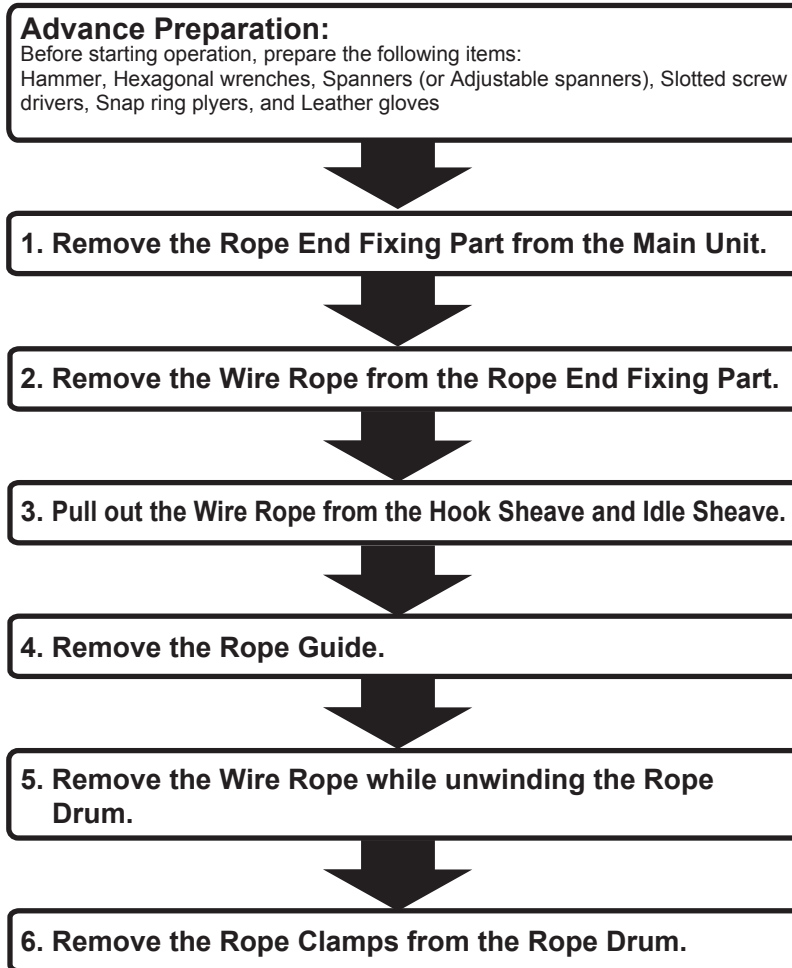


■ Removing Wire Rope

- 1) Remove the snap ring from the hanger support shaft supporting the Rope End Fixing Part of the Main Unit.

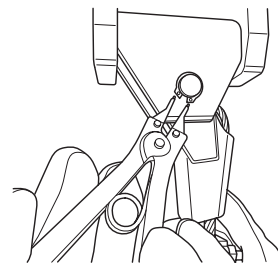


- 2) Pull out the hanger support shaft from inside.

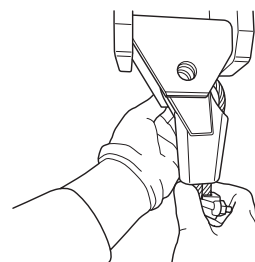


Periodic Inspection (Continued)

- 3) Remove the socket, and then the Wire Clip at the rope end.


⚠ CAUTION
Your hand may be injured. Wear gloves, etc., and be careful of frayed wires at the rope end during operation.

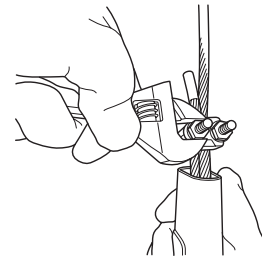


- 4) Tap lightly the tip of the cotter, and pull out the cotter from the socket.

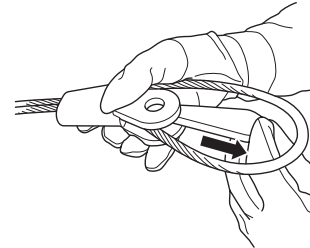


If it is difficult to tap the tip of the cotter, put a slotted screw driver on the cotter as shown in the figure and tap the driver with a hammer.

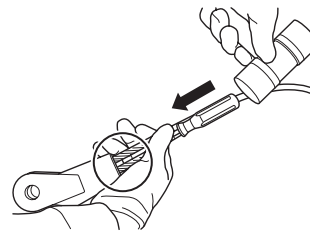


- 5) Remove the Wire Rope from the socket.

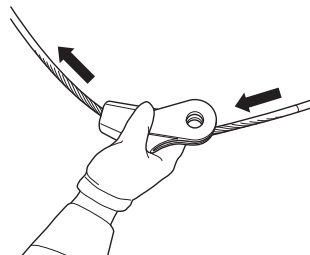


- 6) Pull out slowly the Wire Rope from the Hook Sheave of the Hook Block.

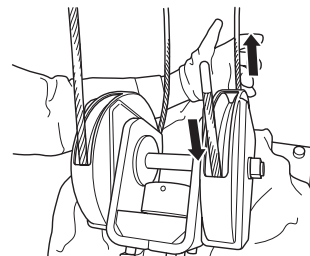


- 7) Pull out slowly the Wire Rope from the Idle Sheave.

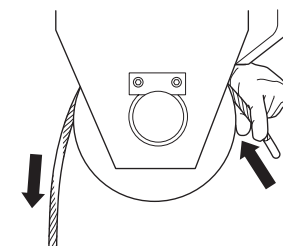

8) Pull out slowly the Wire Rope from the other Hook Sheave of the Hook Block.

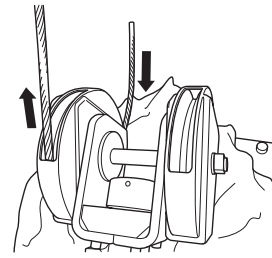


There are two types of Rope Guides with different shapes of connecting parts as shown below. Understand the structures of the Rope Guides first and perform the procedures for each type to remove or attach parts.

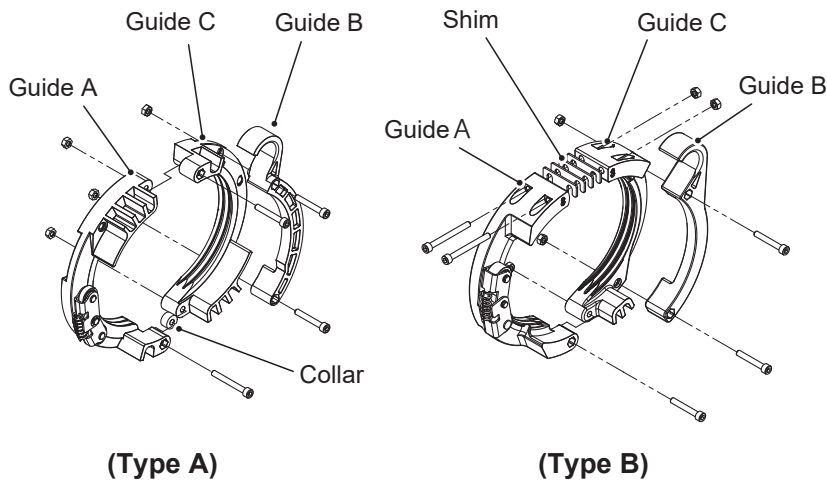


Structures of Rope Guides

9) Remove the bolt fixing Guide B, and remove Guide B from Guide C along the Support Shaft.

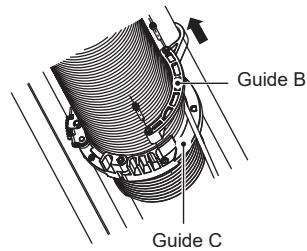


10) Loosen the socket bolt indicated by the arrow in the figure below. Next, move Guide A toward the Back Frame side until its Guide Roller does not lie on the wire, and remove the socket bolt you loosened.

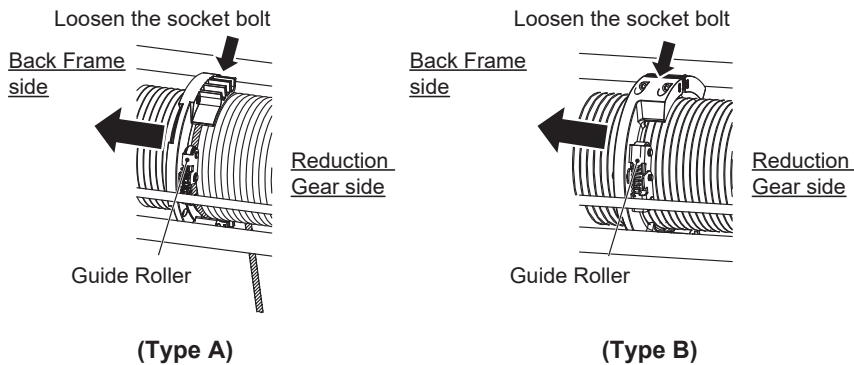


Periodic Inspection (Continued)

- 11) Remove the Rope Guide from the Rope Drum by following the procedure described below.


11-1. As shown in the figure on the right, rotate Guide A and Guide C along the Rope Drum using the Guide Roller as a guide.

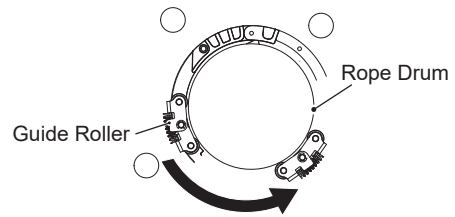


11-2. Loosen the socket bolt connecting Guide A to Guide C, and remove Guide A from the Rope Drum at a position where Guide A has no interference with the Support Shaft.

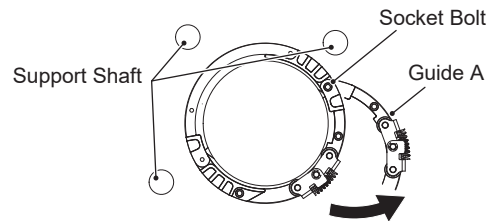


11-3. As shown in the figure on the right, rotate Guide A and Guide C along the Rope Drum with Guide A removed from the Rope Drum.

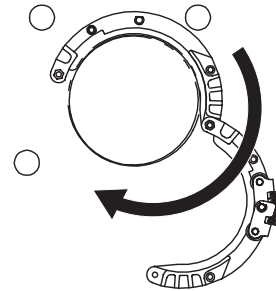


11-4. Remove Guide C from the Rope Drum at a position where Guide C has no interference with the Support Shaft.

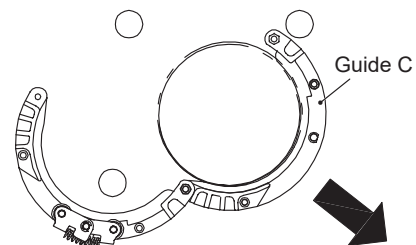

- 12) Perform unwinding operation while pulling the Wire Rope by hand so that the Wire Rope does not float away from the Rope Drum. Remove in advance the Wire Rope to the position of the Rope Clamp as shown right.

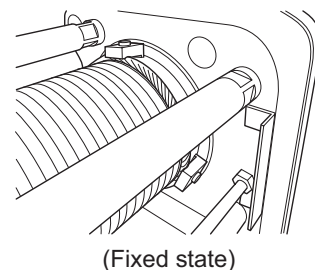

- 13) Loosen socket bolts and remove Wire Clamps at three locations to remove the Wire Rope from the Wire Drum. Remove the Wire Rope while holding it by hand so as to prevent the Wire Rope from being removed suddenly by tension of the Wire Rope.

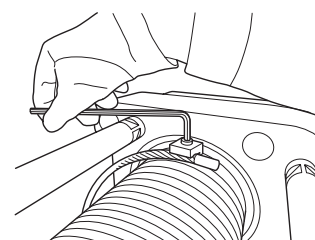

After removing the Wire Rope using the above procedure, follow the procedure described from the next page to attach the Replacement Wire Rope.

Attaching Wire Rope

Follow the procedure below to attach the Wire Rope.

Advance Preparation:

Before starting operation, prepare the following items:
Replacement Wire Rope, Hammer, Hexagonal wrenches, Spanners (or Adjustable spanners), Snap ring plyers, and Leather gloves

1. Unpack and straighten the Wire Rope.

2. Fasten the Wire Rope with the Rope Clamp (at three locations).

3. Perform lifting operation to wind the Wire Rope on the Rope Drum.

4. Attach the Rope Guide.

5. Pass the rope end through the Hook Sheave and Idle Sheave.

* In the case of the Standard type (5t or 10t), pass the Wire Rope also through the Idle Sheave and the other Hook Sheave.

6. Pass the Wire Rope through the socket, and insert the cotter.

7. Fix the Wire Clip to the rope end.

8. Attach the socket to the rope end fixing part.

Periodic Inspection (Continued)

⚠ WARNING



Mandatory

- **Use a genuine Wire Rope having a proper rope diameter, length, and structure.**
Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause failure of the hoist and may lead to serious accidents.

- Cut length of Wire Rope: (mm)

Capacity	Wire Rope diameter	Rope end processing color	Lift		
			For 6 m	For 9 m	For 12 m
2.8t/3t/3.2t	φ8	White	30,000±200	42,000±200	54,000±200
4.8t/5t		Blue			



■ Attaching Wire Rope

- 1) Unpack the Replacement Wire Rope. Straighten the Replacement Wire Rope into a straight untwisted line in a wide space.


* Note: Replace the Wire Rope in a straightened state. If the Wire Rope is assembled in a twisted state, it moves violently or floats away from the Rope Drum when wound on it.

- 2) Fasten the end of the Wire Rope to the Wire Drum with the socket bolt and Wire Clamp as shown in the figure. (The amount of protrusion of the Wire Rope must be approximately three times the rope diameter.)

* Note: Be sure to fasten the Wire Rope from the position indicated in the figure on the right.

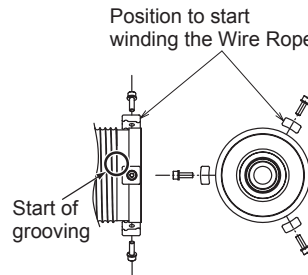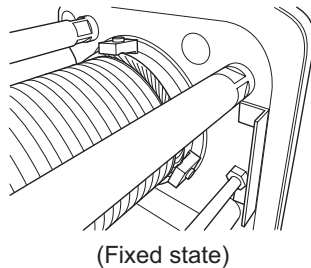


- 3) Perform lifting operation to rotate the Rope Drum slowly by approximately 120 degrees. Fasten the Wire Rope at the following position.

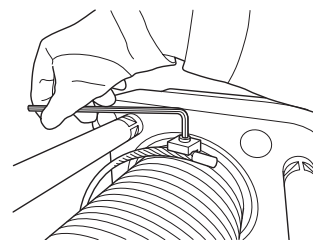

- 4) Fasten the Wire Rope to the remaining position in the same way as Step 3). (The Wire Rope must be fastened to three positions in total.)

- 5) After fastening the Wire Rope, rotate the Rope Drum slowly, and place the Wire Rope wound in parallel by two turns in the Rope Drum's groove from the groove's start point (where the groove starts). Place the Wire Rope in the groove of the Rope Drum by rotating the Rope Drum in the lifting direction while pulling lightly the Wire Rope with a hand so as to prevent the Wire Rope from floating.

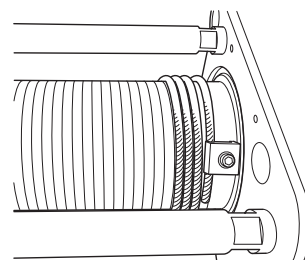


6) Wind the Wire Rope around the Rope Drum to some extent.

Next, apply grease (the same grease used for the Wire Rope, see P92) to the following locations.
To learn about the structure of the Rope Guide, see “Structures of Rope Guides” (P83).


- Roller part of the Rope Guide
- Convex part engaged with the Rope Drum
- Rope Drum groove

7) Attach the Rope Guide to the Rope Drum by following the procedure described below.


7-1. Loosely connect Guide A to Guide C with a socket bolt, and place Guide C along the Rope Drum as shown in the figure on the right.

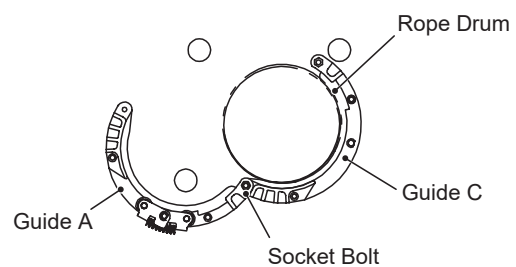


CAUTION: For the Type A Rope Guide, put the Collar in the part connecting Guide A to Guide C.

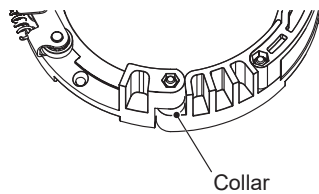

7-2. As shown in the figure on the right, rotate Guide A and Guide C along the Rope Drum with Guide C placed along the Rope Drum.

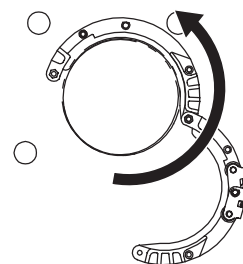


7-3. Remove Guide C from the Rope Drum at a position where Guide C has no interference with the Support Shaft.

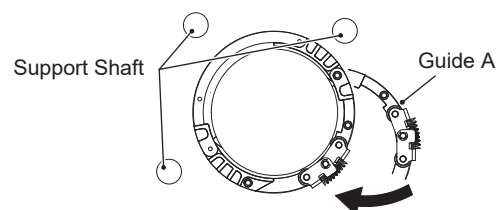



Periodic Inspection (Continued)

7-4. As shown in the figure on the right, rotate Guide A and Guide C along the Rope Drum using the Guide Roller as a guide.

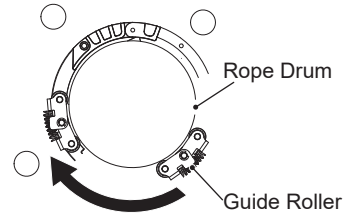


8) Move Guide A toward the Reduction Gear side until its Guide Roller lies on the Wire Rope on the Rope Drum, and tighten the socket bolt.
Next, retighten the socket bolt you loosely connected Guide A to Guide C in Step 7-1. (Tightening Torque : 6 N•m)

CAUTION: For the Type B Rope Guide, put the Shim in the part connecting Guide A to Guide C.

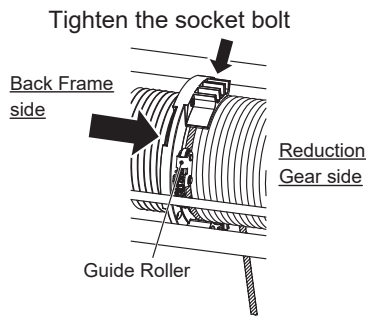
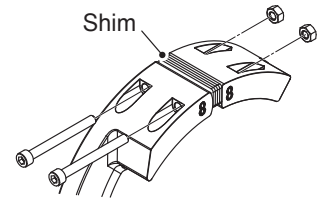


(Type A)

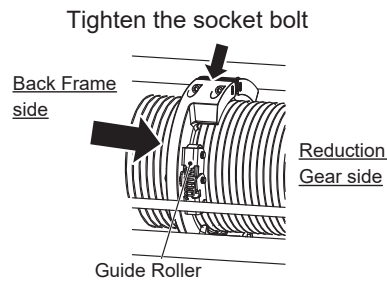


(Type B)


9) Hook the Guide B on the Support Shaft as shown in the figure and fasten the Guide B with socket bolts.
(Tightening Torque : 6 N•m)
Pay attention to attach the Guide B so that the Wire Rope comes out from the gap between the Guide C and Guide B.

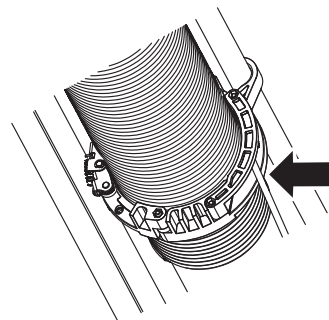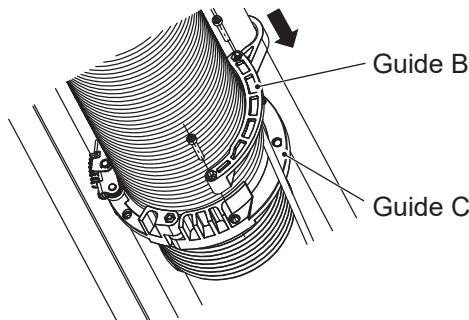


- 10) Paying attention to a passing position, pass the rope end through the Hook Sheave.

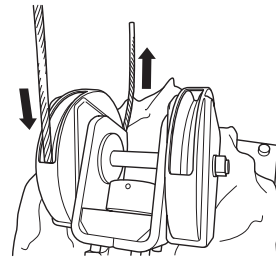


- 11) Paying attention to a passing position, pass the Wire Rope through the Idle Sheave.

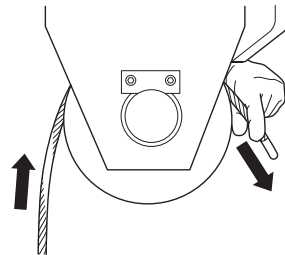


- 12) Pass the Wire Rope through the other Hook Sheave of the Hook Block.

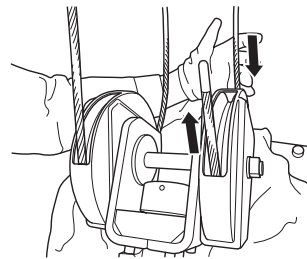

- 13) Pass the Wire Rope through the socket. Be careful about the position. (Pass the Wire Rope from the side not having an arc shape [R-shape].)

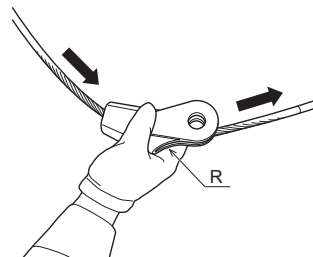


- 14) Insert the cotter.

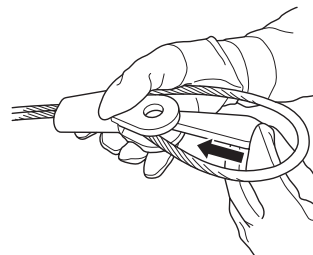


- 15) Pass the Wire Rope from the gap between the cotter and the socket.

- 16) Fix the Wire Clip to the rope end.
 Fix the Wire Clip at a distance of four times the wire rope diameter from the lower end of the socket, so that the Wire Rope of a length of four times the wire rope diameter is exposed.
 Pull the Wire Rope sufficiently before fixing so that the Wire Rope does not float away from the cotter.
 (Tightening Torque of the Wire Clip: 9 N•m)

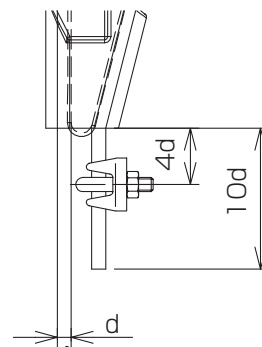


Periodic Inspection (Continued)

- 17) Insert the hanger support shaft from inside into the rope end fixing part of the Main Unit, and fix the socket.
When this is done, untwist the Wire Rope and insert the socket into the hanger in the direction shown in the right figure.

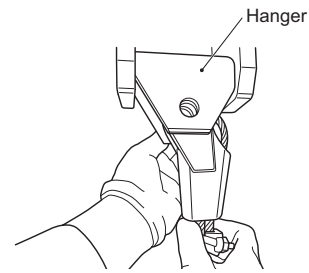

- 18) Firmly fix the tip of the fixed end shaft with the snap ring.

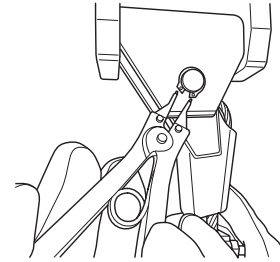

- 19) In order to securely attach the cotter to the socket after installing the Hoist on the rail, lift the Hook Block from the floor. Then, raise the block by approx. 50 mm manually and drop it two or three times.

WARNING




Mandatory

- **After replacing the Wire Rope, check that the Rope Guide moves smoothly under no load, and the Wire Rope moves without obstruction.**
Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause failure of the hoist and may lead to serious accidents.

2-4 Guidelines on Replacement of Lubricants and Parts


In the regular inspection, check the number of starts and the operating hours with the inverter to replace lubricants and parts. If it was found in the regular inspection that any parts must be replaced before the next regular inspection, replacing the parts before the next regular inspection is recommended.

⚠ CAUTION



Prohibited

- **Only the maintenance engineer and the personnel who has been appointed by the maintenance engineer are allowed to replace parts.**
Failure to comply with this instruction may not only result in failure to obtain normal function and performance of the hoist, but may also cause unexpected failure of the hoist and may lead to serious accidents.



Mandatory

- **When replacing parts, follow Disassembly/Assembly Manual.**
- **Do not use parts other than the genuine parts.**
- **Do not use lubricants other than the specified lubricants.**
- **After replacement of the parts is finished, carry out the daily inspection to confirm that there is no abnormality.**
Failure to comply with these instructions may not only result in failure to obtain normal function and performance of the hoist, but may also cause unexpected failure of the hoist and may lead to serious accidents.

2-4-1 Checking Number of Starts and Operating Hours

The number of starts is separately displayed in the upper and lower levels as shown below.

No.	Name	Detail
U7-01	Number of starts (Upper level)	The number of starts for lifting is displayed in 1,000-time units. Displays 10,000 units at maximum. This represents 10,000 * 1,000 = 10 million times.
U7-02	Number of starts (Lower level)	The number of starts for lifting is displayed in 1-time units. Displays 999 units at maximum. When the number exceeds 999 and reaches 1,000, U7-01 (upper level) is increased by one unit. At the same time, the value of U7-02 (lower level) returns to 0.
U7-03	Operating hours	The operating time is displayed in 1-hour units. Displays 65,535 hours at maximum.

Note) The maximum values that can be displayed do not represent the service life.

Displaying the Number of Starts and Operating Hours

Follow the procedure described below to display the number of starts and operating hours on the LED operator.

The following describes how to display the operating hours as an example.

•Ex: The following describes how to display U7-03 (Operating hours) as an example.

Operating procedure

1. Turn on the power.

LED display



Default display

2. Press **▲** until the monitor display screen is displayed.



3. Press **ENTER** to display the parameter setting screen, and press **ESC**.



Parameter setting screen



4. Press **▲** or **▼** to display U7-01.



5. Press **RESET** and **▲** or **▼** to set U7-03 (Operating hours).



Guidelines on Replacement of Lubricants and Parts (Continued)

6. Pressing  displays the current setting value.
(For information on the monitor parameters, refer to Inverter Manual separately provided.)
7. To restart the operation after the monitoring is finished, press  until the screen returns to the default screen.

00075
75 hours

■2-4-2 Guidelines on Timing of Replacement or Application of Lubricants

Part	Lubricant brand	Specified quantity		Timings of lubricant replacement/application
		2.8/3t/3.2t	4.8/5t	
Lifting Reduction Gear	NIPPON OIL Epinoc AP (N) 0	2500g		1600h
Traversing Reduction Gear	NIPPON OIL Epinoc AP (N) 2	60g	90g	800h
Wheel Gear/Idle Gear		As appropriate		800h
Hook Sheave Bearing		As appropriate		1600h
Spline		Pinion	MOLY PS Grease No.2 or equivalent (Molybdenum Disulfide No.3)	
	Gear Shaft	As appropriate		1600h
	Movable Core	Molybdenum Disulfide Lubricant Molytherm No.2		1 million times
Oil Seal (Lip)	NIPPON OIL Epinoc AP (N) 2	As appropriate		1600h
Wire Rope	2.8/3t: Red Rope Grease (Wirol R)	As appropriate		When lack is found in daily inspection
	4.8/5t: Mobilith SHC460	As appropriate		

■2-4-3 Guidelines on Timing for Replacing Reduction Gear, Motor, Brake, Sheave, and Wheel

	Lifting				
	Reduction Gear	Motor		Brake	Hook/Idle Sheave
	Gear/Bearing	Bearing	Shaft	Brake Shoe	Bearing
Timing of replacement	1600h	1600h	1600h	1 million times	1600h

	Traversing				
	Reduction Gear	Motor		Wheel	
	Gear/Bearing	Bearing	Shaft	Bearing	Wheel A (with a gear)
Timing of replacement	800h	800h	800h	800h	800h

A series of horizontal dashed lines for writing.

Chapter 3

Troubleshooting

This chapter describes the main failure causes and inspection items based on the fault conditions and their troubleshooting. The inspection work may be accompanied with disassembling/assembling work of the hoist. Refer to the separate “Disassembling/Assembling Manual” for the correct work.

3-1 Guidance on Troubleshooting	98
3-1-1 Guidance on Troubleshooting	98
3-2 Safety Precautions	100
3-2-1 General Matters on Failure Cause and Countermeasure	100
3-3 Troubleshooting	101
Power	101
Circuit breaker (Distribution panel)	101
Power Cable	102
Motor	103
Brake	104
Internal wiring	105
Inverter.....	106
HBB Board	106
Braking Resistor.....	106
Upper Limit Emergency Stop Device	107
Upper/Lower Limit Stop Device	107
Gears	108
Push Button Switch	108
Electric shock	109
Hook.....	110
Wire Rope	112
Bearing (Inside Reduction Gear, Main Unit)	114
Rope Drum	114
Rope Guide	115
Hook Sheave, Idle Sheave	115
Traversing Device	116

3-1 Guidance on Troubleshooting

3-1-1 Guidance on Troubleshooting

The table below is the summary of the main failure causes based on the failure conditions and their inspection items. Refer to the page of each item for the check method, treatment and the details of countermeasure.

When the hoist shows an abnormal condition, an error is displayed on the inverter inside the Control Box. Refer to the Inverter Manual to solve the problem correctly.

Conditions		Main fault contents	Check item	Reference page	
1	Stops during operation	Check the error display of the inverter, and specify the defective part according to the error display to take an appropriate measure. (Refer to Inverter Manual separately provided.)			
2	Does not operate without load	No brake operating sound	Improper source voltage	Power	101
			Breakage or burning of control circuit, Faulty electrical part	Circuit breaker	101
				Power Cable	102
				Internal wiring	105
				Inverter	106
				HBB Board	106
				Upper Limit Emergency Stop Device	107
				Push Button Switch	108
			Upper/Lower Limit Stop Device	107	
			Breakage or burning of power circuit, Faulty motor or brake	Motor	103
	Brake	104			
	Internal wiring	105			
	Inverter	106			
	Inverter trip due to overheating of the motor (electronic thermal)	Inverter	106		
Overheating of the inverter		Inverter	106		
		Brake operating sound present	Gears	108	
Sticking of Bearing			Bearing	114	
Improper Wire Rope and route	Wire Rope	112			
	Rope Drum	114			
	Rope Guide	115			
	Hook Sheave, Idle Sheave	115			
3	Operates without load	Does not operate with a load (Motor howling present)	Open phase (single phase operation)	Power	101
			Power Cable	102	
			Motor	103	
			Inverter	106	
	Does not operate with a load (No motor howling)	Overload (Overload Limiter operates)	Inverter	106	
	Operates slowly with a load	Voltage drop	Power Cable	102	
	Does not operate when lifting or reducing the speed	Improper Braking Resistor	Braking Resistor	106	

Conditions		Main fault contents	Check item	Reference page		
4	Operates differently from the indication of the Push Button Switch	Operates differently from the indication (operates in the opposite direction)	Negative phase connection	Power Cable	102	
			Wrong connection	Internal wiring	105	
		Does not operate when operating any one of the switch	Breakage of control circuit	Push Button Switch	108	
				Internal wiring	105	
			Faulty electrical part	Push Button Switch	108	
				Inverter	106	
				HBB Board	106	
				Upper/Lower Limit Stop Device	107	
Upper Limit Emergency Stop Device	107					
5	Does not stop normally	Too long (or short) stopping distance	Abrasion of Brake Shoes	Brake	104	
			Does not stop at the upper/lower limit	Negative phase connection	Power Cable	102
		Wrong connection		Internal wiring	105	
		Push Button Switch	108			
6	Abnormal noise	Change in operating sounds, intermittent sound	Deterioration of Bearing	Bearing	114	
			Abrasion, mechanical interference and deformation of Gears	Gears	108	
		Brake noise	Dragging	Brake	104	
			Abrasion of Brake Shoes	Brake	104	
		Abnormal noise at the rail (friction noise)	Mechanical interference of the rail and the wheel		Traversing Device	116
			Slipping wheel		Traversing Device	116
Inclined rail						
Pulling a load in an inclined direction (floating wheel)						
Defective gear engagement						
Locking of brake						
8	Serpentine motion during traverse Abnormal noise	Mechanical interference of the rail and the wheel		Traversing Device	116	
		Wrong adjustment of Frame interval				
		Uneven abrasion of the wheel				
		Deformation of the wheel				
		Deterioration of Bearing				
		Deformation and abrasion of the rail				
		Deterioration of the Bearing				
9	Hook and those related to Hook	Abrasion of the Brake Disc	Hook	110		
10	Wire Rope and those related to Wire Rope	Deformation	Wire Rope	112		
11	Electric shock when touching the Main Unit and Push Button Switch	Abrasion, elongation, twist	Electric shock	109		
12	Abnormal sound from the Rope Guide	Improper grounding, breakage of earth	Rope Guide	115		

3-2 Safety Precautions

■ 3-2-1 General Matters on Failure Cause and Countermeasure

⚠ WARNING



Prohibited

- **This product shall not be disassembled and repaired by personnel other than maintenance engineers.**
Failure to comply with this instruction may limit the normal functions and performance of the hoist, as well as causing malfunction or break down of the hoist, leading to serious accidents.
“Disassembling/Assembling Manual” is provided separately for the maintenance. Disassembling and repair must be performed by the maintenance engineer in accordance with this document for maintenance.
- **When replacing the part, do not use parts other than the genuine KITO parts.**
normal functions and performance of the hoist, as well as causing malfunction or break down of the hoist, leading to serious accidents.
Even if the part is genuine KITO part, it cannot be used for other models. Refer to Disassembly/Assembly Manual separately provided for the correct use of the part.




Mandatory

- **When any abnormality is observed during the inspection of the hoist, the maintenance engineer must survey the cause, implement countermeasures, and carry out the repair.**
- **Turn off the main power when carrying out the inspection.**
Failure to comply with this instruction can lead to electric shock, which may seriously affect the health of a human body.
- **Indicate “CHECKING” when performing the inspection.**
When a crane is operated erroneously during the inspection, it may result in accidents such as fall-off of parts and tools as well as fall-down of a person.
- **Carry out the hoist inspection with no load.**
Failure to comply with this instruction may result in unexpected serious accidents.
- **Carry out regular inspections (frequent and periodic). Keep the record of the frequent and periodic inspections. Carry out the inspections at an appropriate frequency, paying attention to conditions obtained from daily inspection and operating sound.**
The record of inspection makes it possible to obtain information on the conditions of hoist such as function and performance of the hoist, and the cycle of part replacement, and facilitates maintenance planning for the hoist. Failure to carry out the inspection may make it impossible to maintain normal function and performance of the hoist, resulting in failure to use the hoist safely and leading to serious accidents.

3-3 Troubleshooting

Power

Symptom	Cause	Remedy	Main factor	Countermeasure
Does not operate	Improper source voltage	Measure the voltage of each phase at power receiving terminal. If the source voltage is improper, check the power receiving facility.	Faulty power receiving facility	Check the power receiving facility regularly.
⚠ WARNING				
<div style="display: flex; align-items: center;"> <div style="text-align: center; margin-right: 10px;">  Prohibited </div> <div> <ul style="list-style-type: none"> • Do not perform inspections with wet hands. • Do not directly touch the part where voltage is supplied. <p>Failure to comply with these instructions may lead to serious accidents such as fire due to failure of the hoist.</p> </div> </div>				

Circuit breaker (Distribution panel)

Symptom	Cause	Remedy	Main factor	Countermeasure
Does not operate	Breaker was tripped due to short circuit.	Replace or repair the short-circuited part.	Cable breakage, burning of electrical parts	Refer to each item of Power Cable, Motor, Brake, and Internal Wiring
	Breaker was tripped due to insufficient breaker capacity.	Check the breaker capacity. Replace it if the capacity is insufficient.	Wrong selection of breaker capacity	Use the breaker with proper capacity. (See P14-15.)
	Breaker was tripped due to overcurrent.	Check the cause of overcurrent and take necessary countermeasures. (Refer to each item of Power Cable, Motor, Brake, and Internal Wiring.)	Overvoltage, low voltage, overload, etc.	Refer to each item of Power Cable, Motor, Brake, and Internal Wiring

Troubleshooting (Continued)

Power Cable

Symptom	Cause	Remedy	Main factor	Countermeasure
Does not operate	Wire breakage (more than two wires)	Check the conduction, flaw, and crimping of terminals. When any deficiency was observed, repair or replace the cable.	Excessive force applied on the cable	Support the cable securely.
			Non-use of shake proof cable	Use shake proof cable to the moving part.
			Twist of wire	Layout the wires so that there is no twisting.
			Cable was interfered by another facility.	Fix the cable not to be interfered by other facilities.
	Wire burning (more than two wires)	Check the cable. Replace it if burnt.	Temperature rise due to insufficient cable capacity	Use the cable with proper capacity. (See P14-15.)
			Cables are bundled.	Do not bundle wires.
			Loosened cable gland (nut, cap)	Tighten the cable gland (nut, cap) securely.
Loosened cable gland (nut, cap)	Use proper gland packing			
Wrong packing size	Use proper gland packing	Use proper gland packing	Use proper gland packing	
				Slow start or unable to start
Operates but is unable to lift a load (single phase status)	Breakage or burning of one phase only	Refer to the foregoing items on breakage and burning.		

Motor


Symptom	Cause	Remedy	Main factor	Countermeasure
Does not operate	Motor coil burning (two or more phases)	Measure the coil resistance of each phase. Replace the motor when the resistance of all phases is infinity.	Overcurrent due to overvoltage or low voltage	Operate the hoist at the rated voltage.
			Overcurrent due to overload	Use the hoist with a load equal to or less than the capacity.
			Operation exceeding short time rating or intermittent rating	Check the short time rating and intermittent rating. Use the hoist within these ratings.
			Excessive inching or plugging operation (consecutive impression of start rush current)	Do not perform excessive operation.
			Overcurrent due to brake dragging	Refer to the items of Brake.
Does not operate	Lead wire breakage (more than two lead wires)	Measure the coil resistance of each phase. Replace the motor when the resistance of all phases is infinity.	Lead wire damaged at assembling	Assemble with care.
			Vibration, impact	Use the hoist avoiding the impact.
Operates but is unable to lift a load (single phase status)	Motor coil burning (only one phase)	Measure the coil resistance of each phase. Replace the motor when the resistance of all phases is infinity.	Layer short due to poor insulation of coil (between phases)	Be careful about the intrusion of foreign matters into the motor when assembling.
	Lead wire breakage (only in one lead wire)	Measure the coil resistance of each phase. Replace the motor when the resistance of all phases is infinity.	Lead wire damaged at assembling	Be careful not to have the lead wire caught when assembling.
			Vibration, impact	Use the hoist avoiding the impact.

Troubleshooting (Continued)

Brake

Symptom	Cause	Remedy	Main factor	Countermeasure												
Does not operate Does not stop normally Abnormal noise	Abrasion of Brake Lining 1) Deterioration of brake performance 2) Exceeding the limit of attraction of the brake	For lifting: See the figure below.) 1) Measure the abrasion of the Brake Lining (A). If the abrasion exceeds the limit in the table below, brake performance is deteriorated. In that case, replace the Motor Cover, Brake Drum, and Brake Spring. <table border="1"> <thead> <tr> <th>Motor capacity</th> <th>Standard value</th> <th>Limit</th> </tr> </thead> <tbody> <tr> <td>3.5kw</td> <td>20mm</td> <td>18.5mm</td> </tr> <tr> <td>5kw</td> <td>20mm</td> <td>18.5mm</td> </tr> <tr> <td>8kw</td> <td>38mm</td> <td>36.5mm</td> </tr> </tbody> </table> 2) Measure the Brake Gap (G). If the Brake Gap exceeds the limit, the limit of magnetic attraction of the electromagnetic brake is reached. In that case, perform an adjustment by fastening the Adjusting Nut. (Gap G: Standard Value: 0.8 mm, limit of attraction: 1.1 mm) For traversing Perform an adjustment, referring to "■1-6-6 Adjusting Traverse Brake" (P25) If the brake cannot be adjusted, measure the thickness of the Brake Disc. Replace it if the thickness exceeds the limit. (Standard value: 11 mm, limit: 10 mm)	Motor capacity	Standard value	Limit	3.5kw	20mm	18.5mm	5kw	20mm	18.5mm	8kw	38mm	36.5mm	Excessive inching operation or sudden operation	Do not perform excessive operation.
Motor capacity	Standard value	Limit														
3.5kw	20mm	18.5mm														
5kw	20mm	18.5mm														
8kw	38mm	36.5mm														

Gap: G (Default: 0.8 mm, limit of attraction: 1.1 mm)

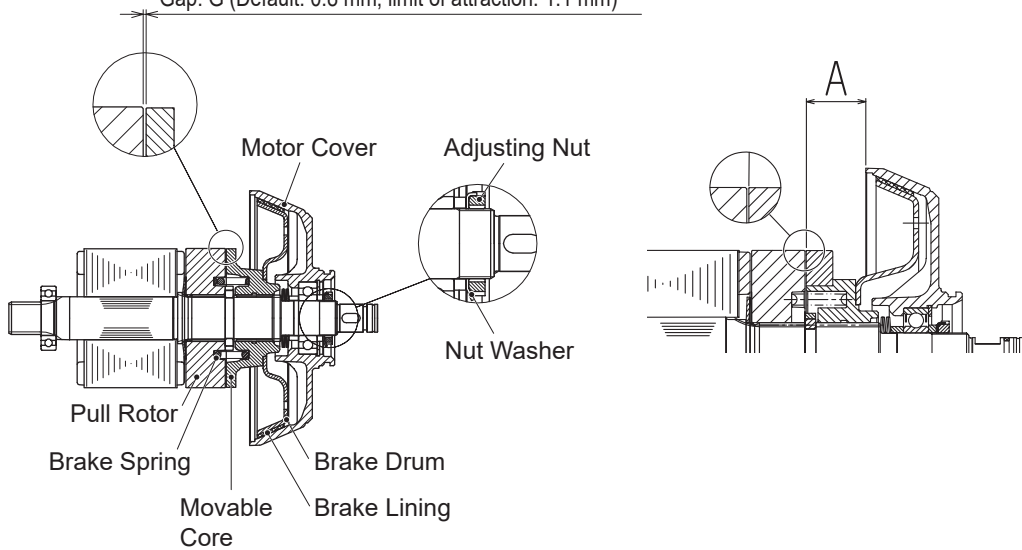


Symptom	Cause	Remedy	Main factor	Countermeasure
Does not operate	Rusting	When the Brake is rusted shut, replace the part or clean it.	Leaving the hoist in an environment with rich moisture	Operate the hoist regularly.
			Dew condensation	Pay attention to the use in an environment where the ambient temperature changes rapidly.
Too long (or short) stopping distance (stopping distance may change slightly depending on the temperature.)	Abrasion of Brake Shoes	Carry out measurement, adjustment, and replacement in the same way as "Abrasion of Brake Shoes" described above. Also for the main factor and remedy, refer to the above.		

Internal wiring

Symptom	Cause	Remedy	Main factor	Countermeasure
Does not operate	Breakage of wire	Check the wire. Repair the wire if broken.	Vibration, impact	Use the hoist avoiding the impact.
			Lead wire damaged at assembling	Be careful not to have the lead wire caught when assembling.
		Check the terminal. Repair the terminal without conduction.	Improper crimping	Use the proper crimping tool.
	Wrong wiring	Check the wiring in accordance with the wiring diagram. Correct the wiring if it is wrong.	Wrong wiring at assembling	Correct the wiring in accordance with the wiring diagram.
	Loosened terminal screw (may cause heat generation resulting in burn)	Tighten the loosened screws.	Insufficient tightening at assembling	Tighten screws securely.
			Vibration, impact	Use the hoist avoiding the impact.
Incomplete connection of the connector and insertion terminal	Connect the connector and insertion terminal correctly if they are not connected securely.	Incomplete connection at assembling	Connect the connector and insertion terminal securely.	

Troubleshooting (Continued)

Inverter

Symptom	Cause	Remedy	Main factor	Countermeasure
Does not operate	Overload	Stopped by the Overload Limiter of the inverter. The inverter can be activated by resetting with the Emergency Stop Button. Pressing the Lowering Button to reset can also activate the inverter.	Overload	<ul style="list-style-type: none"> Use the hoist with a load equal to or less than the capacity. When the ambient temperature is lower than zero, make a test run of the hoist with no load for a while.
	Failure of the inverter	Reset the inverter with the Emergency Stop Button, and check the inverter if it does not operate.	Failure of the inverter	Check the error code of the inverter, referring to Inverter Manual.
	Overheating of the motor	Stopped by the motor thermal function of the inverter. Cooling down and resetting with the Emergency Stop Button can activate the inverter.	Operation exceeding short time rating or intermittent rating	Check the short time rating and intermittent rating. Use the hoist within these ratings.
	Overheating of the inverter	Stopped by the overheating prevention function of the inverter. Cooling down and resetting with the Emergency Stop Button can activate the inverter.	Operation exceeding short time rating or intermittent rating	Check the short time rating and intermittent rating. Use the hoist within these ratings.
	Expiry of service life of the inverter (condenser)	Refer to Inverter Manual.	Operation exceeding short time rating or intermittent rating	Check the short time rating and intermittent rating. Use the hoist within these ratings.
Operates in a direction different from control via the Push Button (negative phase).	Mistake in wiring of the motor	Exchange two wires of the motor each other. <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p>⚠ WARNING</p> <p> Do not exchange wires in the Push Button Switch circuit.</p> <p>If this instruction is not followed, the limit switch will not operate, which results in a seriously dangerous situation.</p> </div>	Mistake in wiring when assembling the motor	Wire properly.

HBB Board

Symptom	Cause	Remedy	Main factor	Countermeasure
Does not operate	Damaged circuit parts	Press the Push Button to check whether the Main Unit operates or not. If it does not operate, replace the board. * In this energizing test, be careful of electrical shock.	Expiry of service life, damage	Replace the HBB Board.
	Contact failure of the connector	Check the conduction of the connector. Replace the connector if it has no conduction.	Connector assembly failure	Crimp and insert the pin securely.

Braking Resistor

Symptom	Cause	Remedy	Main factor	Countermeasure
Does not operate	Breakage of wire in the resistor	Measure the resistance value at the resistor. Replace the resistor when the value is infinity.	Operation exceeding intermittent rating Overload	Use the hoist within these ratings.

Upper Limit Emergency Stop Device

Symptom	Cause	Remedy	Main factor	Countermeasure
Does not operate The motor does not stop at the upper limit.	Breakage, Contact point fusing	Check if the cable and lead wires are not unplugged or loosened, and if they are conducted. Check the lever position of the Upper Limit Emergency Stop Device and adjust it to an appropriate position. Replace it when the lever does not move smoothly.	Vibration, impact Excessive force is applied such as tangling of the cable.	Operate the hoist avoiding excessive vibration or impact. Make sure that the cable is not entangled while the hoist is in operation.
	Improper operation position		Improper installation	Install it to the correct location.
	Upper Limit Emergency Stop Device is activated. (defective return action of the moving part)		Habitual use of the Upper Limit Emergency Stop Device	Do not use the Upper Limit Emergency Stop Device habitually.
	Wrong wiring	Check the wiring in accordance with the wiring diagram, and perform the wiring correctly. If the wiring is correct, change two wires of the motor line.	Wrong wiring	Correct the wiring in accordance with the wiring diagram.

Upper/Lower Limit Stop Device


Symptom	Cause	Remedy	Main factor	Countermeasure
Does not operate (Inverter does not operate.)	Contact point melting	Activate the limit switch and check the conduction at the contact point. If it has no conduction, replace the limit switch as a set.	Habitual use of the limit switch	Do not use the Upper/Lower Limit Stop Device habitually.
	Breakage of wire	Check the wire. If broken, repair or replace the limit switch as a set.	Vibration, impact	Use the hoist avoiding the impact.
	Defective return action of the moving part	Check whether the moving part is locked or not. If locked, replace the limit switch as a set.	Leaving the hoist at the upper or lower limit for a long period of time	Do not leave the hoist at the upper or lower limit.
Motor does not stop at the upper/lower limit.	Contact point fusing	Activate the limit switch and check the conduction at the contact point. If it does not turn off, replace the limit switch as a set.	Habitual use of the limit switch	Do not use the Upper/Lower Limit Stop Device habitually.
	Rusting shut of the moving parts	Check whether the moving part is rusted shut or not. If rusted shut, remove the rust or replace the rusted part.	Not operating the hoist for a long time, or using it in an environment with rich moisture	Conduct inspections regularly.
	Wrong wiring	Check the wiring in accordance with the wiring diagram. Perform the wiring correctly. If the wiring of the limit switch is correct, the cause is in the negative phase connection. Change two wires of the motor line.	Wrong wiring	Correct the wiring in accordance with the wiring diagram.

Troubleshooting (Continued)

Gears

Symptom	Cause	Remedy	Main factor	Countermeasure
Unable to lift a load (Does not operate) Change in operating sounds Intermittent sound	Abrasion, damage	Visually check or measure the size, and replace the gear if it is noticeably deformed, damaged, or worn.	Long hour operation without sufficient grease	Keep the grease replenishment cycle.
			Habitual use of Overload Limiter	Make the load smaller than the capacity.
			Irregular motion	Do not perform inching or plugging.
			Expiry of service life	Periodically check the operating hours.

Push Button Switch

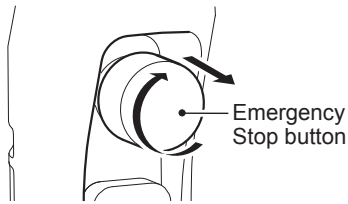Symptom	Cause	Remedy	Main factor	Countermeasure
Does not operate	Emergency Stop button is pressed to its end and locked.	When the Emergency Stop button is pressed and locked, turn it clockwise to release the lock. 	Forgot releasing the Emergency Stop button	Thoroughly read "■1-10-1 How to Operate the Push Button Switches" (P43) before use.
	Faulty switch unit	Check the conduction of the contact points. Replace the Push Button Switch if it has no conduction.	Vibration, impact	Use the hoist avoiding the impact.
	Breakage inside the switch	Check that the Push Button Switch cord is connected with the switch unit correctly. Repair the cord if it has no conduction. Be careful not to get the lead wire caught at assembling.	Vibration, impact	Use the hoist avoiding the impact.
	Loosened terminal screw inside the switch unit	Tighten the screw if loosened.	Vibration, impact	Use the hoist avoiding the impact.
	Wire breakage of Push Button Switch Cord	Check the conduction of the Push Button Switch Cord. If it has no conduction, replace the cable, or the Push Button Switch Cord as a set.	Damage of cable cover External force applied on the cable due to improper tying of the protection wire	Operate the hoist so that it does not interfere with other facilities. Tie the Protection Wire securely. (See "Connecting Push Button Switch Cord" (P18).)

Push Button Switch (Continued)



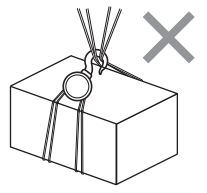
Symptom	Cause	Remedy	Main factor	Countermeasure
Operates differently from the indication of the Push Button Switch	Wrong wiring	Check the wiring in accordance with the wiring diagram. Perform the wiring correctly. If the wiring of the Push Button Switch is correct, the cause is in the negative phase connection. Change two wires of the power line.	Wrong wiring	Correct the wiring in accordance with the wiring diagram.
	Wrong attachment of the direction label	Attach the label correctly according to the installation place.	Installation place not corresponding to the label	Attach the label correctly.
Does not stop when pressing the Push Button	Defective return action of the switch unit	When the switch does not operate smoothly, replace the Push Button Switch.	Vibration, impact	Use the hoist avoiding the impact.

Electric shock

Symptom	Cause	Remedy	Main factor	Countermeasure
Electric shock when touching the Main Unit, Control Box, Push Button Switch, etc.	Improper grounding	Measure the grounding resistance. If it exceeds 100 Ω, perform grounding work in accordance with the relevant laws and regulations.	Defective grounding work	Perform the grounding work securely.
			Contact failure of the grounding wire	Connect the grounding wire securely without loosened screw.
			Breakage of grounding wire	Layout the grounding wire to avoid the stress applied on it. (See the items of Power Cable and Push Button Switch.)
	Attachment of water droplets	Remove the droplets and dry the surface before use.	Operation by wet hands	Do not operate the hoist by wet hands.

Troubleshooting (Continued)

Hook



Symptom	Cause	Remedy	Main factor	Countermeasure
Widened Hook opening	Deformation of the Hook	Replace the Hook if the deformation exceeds the criteria. (See "■2-2-3 Hook Block" (P64).)	Overload	Use the hoist with a load equal to or less than the capacity.
			Earth lifting	Do not carry out earth lifting. Be careful not to interfere with the Hook with a protruding object during lifting.
			Slinging a load at the tip of the Hook 	Slings a load at the center of the Hook. Do not sling a load at the tip of the Hook.
			Improper slinging 	Angle formed by two slings must be 120 degrees or less.
			Use of the sling with a size improper to the Hook	Use the proper sling.
Twisted hanging of the Hook	Deformation of the Hook	Replace the Hook if the deformation exceeds the criteria. (See "■2-2-3 Hook Block" (P64).)	<ul style="list-style-type: none"> Use of the Hook with the Wire Rope wound on a load  Slings a load at the tip of the Hook Pulling a load in an inclined direction 	<ul style="list-style-type: none"> Do not wind the Wire Rope directly on a load. Slings a load at the center of the Hook. Do not pull a load in an inclined direction.
Hook unable to swivel smoothly at the neck	Rusting shut or corrosion of Bearing	Swivel the Hook at the neck by hand. If it is difficult to swivel smoothly, overhaul or replace the Bearing.	Insufficient grease application Corrosion due to environment of use	Apply grease regularly. Use the sling to avoid the dipping of the Hook into chemicals.
	Damaged Bearing		Intrusion of dust	Be careful not to allow intrusion of foreign matters into the neck.

Hook (continued)


Symptom	Cause	Remedy	Main factor	Countermeasure
Hook Latch has come off.	Deformation of the Hook	Replace the Hook if the deformation exceeds the criteria. (See "■2-2-3 Hook Block" (P64).)	Overload	Use the hoist with a load equal to or less than the capacity
			Earth lifting	Do not carry out earth lifting. Be careful not to interfere with the Hook with a protruding object during lifting.
			Use of the sling with a size improper to the Hook	Use the proper sling.
	Deformation and coming off of the Hook Latch	Replace the Hook Latch if it has come off or is deformed.	Sling put on the Hook Latch	Do not put the sling on the Hook Latch.
Hook bent at the neck (shank)	Deformation or damage of the Hook at its neck	Replace the Hook bent at the neck.	Lifting a load at the tip of the Hook	Sling a load at the center of the Hook.
			Lateral pulling of the Hook	Do not laterally pull the Hook.

Troubleshooting (Continued)

Wire Rope

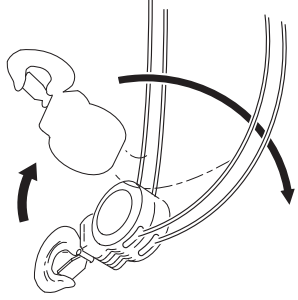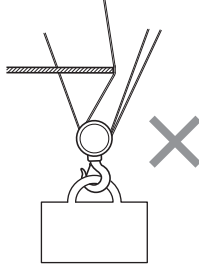Symptom	Cause	Remedy	Main factor	Countermeasure
Twisted Wire Rope	Capsized Hook	Turn over the Hook to the original position to cancel the capsizing. 	Hook was turned over by one turn during working.	When using Wire Rope multi fall model hoist, check that the Hook is not capsized before use.
	Wire Rope is twisted at the Rope Drum.	Remove the Rope End Fixing Part and Wire Rope, and then reassemble them.	Improper assembling	Assemble the hoist correctly. (See Disassembling/Assembling Manual)
Irregular abnormal noise from Hook Block, Rope Guide, or Rope Drum	Flaw and deformation of the Wire Rope surface	Replace the Wire Rope with an apparent flaw, deformation, abrasion or kink.	Use of the Wire Rope without canceling capsized state	When using Wire Rope multi fall model hoist, check that the Hook is not capsized before use.
			Use of the twisted Wire Rope	Assemble the hoist correctly. (See Disassembling/Assembling Manual)
	Dent on the Wire Rope surface		Hit against another object strongly 	Use the wire rope hoist carefully paying attention not to interfere with other objects.

Wire Rope (continued)

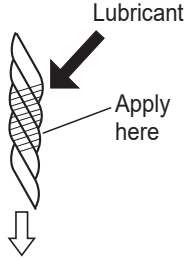Symptom	Cause	Remedy	Main factor	Countermeasure
Surface losing lust and discolored	Rusting and corrosion	Remove rust and apply oil. Replace the Wire Rope if the rust and corrosion is apparent.	Run-out of oil	Apply grease regularly. (See "■1-6-4 Oiling the Wire Rope" (P21).)  Loading direction
			Use of a hoist exposed to rain	Store the hoist indoors or under the roof when not using.
			Influence of sea water and chemicals	Contact KITO for the use in a special environment in advance. Use the hoist correctly within the scope guaranteed by the manufacturer.
Significant wear of the Wire Rope	Abrasion caused by frequent lateral/vertical pulling	Check the position of the load and lift it directly under the hoist.	Rope Drum's excessive interference with the groove	Use it correctly. Replace it if there is abrasion or deformation.
	Turbulent winding of the Wire Rope	Check if the Wire Rope is correctly placed in the groove of the Rope Drum.	Operation while the Wire Rope is lifted up, due to excessive lowering without a load.	Do not operate while the Wire Rope is loosened. Replace the Wire Rope if there is abrasion or deformation.
	Use of the Wire Rope other than genuine KITO Wire Ropes	Check the size and configuration of the Wire Rope, and use a genuine Wire Rope.	Improper assembly	Replace the Wire Rope.
	Oil has not been applied on the Wire Rope.	Visually check the surface of the Wire Rope to check if oil is applied. Apply oil if not already applied.	Oversight in inspection	Apply grease regularly. (See "■1-6-4 Oiling the Wire Rope" (P21).)
Irregular winding of the Wire Rope	Angle of lateral/vertical pulling is too wide	Check the positions of the hoist and the load, and lift the load directly under the hoist.	Pulling a load in an inclined direction	Use it correctly.
	Wire Rope is deformed.	Remove the interfering object. If the Wire Rope is significantly deformed, replace it.	Pulling a load in an inclined direction Object interfering with the Wire Rope	Use it correctly.

Troubleshooting (Continued)

Symptom	Cause	Remedy	Main factor	Countermeasure
Breakage of the Wire Rope	The load is caught during lifting.	Check if there are any interfering objects on the lifting path, and remove the object if found.	Object interfering with the Wire Rope	Handle it properly, conduct complete maintenance inspections, and remove defective wires (use genuine wires).
	Corrosion by chemicals, etc.	Check the usage environment of the hoist and make sure to avoid chemicals during operation.	Usage environment of the hoist	Replace the Wire Rope.
	Usage of the Wire Rope with significant wear	Check the usage and conduct inspections regularly.	Oversight in inspections	Replace the Wire Rope.
	Expiry of the service life	Check the Wire Rope, and replace it if the service life exceeds the criteria. (See "■2-3-9 Wire Rope Replacement Procedure" (P81).)	<ul style="list-style-type: none"> Usage beyond the expiry of service life Oversight in inspections 	Use the Wire Rope correctly, and conduct proper management including daily and regular inspections.

Bearing (Inside Reduction Gear, Main Unit)

Symptom	Cause	Remedy	Main factor	Countermeasure
Unable to lift a load	Sticking, breakage	Replace the bearing.	Use under hot environment or excessively frequent use	Follow the rules regarding conditions/environment of use.
Abnormal noise			Deterioration	<ul style="list-style-type: none"> Long hour operation without sufficient oil/grease

Rope Drum

Symptom	Cause	Remedy	Main factor	Countermeasure
Does not operate Lifting/lowering operation cannot be done smoothly. Abnormal noise	Deformation, breakage, or abrasion of the groove of the Rope Drum	Visually check or measure the size, and replace the Rope Drum if it is noticeably deformed, damaged, or worn.	Pulling a load in an inclined direction	Do not pull a load in an inclined direction. Shift the hoist above the load when lifting/lowering.
			Habitual use of Overload Limiter	Make the load smaller than the capacity.
			Irregular motion	Do not perform inching or plugging.

Rope Guide

Symptom	Cause	Remedy	Main factor	Countermeasure
Does not operate Lifting/lowering operation cannot be done smoothly. Abnormal noise	Deformation, breakage, or abrasion of the Rope Guide	Visually check or measure the size, and replace the Rope Guide if it is noticeably deformed, damaged, or worn. Remove any foreign matters from the Rope Guide if attached. Check if there is an E-type Retaining Ring on the Rope Guide Shaft.	Pulling a load in an inclined direction	Do not pull a load in an inclined direction. Shift the hoist above the load when lifting/lowering.
	Derailing from the groove of the Rope Drum of the Rope Guide, and Derailing from the Wire Rope of the Guide part		Insufficient application of grease on the Wire Rope and the Rope Guide	Apply grease periodically.
			Improper mounting	Mount the inner groove of the Rope Guide to the groove of the Rope Drum correctly. For mounting procedure, refer to "■2-3-9 Wire Rope Replacement Procedure" (P81).
		Habitual use at the lifting range lower limit position	Do not use it frequently near the lower limit, which is not within the lifting range.	

Hook Sheave, Idle Sheave

Symptom	Cause	Remedy	Main factor	Countermeasure
Does not operate Lifting/lowering operation cannot be done smoothly. Hook block tilts greatly. Abnormal noise	Abrasion of the Sheave groove	Visually check or measure the size, and replace the sheave if it is noticeably deformed, damaged, or worn.	Pulling a load in an inclined direction	Do not pull a load in an inclined direction. Shift the hoist above the load when lifting/lowering.
	Deformation of the Hook cover		Habitual use at the lifting range upper limit position	Do not use it frequently near the lifting range upper limit.
	Damage of the Bearing		Expiry of service life	Periodically check the operating hours.

Troubleshooting (Continued)

Traversing Device

Symptom	Cause	Remedy	Main factor	Countermeasure
Unable to run due to slipping of wheel, or unable to run at a constant speed	Inclination of the rail	Make sure that rail gradient is within 1 degree.	Improper installation of the rail	Install the rail correctly.
	Oil attachment on the running surface of the rail wheel	Wipe off the attached foreign matters on the running surface.	<ul style="list-style-type: none"> Use under the environment which causes foreign matters to attach easily The joints of the rail are not smooth. 	<ul style="list-style-type: none"> Clean the rail regularly
Abnormal sound when running on the rail	Friction resistance between wheel and rail	Apply small amount of oil on the rail surface where the noise is generated.		<ul style="list-style-type: none"> Make the joints of the rail smooth.
Unable to run due to wheel floating	Pulling a load in an inclined direction (floating wheel)	-	Operation method	Use it correctly.
Wheel unable to rotate	Defective gear engagement	Remove the stain and foreign matters on the wheel and the gear.	Ambient conditions, environment	Check regularly.
	Locking of brake	Disassemble the motor cover. Remove rust and stains.	Ambient conditions, environment	Check regularly.
	Electric system failure	Refer to the guidance (P98-124).		
Serpentine motion Abnormal noise	Wrong adjustment of the Frame interval	Check the Frame interval.	Incomplete adjustment	Install the wheel correctly.
	Uneven abrasion of the wheel	Check the abrasion of the wheel.	Running on a curved rail, unevenness of the running surface, or expiry of the service life	<ul style="list-style-type: none"> Do not use it on a curved rail. Remove the unevenness of the running surface. Replace the parts.
	Deformation of the wheel	Check the distortion of the wheel and damage on the running surface.	Excessively frequent collision with the stopper or unevenness of the running surface	<ul style="list-style-type: none"> Replace the wheel. Use the hoist correctly.
	Deterioration of wheel bearing	Check if rolling noise is heard when the wheel is rotating.	Expiry of the service life	Replace the wheel bearing.
	Deformation and abrasion of the rail	Check the abrasion and deformation of the rail.	Overload or expiry of the service life	<ul style="list-style-type: none"> Replace the rail. Use the hoist correctly.
	Abrasion of the Guide Roller	Check the abrasion.	Running on a curved rail or expiry of the service life	Check regularly.
	Abrasion of the Brake Disc	Check the abrasion of the Brake Disc.	Expiry of the service life	Replace Break Discs, Armatures, and Break Springs. (See P78.)


Chapter 4

Appendix


4-1 Exploded Structure	118
■ Main Unit	118
■ Reduction Gear Unit	119
■ Reduction Gear.....	119
■ Lifting Motor	120
■ Idle Sheave	120
■ End Fixing Part.....	120
■ Trolley Frame	121
■ Hook Block	121
4-2 Specification and Dimensions of Each Part	122
4-3 Wiring Diagram	126
■ Products with 17 or less first two digits of the serial number on the nameplate ...	126
■ Products with 18 or more first two digits of the serial number on the nameplate ...	127
4-4 Others	128
■ Rated Current for Motors	128
■ Noise Level of Wire Rope Hoist.....	128
■ Hook Dimensions	129
■ Lifting Load Table	129
4-5 Check Sheet	130

4-1 Exploded Structure


■ Main Unit

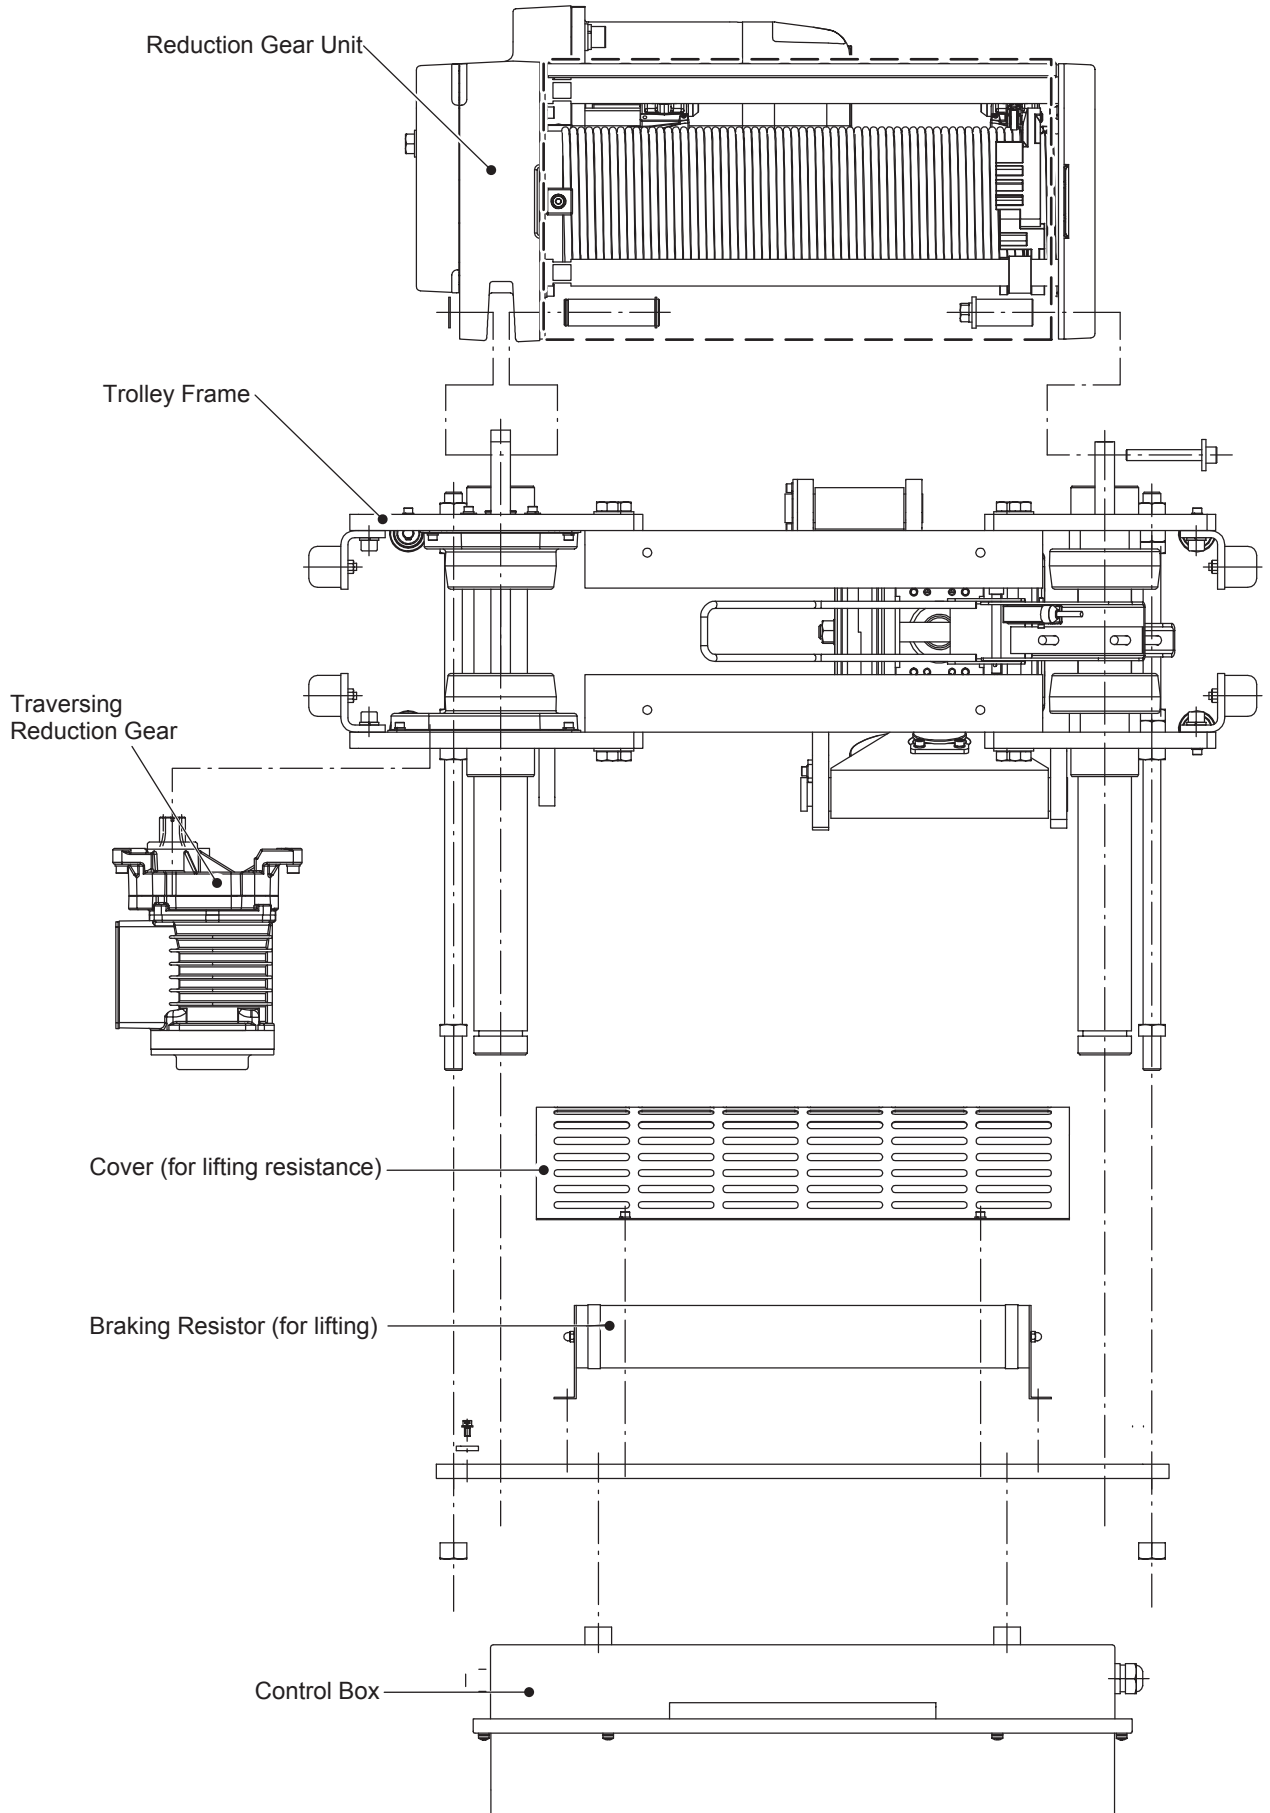

■ Reduction Gear Unit

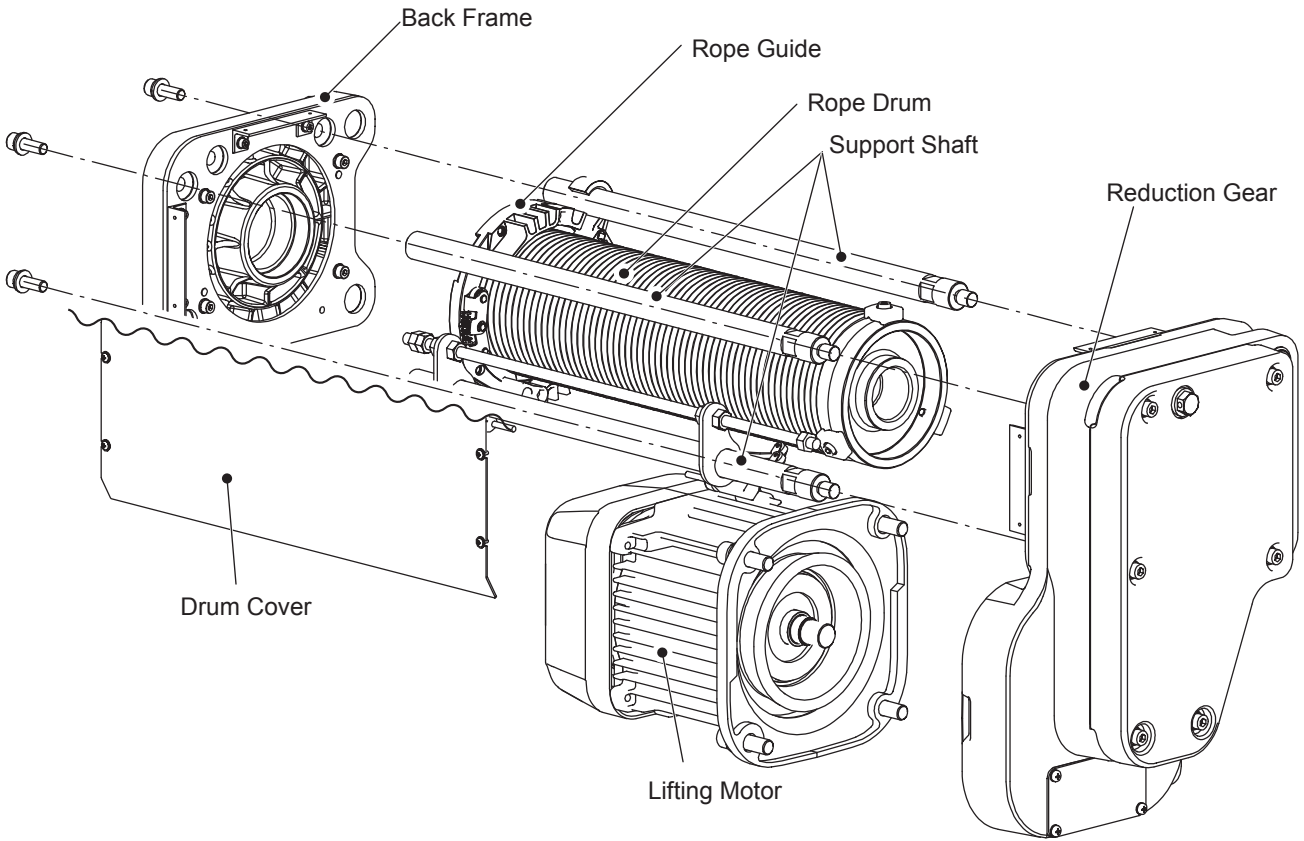


■ Reduction Gear

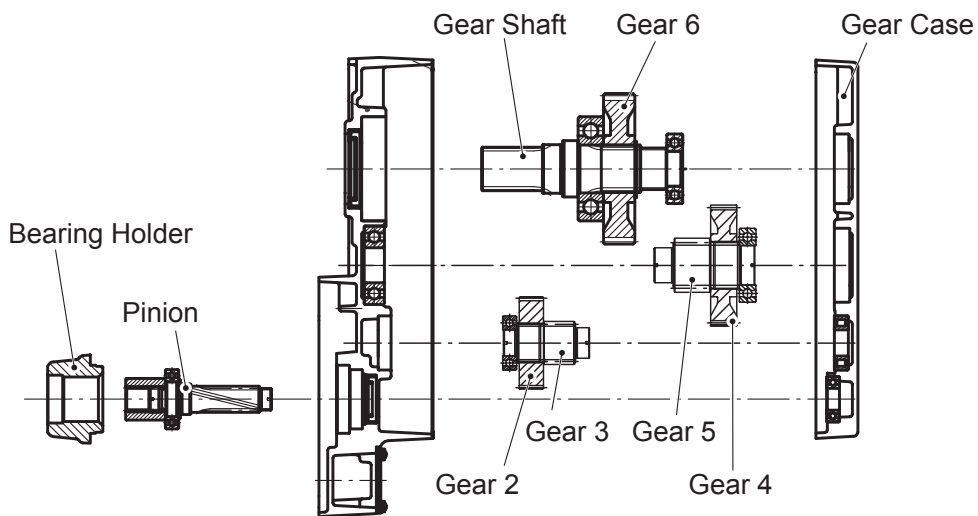


Exploded Structure (Continued)


■ Lifting Motor

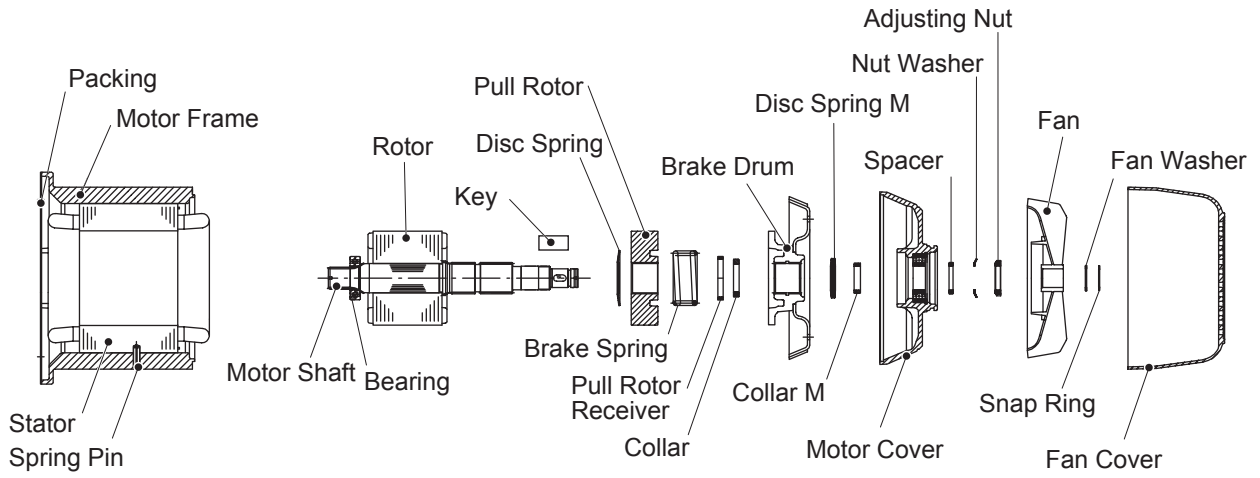


■ Idle Sheave

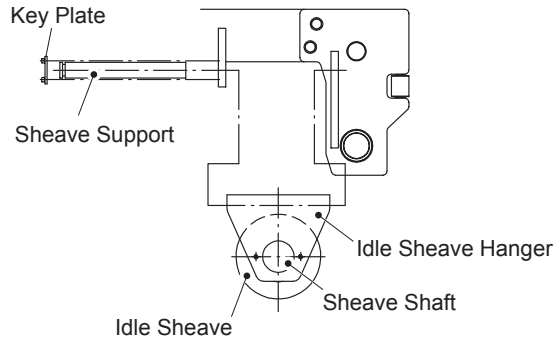


■ End Fixing Part

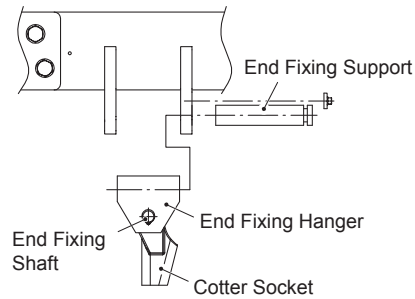

■ Trolley Frame

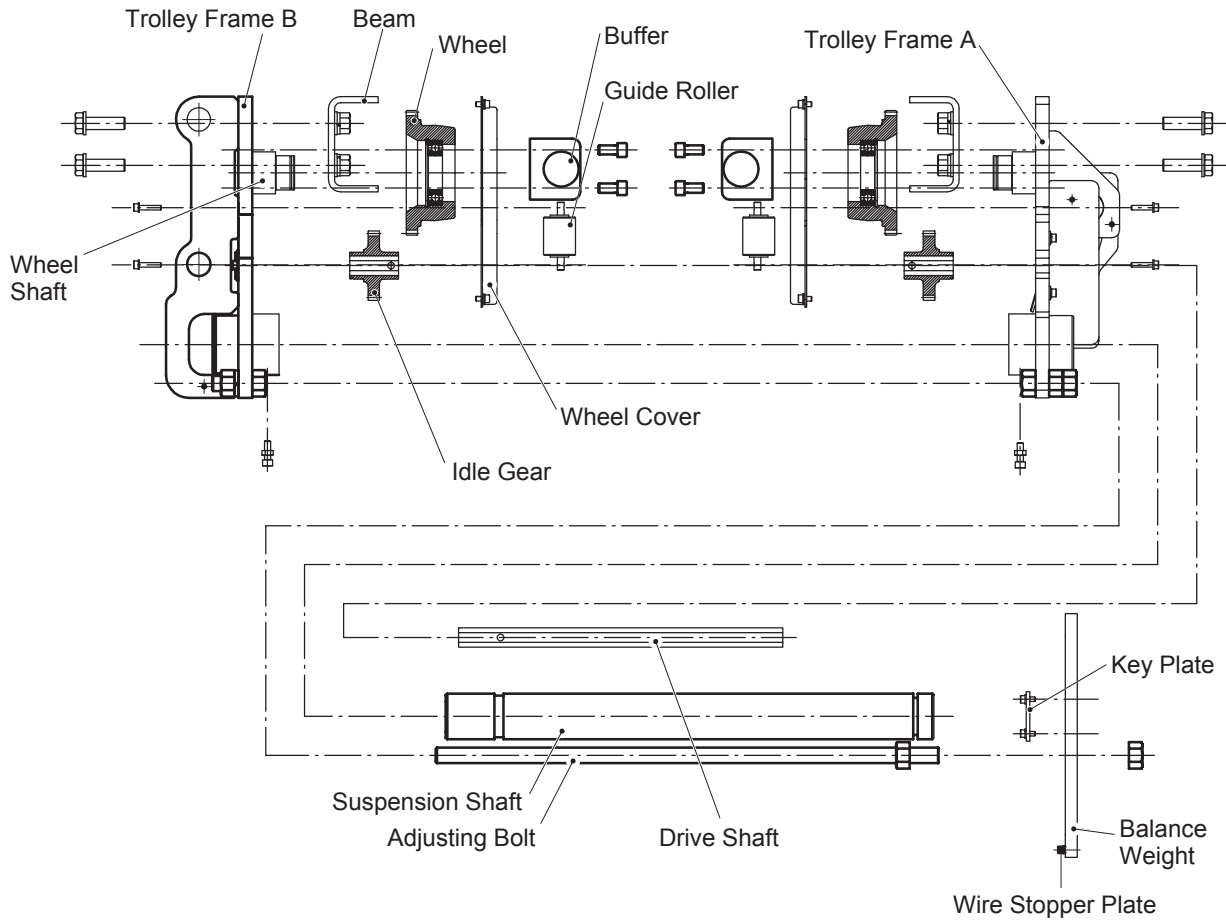


■ Hook Block

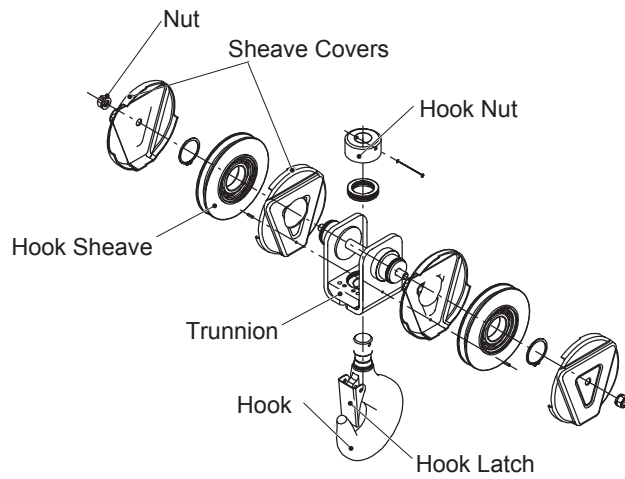

4-2 Specification and Dimensions of Each Part

■4-2-1 2.8t/3t/3.2t

Capacity	Code	Standard Lifting Range l (m)	Applicable Rail Width l (m)	Lifting			Traversing			Rope diameter (mm)	Number of falls	Mass (kg)	
				Output (kw)	Intermittent rating (%ED)	Speed (m/min)	Output (kw)	Intermittent rating (%ED)	Speed (m/min)				
2.8t/3t/3.2t	RYLA028ISIS06	6	125-175	3.5	40/20	5-0.8	0.25	20/10	20-3.3	ø8N	4/1	380	
	RYLA030ISIS06		176-350									385	
	RYLA032ISIS06		351-500									390	
	RYLA028IHIS06		125-175	5								8-1.3	380
	RYLA030IHIS06		176-350										385
	RYLA032IHIS06		351-500										390
	RYLA028ISIS09	9	125-175	3.5		5-0.8						415	
	RYLA030ISIS09		176-350									420	
	RYLA032ISIS09		351-500									425	
	RYLA028IHIS09		125-175	5		8-1.3						415	
	RYLA030IHIS09		176-350									420	
	RYLA032IHIS09		351-500									425	
	RYLA028ISIS12	12	125-175	3.5		5-0.8						450	
	RYLA030ISIS12		176-350									455	
	RYLA032ISIS12		351-500									460	
	RYLA028IHIS12		125-175	5		8-1.3						450	
	RYLA030IHIS12		176-350									455	
	RYLA032IHIS12		351-500									460	

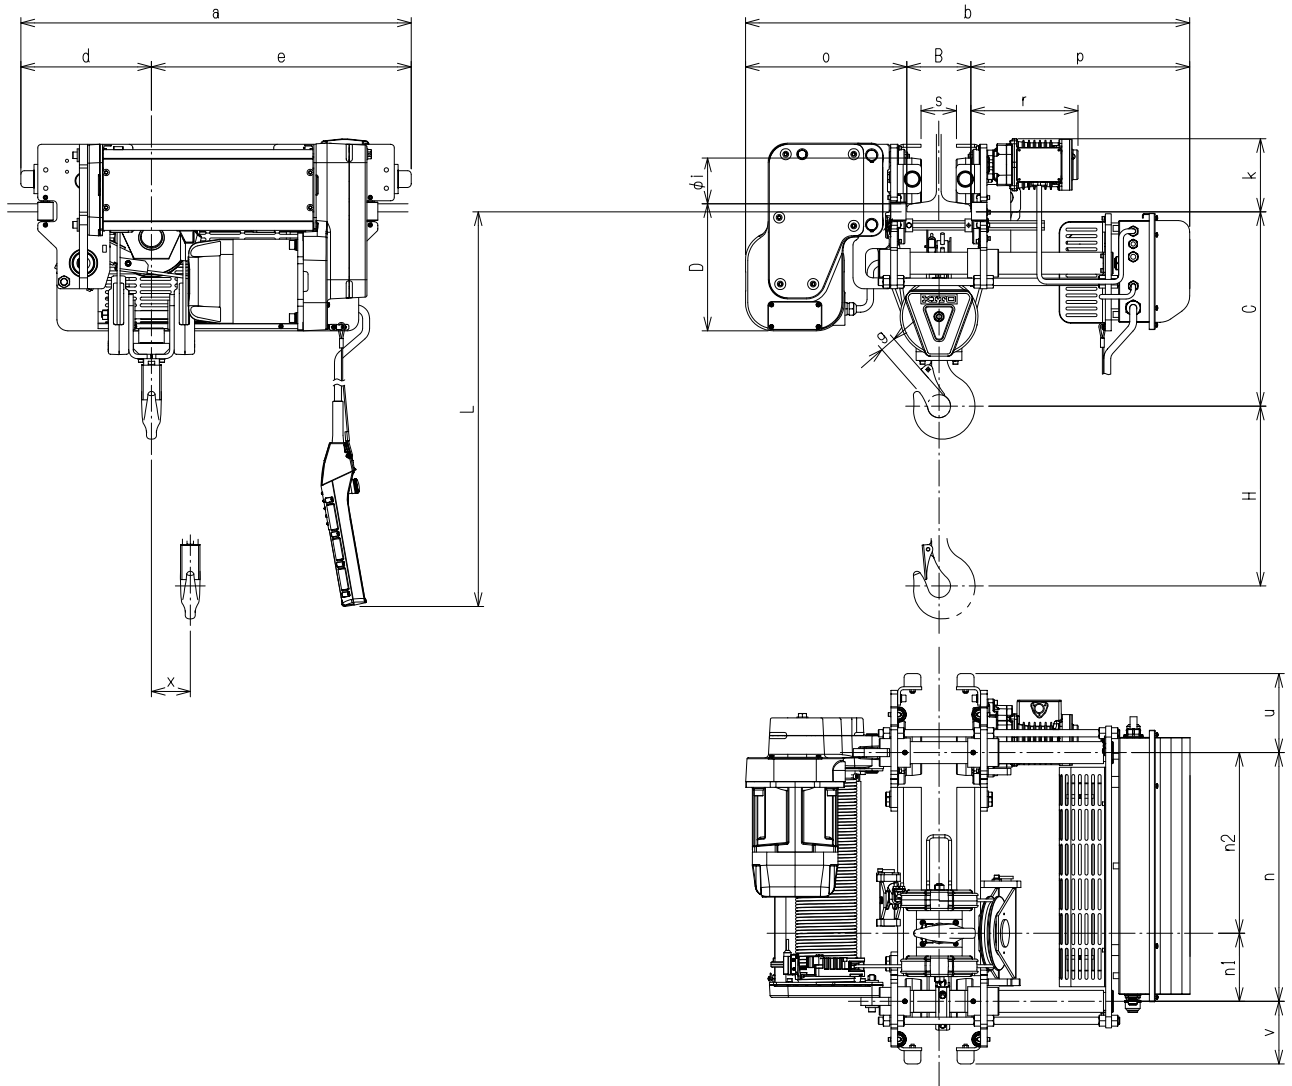

Specification and Dimensions of Each Part

4


2.8t/3t/3.2t

Capacity	Product code	Standard lift H (m)	Applicable Rail Width B (mm)	C	D	L	a	b	d	e	g	i	j	k	m	n	n ₁	n ₂	o	p	r	s	u	v	x
2.8t 3t 3.2t	Ryla028iSIS06	6	125-175	580	348	6300-t ₁	1067	1215	357	710	50	φ125	68+t ₁	178+t ₁	B-30	680	186	494	441	649-599	293	B-80	216	170	106
	Ryla030iSIS06		176-350																	773-599					
	Ryla032iSIS06		351-500																	748-599					
	Ryla028iHIS06																								
	Ryla030iHIS06																								
	Ryla032iHIS06																								
	Ryla028iSIS09	9	125-175	580	348	9300-t ₁	1279	1390	357	922	50	φ125	68+t ₁	178+t ₁	B-30	892	186	706	441	649-599	293	B-80	216	170	160
	Ryla030iSIS09		176-350																	773-599					
	Ryla032iSIS09		351-500																	748-599					
	Ryla028iHIS09																								
	Ryla030iHIS09																								
	Ryla032iHIS09																								
Ryla028iSIS12	12	125-175	580	348	12300-t ₁	1491	1540	357	1134	50	φ125	68+t ₁	178+t ₁	B-30	1104	186	918	441	649-599	293	B-80	216	170	213	
Ryla030iSIS12		176-350																	773-599						
Ryla032iSIS12		351-500																	748-599						
Ryla028iHIS12																									
Ryla030iHIS12																									
Ryla032iHIS12																									

Specification and Dimensions of Each Part (Continued)

■4-2-2 4.8t/5t

Capacity	Code	Standard Lifting Range l (m)	Applicable Rail Width l (m)	Lifting			Traversing			Rope diameter (mm)	Number of falls	Mass (kg)
				Output (kw)	Intermittent rating (%ED)	Speed (m/min)	Output (kw)	Intermittent rating (%ED)	Speed (m/min)			
4.8t/5t	RyLB048ISIS06	6	125-175	5	40/20	5-0.8	0.4	20/10	20-3.3	ø8H	4/1	400
	RyLB050ISIS06		176-350									405
			351-500									410
	RyLB048IHIS06		125-175	8		8-1.3						420
	RyLB050IHIS06		176-350									425
			351-500									430
	RyLB048ISIS09	9	125-175	5	5-0.8	435						
	RyLB050ISIS09		176-350			440						
			351-500			445						
	RyLB048IHIS06		125-175	8	8-1.3	455						
	RyLB050IHIS06		176-350			460						
			351-500			465						
	RyLB048ISIS12	12	125-175	5	5-0.8	470						
	RyLB050ISIS12		176-350			475						
			351-500			480						
	RyLB048IHIS12		125-175	8	8-1.3	490						
RyLB050IHIS12	176-350		495									
	351-500		500									

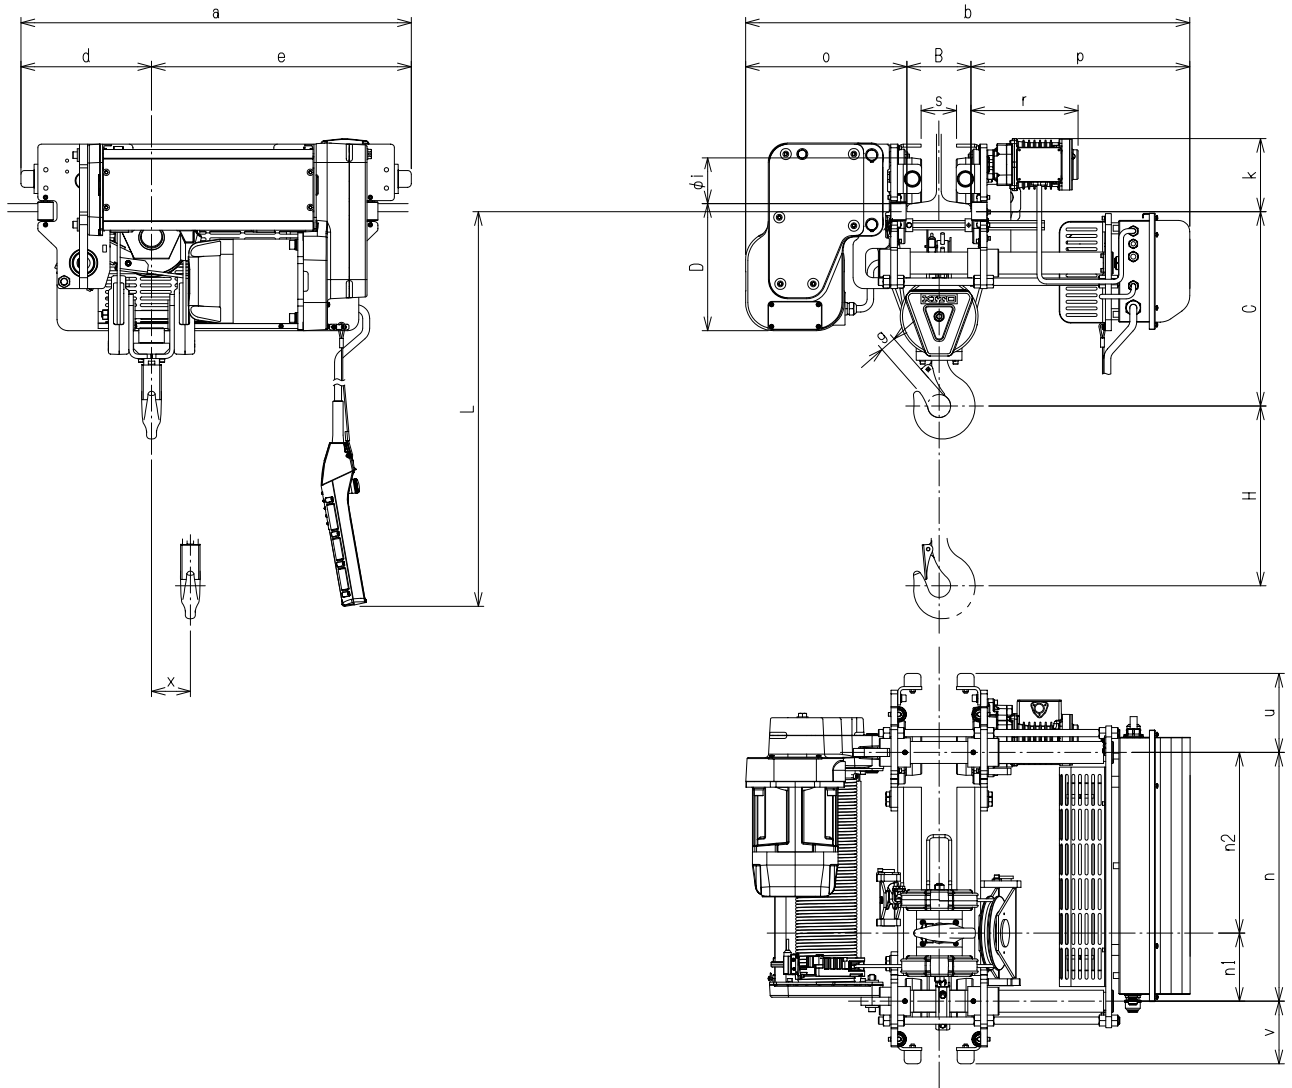

Specification and Dimensions of Each Part

4


4.8t/5t

Capacity	Product code	Standard lift H (m)	Applicable Rail Width B (mm)	C	D	L	a	b	d	e	g	i	j	k	m	n	n ₁	n ₂	o	p	r	s	u	v	x
4.8t 5t	RYLB048ISIS06 RYLB048IHIS06 RYLB050ISIS06 RYLB050IHIS06	6	125-175	590	348	6300-t ₁	1067	1215	357	710	56	φ125	68+t ₁	186+t ₁	B-30	680	186	494	441	649-599	342	B-80	216	170	106
			176-350																	773-599					
			351-500																	748-599					
	RYLB048ISIS09 RYLB048IHIS09 RYLB050ISIS09 RYLB050IHIS09	9	125-175	590	348	9300-t ₁	1279	1390	357	922	56	φ125	68+t ₁	186+t ₁	B-30	892	186	706	441	649-599	342	B-80	216	170	160
			176-350																	773-599					
			351-500																	748-599					
	RYLB048ISIS12 RYLB048IHIS12 RYLB050ISIS12 RYLB050IHIS12	12	125-175	590	348	12300-t ₁	1491	1540	357	1134	56	φ125	68+t ₁	186+t ₁	B-30	1104	186	918	441	649-599	342	B-80	216	170	213
			176-350																	773-599					
			351-500																	748-599					

4-3 Wiring Diagram


■ Products with 17 or less first two digits of the serial number on the nameplate

Wiring Diagram

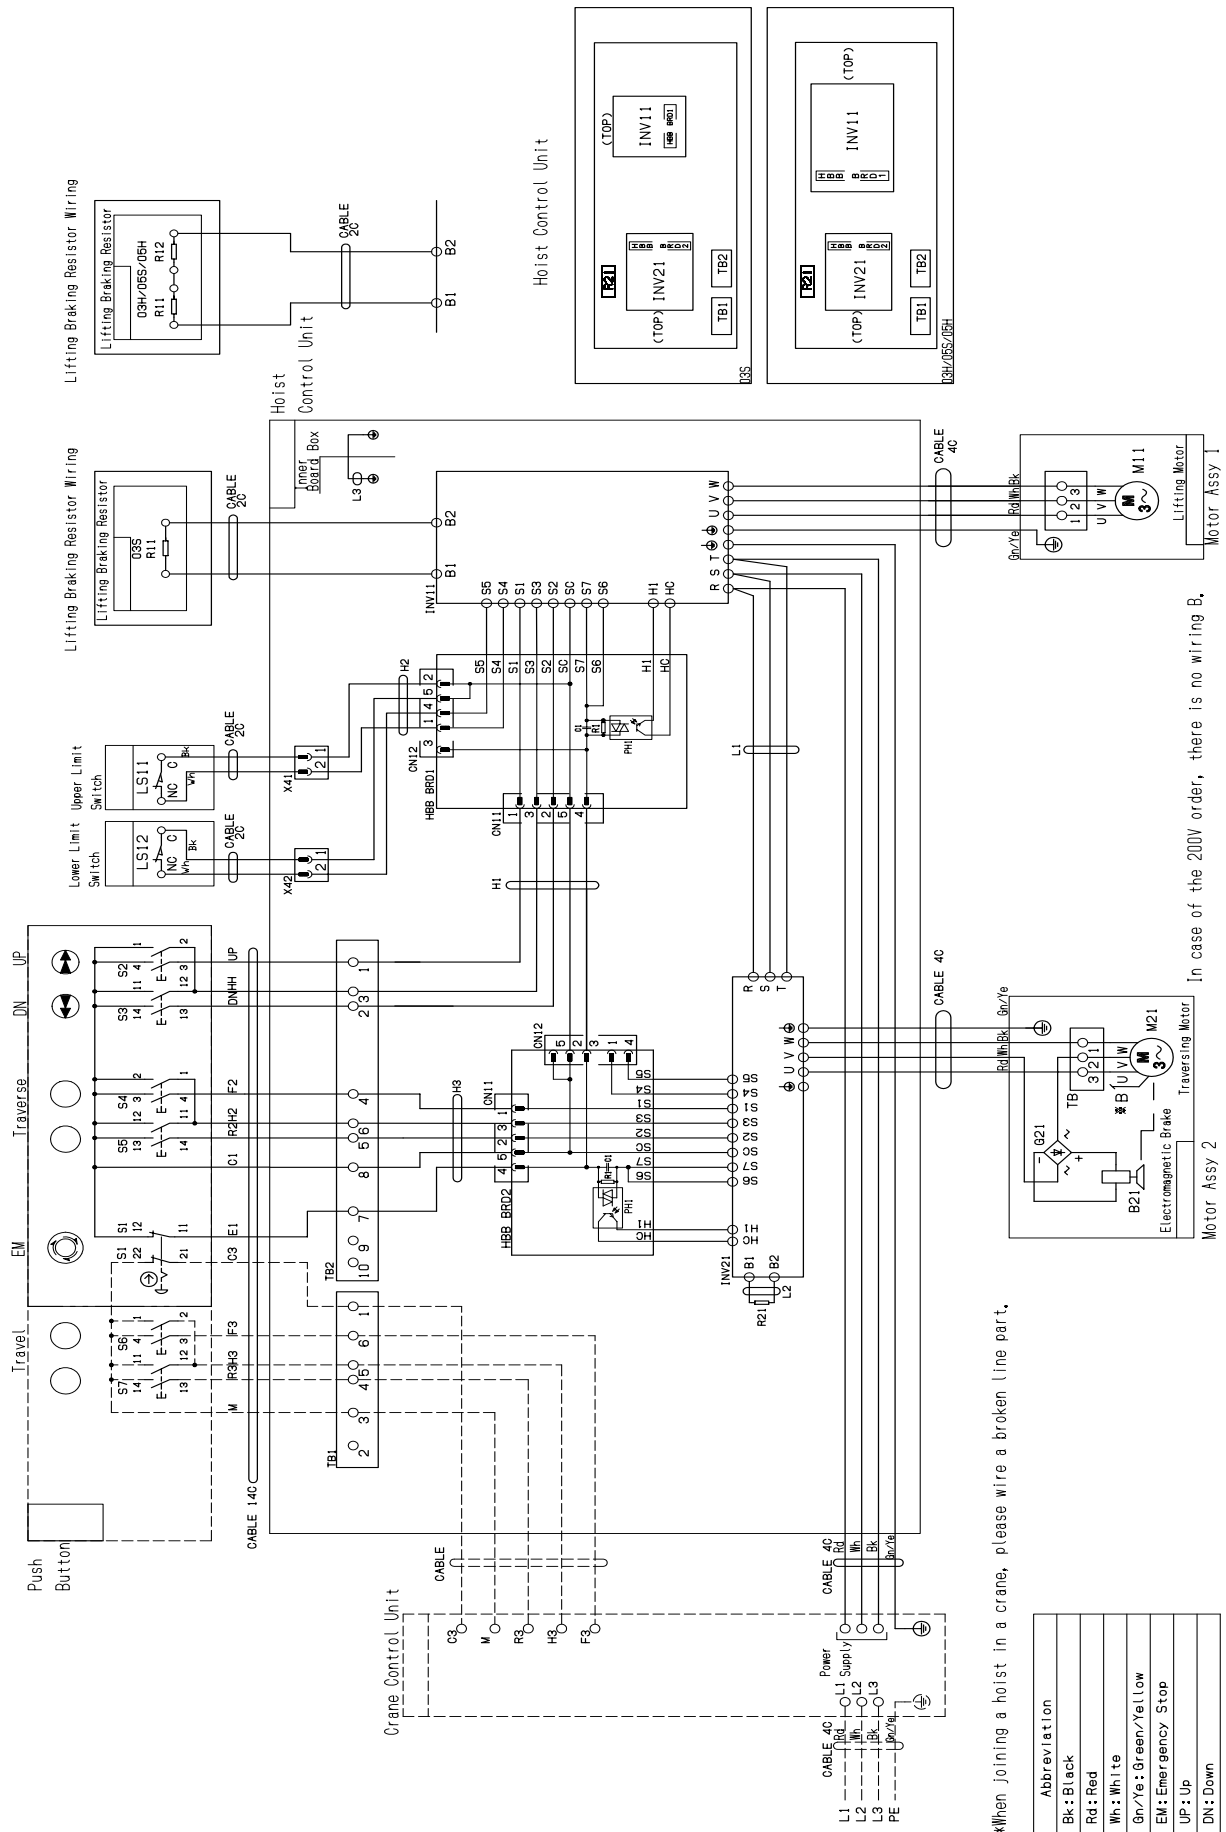

In case of the 200V order, there is no wiring B.

■ Products with 18 or more first two digits of the serial number on the nameplate

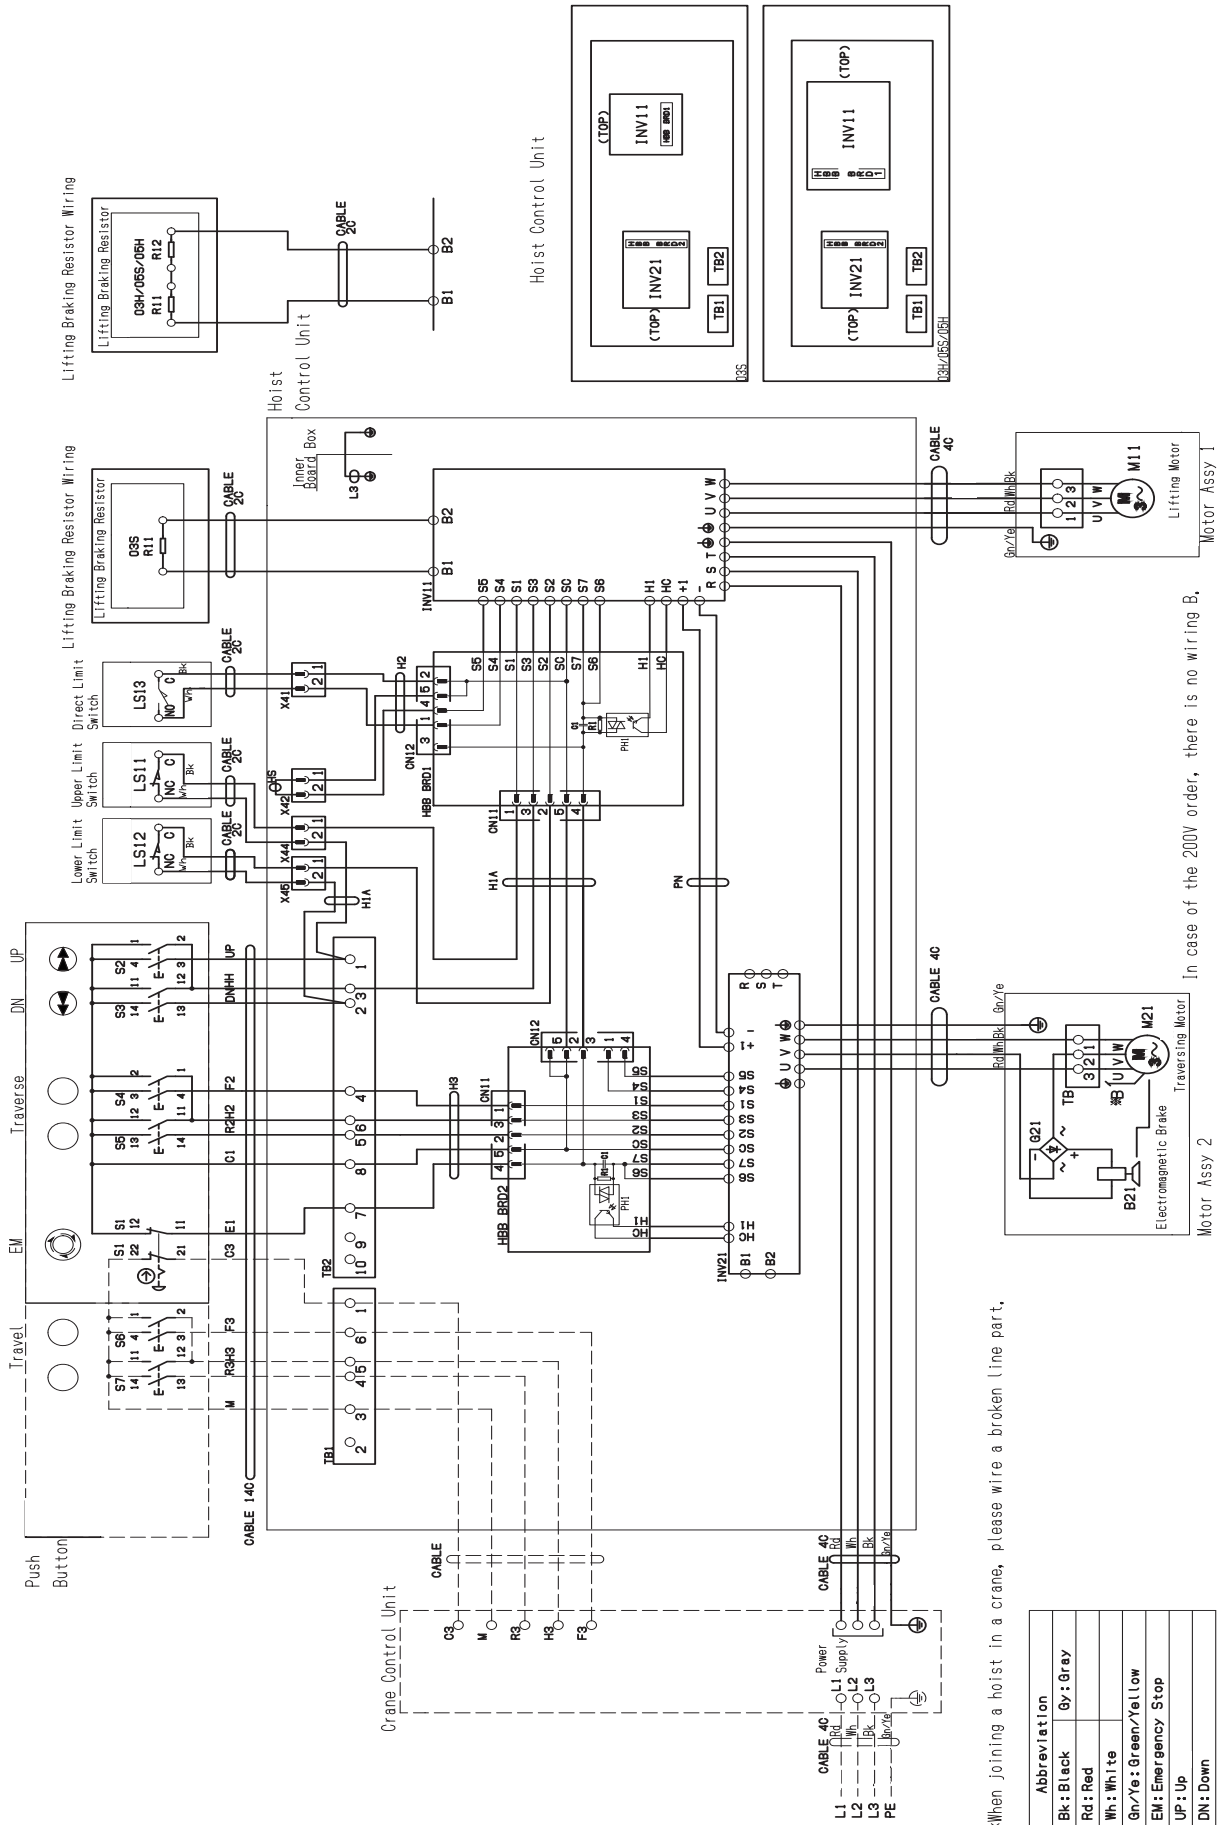

*When joining a hoist in a crane, please wire a broken line part.

Abbreviation	
Bk	: Black
Rd	: Red
Wh	: White
Gr/Ye	: Green/Yellow
EM	: Emergency Stop
UP	: Up
DN	: Down

In case of the 200V order, there is no wiring B.

4-4 Others

■ Rated Current for Motors

Product code	Capacity	200V class			400V class		
		220V/60Hz 230V/60Hz			380V/50Hz 380V/60Hz 415V/50Hz 440V/60Hz 460V/60Hz		
		Lifting Motor (A)	Traversing motor (A)	Total current (A)	Lifting Motor (A)	Traversing motor (A)	Total current (A)
RYLA028ISIS06/09/12	2.8t/3t/3.2t	18	1.6	19.6	9.5	0.8	10.3
RYLA030ISIS06/09/12							
RYLA032ISIS06/09/12		29.5	1.6	31.1	15	0.8	15.8
RYLA028IHIS06/09/12							
RYLA030IHIS06/09/12							
RYLA032IHIS06/09/12							
RYLB048ISIS06/09/12	4.8t/5t	29.5	2	31.5	15	1	16
RYLB050ISIS06/09/12							
RYLB048IHIS06/09/12		46	2	48	24	1	25
RYLB050IHIS06/09/12							

■ Noise Level of Wire Rope Hoist

The sound noise levels of the new hoists at the shipment are as shown below.


The noise levels are measured at 1 m away from the hoists. The values corresponding to "2 m" and "4 m" from the hoists are the estimated values. In general, the noise level is said to be reduced by 3 dB(A) if the distance from the hoist is doubled.

(Units: dBA)

Code	Capacity	When lifting a rated load		
		Distance from the hoist		
		1m	2m	4m
RYLA028ISIS06/09/12	2.8t	82	79	76
RYLA028IHIS06/09/12		81	78	75
RYLA030ISIS06/09/12	3t/3.2t	82	79	76
RYLA030IHIS06/09/12		81	78	75
RYLB048ISIS06/09/12	4.8t	81.5	78.5	75.5
RYLB048IHIS06/09/12		80	77	74
RYLB050ISIS06/09/12	5 t	81.5	78.5	75.5
RYLB050IHIS06/09/12		80	77	74

Note) The values in the table above are measured or estimated values, and are not guaranteed.

■ Hook Dimensions

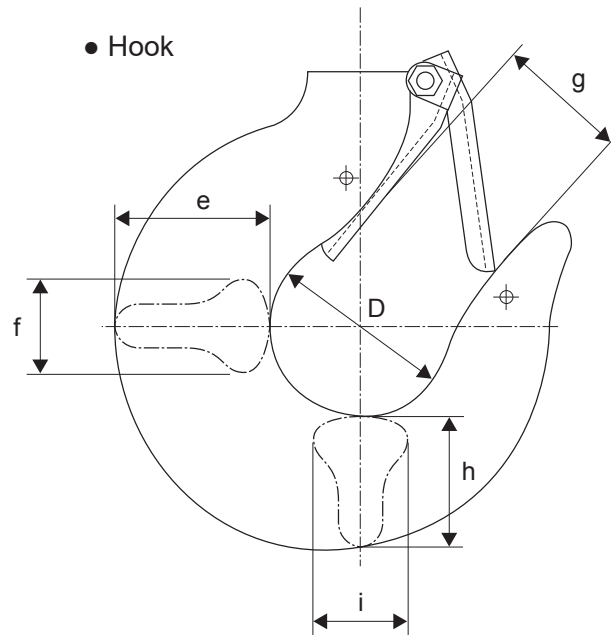

Code	Capacity	Dimension (mm)					
		D	e	f	g	h	i
RYLA028ISIS06/09/12	2.8t	63	67	53	43	58	45
RYLA028IHIS06/09/12		63	67	53	43	58	45
RYLA030ISIS06/09/12	3t/3.2t	63	67	53	43	58	45
RYLA030IHIS06/09/12		63	67	53	43	58	45
RYLB048ISIS06/09/12	4.8t	71	80	63	45	67	53
RYLB048IHIS06/09/12		71	80	63	45	67	53
RYLB050ISIS06/09/12	5t	71	80	63	45	67	53
RYLB050IHIS06/09/12		71	80	63	45	67	53

■ Lifting Load Table

The lifting load must be indicated in the crane installation notification or installation report. Refer to the following table.

Capacity (t)	2.8	3	3.2	4.8	5
Lifting Load (t)	2.83	3.03	3.23	4.835	5.035

4-5 Check Sheet

Code	Capacity	Lot No.	Your CTRL No.	Installation Date	Location	Inspection Certification valid thru

Keep the check record for a certain period of time.

4-5-1 Daily Inspection Check Sheet (1/2)

■ Check Result: = Good, △ To be replaced (adjusted) during next inspection, × = Bad, Needs replacement (adjustment)

Category	Item	Check method	Criteria	Inspection date/result					
				/	/	/	/	/	/
Appearance	Indication of nameplates and labels	Check visually	No peel off. Indication can be seen clearly.						
	Deformation and damage of Main Unit and each part	Check visually	No apparent deformation or corrosion						
	Bolts, nuts and split pins	Check visually	The bolts, nuts, and split pins that can be seen from exterior must be free from loosening and coming off.						
	Traverse Rail	Check visually on the floor	No apparent deformation, abrasion, or damage No other structural abnormality						
Wire Rope	Type	Check visually	Same as the indication on the nameplate						
	Breakage of wire	Check visually	No apparent breakage						
	Abrasion	Check visually	No apparent abrasion						
	Rust, Corrosion	Check visually	No apparent rust and corrosion						
	Kink and loss of Shape	Check visually	No kink or loss of shape						
	Grease	Check visually	To be greased adequately						
	Rope End Fixing Part	Check visually	No wire breakage or rust. No coming off of wire clip.						
Hook Block	Opening of the Hook	Check visually	No apparent opening of the Hook						
	Abrasion and corrosion of the Hook	Check visually	No apparent abrasion or corrosion						
	Deformation, Flaw, Corrosion (Whole unit)	Check visually	<ul style="list-style-type: none"> No apparent deformation, flaw and corrosion No attachment of foreign matters such as spatter No bending or twisting 						
	Inclination and balance	Check visually	To have no inclination, and to be balanced						
	Hook Latch	Check visually and by operation	<ul style="list-style-type: none"> To have no apparent deformation, and to open/close smoothly The Hook Latch is mounted securely inside the Hook opening. 						
	Hook movement (Rotation)	Check visually and by operation	To rotate smoothly by 360 degrees						
	Hook sheave	Check visually and by operation	<ul style="list-style-type: none"> To move (rotate) smoothly The groove must be free from deformation, damage, and apparent abrasion. 						
	Hook nut	Check visually and by operation	<ul style="list-style-type: none"> No loosened bolt No coming off of the split pin 						
Hook sheave cover	Check visually	No deformation, damage, or loosened bolt							
Push Button Switch	Switch body	Check visually	<ul style="list-style-type: none"> No deformation, damage and no loosened screw To have clear indication No discoloration 						

⚠ CAUTION



Mandatory

- When any abnormality is observed during inspection, stop the use of the hoist, indicate "FAILURE", and contact the maintenance engineer or KITO for repair.

NOTE

Decide the check items appropriate to the environment and operating conditions of the customer.

■ Daily Inspection Check Sheet (2/2)

■ Check Result: ○ = Good, △ To be replaced (adjusted) during next inspection, × = Bad, Needs replacement (adjustment)

Category	Item	Check method	Criteria	Inspection date/result					
				/	/	/	/	/	/
Function and Performance	Operational Check	No-load operation	<ul style="list-style-type: none"> • The Wire Rope can be wound smoothly. • Wire rope must be properly wound on the rope drum. • Rope guide must operate smoothly. • Idle sheave must rotate smoothly. • When the operation is stopped, the motor stops immediately. • When the Emergency Stop Button is pressed, all hoist motions stop. • When operating other push buttons while the Emergency Stop Button is pressed, the hoist does not start operation. • After canceling the Emergency Stop Button, the hoist operates normally. • To be operated in the same direction as the arrow indicated on the button. (Not to be operated in the reverse direction.) • Operation buttons must move smoothly. • Lifting and lowering operations must be smooth. • To traverse without snaking motion. 						
	Brake (before operation)	No-load operation	<ul style="list-style-type: none"> • Brake must operate reliably to stop the hook block immediately. 						
	Upper/Lower Limit Stop Device	No-load operation	<ul style="list-style-type: none"> • Motor must stop automatically when operating the hoist to the preset upper limit and lower limit. 						
	Abnormal Sound	No-load operation	<ul style="list-style-type: none"> • No abnormal sounds and vibrations 						

Executed by	Inspector						
Checked by	Maintenance Engineer						

Check Sheet (Continued)

Code	Capacity	Lot No.	Your CTRL No.	Installation Date	Location	Inspection Certification valid thru

Keep the check record for a certain period of time.

■ 4-5-2 Frequent Inspection Check Sheet (1/2)

■ Check Result: ○ = Good, △ To be replaced (adjusted) during next inspection, × = Bad, Needs replacement (adjustment)

Category	Item	Check method	Criteria	Inspection date/result					
				/	/	/	/	/	/
Preceding inspection	Daily inspection	-	When performing the frequent inspection, carry out the daily inspection at the same time.						
Appearance	Traverse Rail	Check visually	<ul style="list-style-type: none"> No bending of traverse surface No deficiencies that affect traversing motion No oil stain 						
	Stopper	Check visually	<ul style="list-style-type: none"> No loosened bolt No apparent deformation or damage 						
Wire Rope	Breakage of wire	Check by measurement	<ul style="list-style-type: none"> The ratio of broken wires in a single strand must be less than 10%. The number of wires with valley breaks in a single strand must be less than two. 						
	Abrasion	Check by measurement	The diameter d must not be reduced by 7% or more						
	Damage to the shape	Check visually	No apparent damage to the shape						
Hook Block	Opening of the Hook	Check by measurement	<ul style="list-style-type: none"> The opening of the Hook must not exceed the limit value. The abrasion of the dangerous section must not exceed 10%. The twist angle of the tip of the Hook must not exceed 10 degrees. The neck must not have plastic deformation. 						
	Abrasion and Corrosion of the Hook	Check by measurement	<ul style="list-style-type: none"> No apparent abrasion and corrosion Each dimension must not exceed the limit shown in the table above. 						
	Hook Sheave	Check by measurement	<ul style="list-style-type: none"> The abrasion (in diameter) of the groove must not exceed 0.15 d. The abrasion (in thickness B) must not exceed 0.1 d. No deficiencies that damage the wire rope No cracks 						
	Suspension Plate	Check visually	<ul style="list-style-type: none"> No deformation, damage, or loosened nut No apparent abrasion of holes 						
	Trunnion	Check visually	No apparent abrasion or deformation						
Push Button Switch	Push Button Switch Cord	Check visually	<ul style="list-style-type: none"> To be attached securely Protection Wire must prevent external force from being applied on the cord (cable) when Push Button is pulled. To have no damage 						
Main Unit: Lifting Unit	Body, Back Frame, others	Check visually	<ul style="list-style-type: none"> No apparent deformation, abrasion, or damage No abnormality at welded parts No loosening of fasteners such as bolts 						
	Rope Drum	Check visually and by measurement	<ul style="list-style-type: none"> No apparent deformation, abrasion, or cracking The abrasion in the groove must not exceed 20% of the wall thickness. 						
	Rope Clamp	Check visually	No loosening or coming off						
	Rope Guide	Check visually	<ul style="list-style-type: none"> The guide must be free from deformation, damage, and apparent abrasion. To be clean and free from adhering oil No coming off of the coil spring Little deformation, damage, and abrasion at the part which contacts with the limit switch 						
	End Fixing Part	Check visually	<ul style="list-style-type: none"> No apparent deformation, abrasion, or damage No loosened nut The wire clip must be fixed at a distance of four times the wire rope diameter from the lower end of the socket. 						
	Idle Sheave	Check visually and by measurement	<ul style="list-style-type: none"> No loosening or coming off of the bolts To move smoothly No deformation, damage, or apparent abrasion The abrasion (in diameter) of the groove must not exceed 0.15 d. The abrasion (in thickness B) must not exceed 0.1 d. The abrasion of the groove (A) must not exceed 3 mm. No deficiencies that damage the wire rope No cracks 						
	Upper Limit Emergency Stop Device	Check visually	<ul style="list-style-type: none"> The lever must be free from large deformation, damage, and abrasion. To move smoothly To be clean No loosened screw or bolt No coming off of split pins 						

⚠ CAUTION



- When any abnormality is observed during inspection, stop the use of the hoist, indicate "FAILURE", and contact the maintenance engineer or KITO for repair.

Mandatory

NOTE

Decide the check items appropriate to the environment and operating conditions of the customer.

■ Frequent Inspection Check Sheet (2/2)

■ Check Result: ○ = Good, △ To be replaced (adjusted) during next inspection, × = Bad, Needs replacement (adjustment)

Category	Item	Check method	Criteria	Inspection date/result					
				/	/	/	/	/	/
Lifting Reduction Gear	Gear Case, Body	Check visually	<ul style="list-style-type: none"> • No apparent deformation, damage, or cracking • No leakage of grease 						
Main Unit: Traverse Unit	Wheel	Check visually	<ul style="list-style-type: none"> • No apparent deformation, damage, or abrasion • No oil stain on the running surface • The teeth must be lubricated with sufficient grease. 						
	Guide Roller	Check visually	<ul style="list-style-type: none"> • No apparent deformation, damage, or abrasion • The Guide Roller must rotate smoothly. • No loosened socket bolt 						
	Wheel Cover	Check visually	<ul style="list-style-type: none"> • No apparent deformation or damage • No loosened bolt 						
	Buffer Fixing Bracket	Check visually	<ul style="list-style-type: none"> • No apparent bending or damage • No abnormality at welded parts 						
Control Box	Appearance	Check visually	<ul style="list-style-type: none"> • To be attached securely to the Main Unit • No apparent deformation or damage • The cables must be connected securely without slack. 						
	Internal Wiring	Check visually	<ul style="list-style-type: none"> • The electrical parts must be fixed securely. • The lead wire must not be slack. • No wire breakage, burning, or welding. • The connector must be securely inserted. 						
	Error Code Display	Check visually	No error must be shown on the display of the inverter.						
	Contamination and attachment of foreign matters	Check visually	No contamination with water droplets or foreign matters						
Power Supply and Wiring	Power Cable	Check visually	<ul style="list-style-type: none"> • To have enough length • To have no damage • To be connected securely 						
	External Relay Cable	Check visually	<ul style="list-style-type: none"> • To have enough length • No damage • To be connected securely 						
Electric Characteristics	Source Voltage	Check by measurement	The rated voltage must be supplied.						
Function and Performance	Abnormal noise	No-load operation	<ul style="list-style-type: none"> • No irregular rotating sound • No howling sound of the Motor or scraping sound of the Brake • No abnormal sound from the place near the Rope Guide • No abnormal sound from the inside of the Reduction Gear 						

Executed by	Inspector						
Checked by	Maintenance Engineer						

Check Sheet (Continued)

Code	Capacity	Lot No.	Your CTRL No.	Installation Date	Location	Inspection Certification valid thru

Keep the check record for a certain period of time.

■ 4-5-3 Periodic Inspection Check Sheet (1/2)

■ Check Result: ○ = Good, △ To be replaced (adjusted) during next inspection, × = Bad, Needs replacement (adjustment)

Category	Item	Check method	Criteria	Inspection date/result					
				/	/	/	/	/	/
Preceding inspection	Daily inspection	—	When performing the periodic inspection, carry out the daily inspection at the same time.						
	Frequent inspection	—	When performing the periodic inspection, carry out the frequent inspection at the same time.						
Appearance	Traverse Rail	Check by measurement	<ul style="list-style-type: none"> The abrasion in width of the rail must be 5% or less of the standard value. The abrasion in thickness of the rail must be 10% or less of the standard value. 						
Main Unit: Lifting Unit	Main Unit, etc.	Check by measurement	The difference between vertical and horizontal dimensions of the holes for connection with the Traverse Unit must not exceed 0.5 mm.						
	Upper Limit Emergency Stop Device	Check visually and by operation	<ul style="list-style-type: none"> To be fixed securely without looseness at mounting part The Upper Limit Emergency Stop Device must operate normally (when checked under no load). 						
	Upper/Lower Limit Stop Device	Check visually and by operation	The Upper/Lower Limit Stop Device must operate normally (when checked operated under no load).						
Lifting Reduction Gear	Gear Case, Body	Check visually	<ul style="list-style-type: none"> No abrasion, deformation, or damage on the inner surface No displacement (coming off of positioning pin) 						
	Bearing	Check by visual inspection and using the inverter display	<ul style="list-style-type: none"> No apparent abrasion, flaw, or damage To rotate smoothly The operating hours must not exceed the guideline for bearing replacement (1600 H). 						
	Gear Shaft, Gear 2, Gear 3, Gear 4, Gear 6	Check by visual inspection and using the inverter display	<ul style="list-style-type: none"> The total operating hours must not exceed the guideline for replacement (1600 H). No abnormal sound and vibration from the Reduction Gear during operation 						
	Oil Seal and Packing	Check visually	<ul style="list-style-type: none"> No deformation or cracking No leakage of oil 						
Main Unit: Traverse Unit	Trolley Frame, Beam, Suspension Shaft, and Adjusting Bolt	Check visually and by measurement	<ul style="list-style-type: none"> No apparent deformation, abrasion, or damage No abnormality at welded parts No loosening of fasteners such as bolts 						
	Wheel	Check visually and by measurement	<ul style="list-style-type: none"> The Dimension D must not be reduced to below the limit value due to abrasion of the running surface. The difference (ellipticity) in the running surface diameter must not exceed 1 mm. 						
	Guide Roller	Check visually and by measurement	The abrasion in the outside diameter must not exceed 1 mm (when compared with unworn parts).						

⚠ CAUTION



Mandatory

- When any abnormality is observed during inspection, stop the use of the hoist, indicate "FAILURE", and contact the maintenance engineer or KITO for repair.
- Failure to comply with this instruction may lead to unexpected serious accidents.

NOTE

Decide the check items appropriate to the environment and operating conditions of the customer.

■ Periodic Inspection Check Sheet (2/2)

■ Check Result: ○ = Good, △ To be replaced (adjusted) during next inspection, × = Bad, Needs replacement (adjustment)

Category	Item	Check method	Criteria	Inspection date/result					
				/	/	/	/	/	/
Traversing Reduction Gear	Gear Case and Brake Bracket	Check visually	<ul style="list-style-type: none"> • No abrasion, deformation, or damage on the inner surface • No displacement 						
	Bearing	Check by visual inspection and using the inverter display.	<ul style="list-style-type: none"> • No apparent abrasion, flaw, or damage • To rotate smoothly • The operating hours must not exceed the guideline for bearing replacement. 						
	Gear 2, Pinion, and Motor Shaft	Check by visual inspection and using the inverter display.	<ul style="list-style-type: none"> • No apparent abrasion, deformation, or damage • The total operating hours must not exceed the guideline for replacement. • The abrasion of the tooth must not exceed 10% of the tooth thickness. 						
	Packing	Check visually	<ul style="list-style-type: none"> • No leakage of oil 						
Grease	Grease Leakage	Check visually	<ul style="list-style-type: none"> • To have no leakage of grease from Packings, Oil seals or Oil plugs 						
	Electric Characteristics	Insulation Resistance	Check by measurement	<ul style="list-style-type: none"> • Insulation resistance must be 5 MΩ or higher. 					
Grounding Resistance		Check by measurement	<ul style="list-style-type: none"> • To be grounded (with grounding resistance of 100 Ω or lower) 						
Function and Performance	Operational Check	Perform operation under the rated load	<ul style="list-style-type: none"> • Perform inspection of the items on function/performance of daily inspection with no load, and then perform the inspection of the same items with the rated load. 						
	Brake	Perform operation under the rated load Check visually and by measurement	<ul style="list-style-type: none"> • The stopping distance of lifting/lowering must be within 1% of the lifting distance per minute. • The stopping distance of traversing must be within 10% of the traversing distance per minute. 						

Executed by	Inspector						
Checked by	Maintenance Engineer						

WARRANTY

Thank you for purchasing a KITO product. At KITO, we manufacture every component under thoroughly strict quality control. However, if there is any defect with the product, we will guarantee repairs based on this warranty as follows.

1. Warranty Coverage

During the warranty period, if there is a failure or damage in the product, despite it being used as instructed by the warnings and cautions displayed on the product, we will repair free of charge based on the descriptions in this warranty. This warranty is effective for the following product within Southeast Asia (Hong Kong, Thailand, Indonesia, Vietnam, Taiwan, the Philippines, Singapore, and Malaysia).

Guaranteed product: RY Series Wire Rope Hoist

The warranty coverage by this warranty is limited to free product repairs. Other losses caused by the product failure or damage (production, lost working time, etc) will not be guaranteed. In case of such situations, we recommend that you prepare alternative products beforehand.

2. Warranty Period

The warranty period lasts till the earlier time of either 1 year after delivery or 1 and a half years after factory shipment.

3. Items out of Warranty

In the following situations, the repair may be charged even during the warranty period.

- (1) When a load heavier than the specified safe working load is used
- (2) When the product is used in the environment beyond product specifications
(where the product can be affected by external factors such as smoke, chemicals, and chloride damage, or it is used under special condition)
- (3) When the product is used beyond the limits of load hour rate, start-up frequency, total operation hours/times, or time rating.
- (4) When inspections and maintenance after use are not performed as instructed in the owner's manual
- (5) When the damage is caused by wrong inspections or maintenance
- (6) When the product or accessories are remodeled
- (7) When the genuine parts or specified oil is not used
- (8) When the product is used against the instructions in the owner's manual, etc
- (9) When the damage is caused by natural disasters such as earthquake, typhoon, flood, as well as accidents or fires
- (10) When the defect is caused by wear or deterioration with age
 - * Note that the following parts are considered as wearing parts and any failure and damage caused by these parts is not included in the warranty.
(Wire Rope, Hook, and grease)

4. Repair Service

When requesting the repair service, make sure that you have the warranty and contact the dealer.

A series of horizontal dashed lines for writing.



KITO

Global Website: kito.com